

# 50 MHz Dual Channel Oscilloscope PM3215/PM3215U

Service Manual

9499 445 02511

850117/1/06

*altro manuale 4822 872 05024*

SCAN BY TOMAS MONTERO  
AUDIOSATPRO S.L.

# S&I

Scientific & Industrial Equipment Division



Scientific &  
Industrial Equipment

# PHILIPS

# 50 MHz Dual Channel Oscilloscope PM3215/PM3215U

## Service Manual

9499 445 02511

850117/1/06



MAT 1525



# PHILIPS

## IMPORTANT

In correspondence concerning this instrument, please quote the type number and serial number as given on the type plate.

**NOTE:** *The design of this instrument is subject to continuous development and improvement. Consequently, this instrument may incorporate minor changes in detail from the information contained in this manual.*

# CONTENTS

Page

<b>1. INTRODUCTION</b>	<b>1-1</b>
1.1. General . . . . .	1-1
1.2. Characteristics . . . . .	1-2
1.2.1. C.R.T. . . . .	1-3
1.2.2. Vertical amplifier . . . . .	1-3
1.2.3. Time base . . . . .	1-4
1.2.4. Triggering . . . . .	1-4
1.2.5. X Deflection . . . . .	1-5
1.2.6. Calibration generator . . . . .	1-5
1.2.7. Power supply . . . . .	1-5
1.2.8. Z-mod input . . . . .	1-5
1.2.9. Environmental characteristics . . . . .	1-6
<b>2. CIRCUIT DESCRIPTIONS</b>	<b>2-6</b>
2.1. Block diagram descriptions . . . . .	2-6
2.1.1. Y channel . . . . .	2-6
2.1.2. Triggering . . . . .	2-6
2.1.3. Time base circuit . . . . .	2-6
2.1.4. Hold-off circuit . . . . .	2-7
2.1.5. Z-Axis . . . . .	2-7
2.1.6. Power supply . . . . .	2-7
2.2. Description of the vertical section . . . . .	2-7
2.2.1. Input coupling . . . . .	2-7
2.2.2. Input attenuator . . . . .	2-7
2.2.3. Impedance converter . . . . .	2-8
2.2.4. Preamplifier . . . . .	2-8
2.2.5. Trigger pick-off . . . . .	2-8
2.2.6. Normal invert switch . . . . .	2-8
2.2.7. Position control . . . . .	2-8
2.2.8. Channel multivibrator . . . . .	2-9
2.2.9. Delay line driver . . . . .	2-10
2.2.10. Composite trigger pick-off . . . . .	2-10
2.2.11. Final Y amplifier . . . . .	2-10
2.3. Triggering . . . . .	2-11
2.3.1. Trigger source selection and preamplifier . . . . .	2-11
2.3.2. Impedance converter . . . . .	2-11
2.3.3. Trigger comparator . . . . .	2-11
2.3.4. Peak to peak level detector . . . . .	2-11
2.3.5. T.V. Synchronisation separator . . . . .	2-12
2.4. Time base generator . . . . .	2-13
2.4.1. Sweep generator . . . . .	2-13
2.4.2. Hold-off circuit . . . . .	2-13
2.4.3. Sweep gating logic . . . . .	2-14
2.4.4. Auto sweep circuit . . . . .	2-15
2.4.5. X-final amplifier . . . . .	2-15



2.5.	Cathode ray tube circuit . . . . .	2-16
2.5.1.	C.R.T controls . . . . .	2-16
2.5.2.	Beam blanking amplifier . . . . .	2-17
2.6.	Power supply . . . . .	2-18
2.6.1.	General . . . . .	2-18
2.6.2.	Mains transformer . . . . .	2-18
2.6.3.	Converter and stabilized power supply . . . . .	2-18
2.6.4.	Illumination circuit . . . . .	2-19
2.7.	Calibration unit . . . . .	2-19
2.8.	Basic analog and digital circuits . . . . .	2-20
2.8.1.	Basic analog circuits . . . . .	2-20
2.8.2.	Basic digital circuits . . . . .	2-21
3.	<b>DISMANTLING THE INSTRUMENT</b> . . . . .	3-1
3.1.	General information . . . . .	3-1
3.2.	Removing the instrument covers . . . . .	3-1
3.3.	Access to parts for checking and adjusting procedure . . . . .	3-1
4.	<b>PERFORMANCE CHECK</b> . . . . .	4-1
4.1.	General information . . . . .	4-1
4.2.	Preliminary settings of the controls . . . . .	4-4
4.3.	Recommended test equipment . . . . .	4-4
4.4.	Checking procedure . . . . .	4-5
5.	<b>CHECKING AND ADJUSTING</b> . . . . .	5-1
5.1.	General information . . . . .	5-1
5.2.	Recommended test equipment . . . . .	5-1
5.3.	Preliminary settings of the controls . . . . .	5-1
5.4.	Survey of adjusting elements and auxiliary equipment . . . . .	5-4
5.5.	Checking and adjusting procedure . . . . .	5-6
5.5.1.	Power supply . . . . .	5-6
5.5.2.	Cathode-ray tube circuit . . . . .	5-6
5.5.3.	Y-amplifier balance . . . . .	5-7
5.5.4.	Trigger balances . . . . .	5-8
5.5.5.	Time-base generator . . . . .	5-8
5.5.6.	Vertical channels . . . . .	5-9
5.5.7.	Triggering . . . . .	5-12
5.5.8.	X-Deflection . . . . .	5-13
5.5.9.	Calibration voltage . . . . .	5-14
5.6.	Adjustment interactions . . . . .	5-15

<b>6. CORRECTIVE MAINTENANCE</b>	<b>6-1</b>
6.1. Replacements . . . . .	6-1
6.1.1. Replacing internal fuses and mains transformer . . . . .	6-2
6.1.2. Replacing single knobs . . . . .	6-3
6.1.3. Replacing double knobs . . . . .	6-3
6.1.4. Removing the text plate . . . . .	6-3
6.1.5. Removing the front assembly . . . . .	6-3
6.1.6. Replacing the cathode-ray tube . . . . .	6-3
6.1.7. Replacing switches . . . . .	6-6
6.1.8. Replacing cabinet parts . . . . .	6-7
6.2. Soldering techniques . . . . .	6-8
6.3. Special tools . . . . .	6-9
6.4. Recalibration after repair . . . . .	6-9
6.5. Instrument repackaging . . . . .	6-9
6.6. Trouble-shooting . . . . .	6-10
6.6.1. Introduction . . . . .	6-10
6.6.2. Trouble-shooting hints . . . . .	6-10
6.6.3. Mains transformer data . . . . .	6-11
6.6.4. Voltages and waveforms in the instrument . . . . .	6-11
6.6.5. Component location list . . . . .	6-16
6.7. Mains voltage setting (PM3215U only) . . . . .	6-23
6.8. Safety inspection and tests after repair and maintenance in the primary circuit . . . . .	6-23
6.8.1. General directives . . . . .	6-23
6.8.2. Safety components . . . . .	6-23
6.8.3. Checking the protective earth connection (in instruments with a three-core mains cable) . . . . .	6-23
6.8.4. Checking the insulation resistance (in instruments with a three-core mains cable) . . . . .	6-23
6.8.5. Checking the leakage current . . . . .	6-23
6.8.6. Voltage test . . . . .	6-23
6.9. Extra in- and output circuits . . . . .	6-24
6.9.1. External Z-modulation input . . . . .	6-24
6.9.2. Main time base sweep output . . . . .	6-24
6.9.3. Main time gate output . . . . .	6-25
6.10. Accessory information . . . . .	6-28
<b>7. PARTS LIST</b>	<b>7-1</b>
7.1. Mechanical parts . . . . .	7-1
7.2. Electrical parts . . . . .	7-7
<b>8. CIRCUIT DIAGRAMS AND P.C.B. LAY-OUTS</b>	<b>8-1</b>

0. SAFETY INSTRUCTIONS

Read these pages carefully before installation and use of the instrument.

The following clauses contain information, cautions and warnings which must be followed to ensure safe operation and to retain the instrument in a safe condition.

Adjustment, maintenance and repair of the instrument shall be carried out only by qualified personnel.

0.1. SAFETY PRECAUTIONS





For the correct and safe use of this instrument it is essential that both operating and servicing personnel follow generally-accepted safety procedures in addition to the safety precautions specified in this manual. Specific warning and caution statements, where they apply, will be found throughout the manual. Where necessary, the warning and caution statements and/or symbols are marked on the apparatus.

0.2. CAUTION AND WARNING STATEMENTS

**CAUTION:** is used to indicate correct operating or maintenance procedures in order to prevent damage to or destruction of the equipment or other property.

**WARNING:** calls attention to a potential danger that requires correct procedures or practices in order to prevent personal injury.

0.3. SYMBOLS

	High voltage $\geq 1000V$	(red)
	Life part	(black/yellow)
	Read the operating instructions	(black/yellow)
	Protective earth (grounding) terminal	(black)

0.4. IMPAIRED SAFETY-PROTECTION

Whenever it is likely that safety-protection has been impaired, the instrument **must** be made inoperative and be secured against any unintended operation. The matter should then be referred to qualified technicians. Safety protection is likely to be impaired if, for example, the instrument fails to perform the intended measurements or shows visible damage.

0.5. GENERAL CLAUSES

- 0.5.1. **WARNING:** The opening of covers or removal of parts, except those to which access can be gained by hand, is likely to expose live parts and accessible terminals which can be dangerous to live.
- 0.5.2. The instrument shall be disconnected from all voltage sources before it is opened.
- 0.5.3. Bear in mind that capacitors inside the instrument can hold their charge even if the instrument has been separated from all voltage sources.

- 0.5.4. WARNING:** Any interruption of the protective earth conductor inside or outside the instrument, or disconnection of the protective earth terminal, is likely to make the instrument dangerous.  
(only PM3215U) Intentional interruption is prohibited.

**WARNING:** It must be born in mind that in all measurements the frame ground of the oscilloscope is raised to the same potential as that of the measuring ground probe connection.  
(only PM3215) Neither the probe's ground lead nor the frame ground shall be connected to live potentials.

- 0.5.5.** Components which are important for the safety of the instrument may only be renewed by components obtained through your local Philips organisation. (See also section 6).

- 0.5.6.** After repair and maintenance in the primary circuit, safety inspection and tests, as mentioned in Section 6 have to be performed.

1. INTRODUCTION

1.1. GENERAL

The 50 MHz dual-channel oscilloscope PM 3215 and PM 3215U is a compact, lightweight instrument, featuring ergonomic design and extensive measurement capabilities.

A large 8 x 10 cm screen, with internal graticule lines, a high intensity trace together with features such as TV triggering, switchable trigger modes and adding modes for the vertical channel, make this instrument suitable for a very wide range of use.

Use of the oscilloscope in the field is further facilitated by optional battery operation.

This service manual contains all service information about the PM3215 and PM3215U.  
For operating instructions, refer to the Operating Manual which also contains accessory information.



MAT 1525

Fig. 1.1. 50 MHz Dual-channel oscilloscope PM 3215

1.2. CHARACTERISTICS

A. Performance Characteristics

- Properties expressed in numerical values with stated tolerance are guaranteed by PHILIPS. Specified non-tolerance numerical values indicate those that could be **nominally** expected from the mean of a range of identical instruments.
- This specification is valid after the instrument has warmed up for 30 minutes (reference temperature 23 °C).

B. Safety Characteristics

This apparatus has been designed and tested in accordance with:

- Safety Class I requirements of IEC Publication 348, Safety Requirements for Electronic Measuring Apparatus, UL 1244 and CSA 556B for “U” instruments (\*\*).
- Safety Class II requirements of IEC Publication 348, Safety Requirements for Electronic Measuring Apparatus for “Double Insulated” instruments. (\*)

The instrument has been supplied in a safe condition.

C. Initial Characteristics

- Overall dimensions (see fig. 1.2.).
  - Height : 137 mm (excluding feet)
  - Width : 300 mm (excluding handle)
  - Depth : 445 mm (excluding handle)
- Maximum Weight (Mass) : 7,9 kg.
- Operation position:
  - a) Horizontally on bottom feet
  - b) Vertically on rear feet
  - c) Any angle between a) and b)

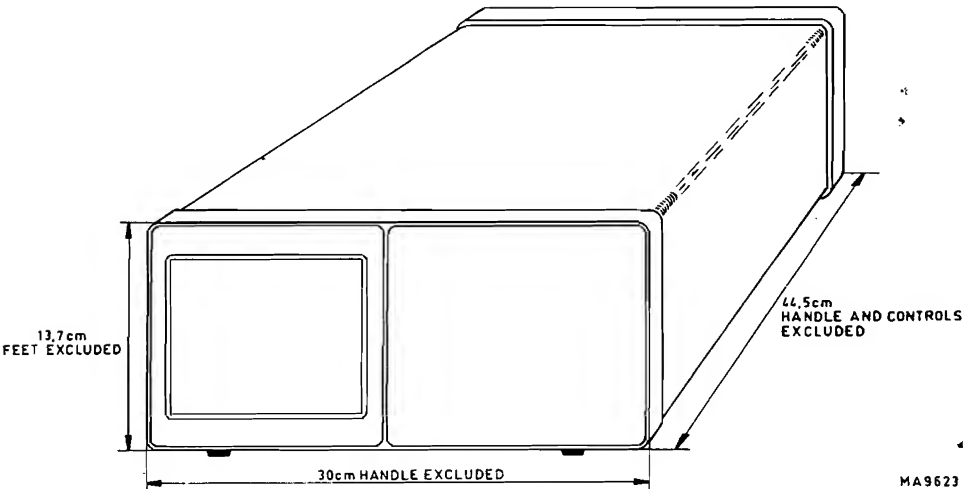



Fig. 1.2. Dimensions



<i>Designation</i>	<i>Specification</i>	<i>Additional information</i>
<b>1.2.1. C.R.T</b>		
Type	D14-125 GH/117	
Measuring area	8x10 divisions	1 div. equals 1 cm
Screen type	P31 (GH)	P7 (GM) optional
Total acceleration voltage	10kV	
Graticule	Internal	Cont. variable illumination
<b>1.2.2. Vertical amplifier</b>		
Display modes	Channel A only Channel B only A and B chopped A and B alternated A and B added	
Channel B polarity	Normal or inverted	
Response:		
Frequency range	DC : 0 ... 50MHz (−3dB) AC : 2Hz ... 50MHz (−3dB)	0,3 MHz/°C derating at 2,5 and 10mV-settings related to ambient temp. 25°C.
Rise time	≤ 7ns	
Pulse aberrations	≤ ± 3% (≤ 5% pp)	Measured at 6 div. amplitude and applied rise time of ≥ 1ns
Additional aberrations 2,5 and 10mV	0,15% per °C	Related to ambient temp. 25°C
Shift influence	≤ 0,2 div.	Shifting + or − 3 div. from screen centre
Deflection coefficients	2mV/DIV ... 10V/DIV	1-2-5 sequence
Continuous control range	1 : ≥ 2,5	
Deflection accuracy	± 3%	
Input impedance	1MΩ // 20pF, + 4pF or −0pF	Differences between ranges and attenuators ≤ ± 1pF.
Input RC time	0.1s	Coupling switch to AC
Rated input voltage	42V (dc + ac peak)	Test voltage: 500V (r.m.s.) according to IEC348
** ⚠ Maximum safe input voltage	400V (dc + ac peak)	
Chopping frequency	≈ 500kHz	
Vertical positioning range	16 divisions	
Dynamic range	24 divisions	For frequencies ≤ 10 MHz
Visible signal delay	≥ 2 divisions	At 10ns
C.M.R.R. in A-B mode	≥ 40dB at 1MHz	After adjustment at d.c. or low fre- quencies
Cross talk between channels	−40dB or better at 10MHz	Both attenuators in the same setting
Instability of the spot position:		
Temperature drift	≤ 0,3div/hour	

<i>Designation</i>	<i>Specification</i>	<i>Additional Information</i>
<b>1.2.3. Time base</b>		
Time coefficients	0.5s/DIV ... 0.1 $\mu$ s/DIV	1-2-5- sequence
Continuous control range	1 : $\geq$ 2.5	
Coefficient error	$\pm$ 3%	$\pm$ 5% including x10 MAGN
Magnification	10x	
Magnifier error	$\pm$ 2%	
Maximum effective Time coefficient	10ns/DIV	
<b>1.2.4. Triggering</b>		
Source	Ch. A, Ch.B, Composite, External and line	
Trigger mode	Automatic, normal AC normal DC and TV	TV line or frame switched by TIME/DIV switch TV line: 1 $\mu$ s/div ... 20 $\mu$ s/div. TV frame: 50 $\mu$ s/div. ... .5s/div.
Trigger sensitivity	Internal <sup>†</sup> : 1.0 DIV at 50MHz External: 0.2Vpp at 50MHz Ext $\div$ 10 : 2Vpp at 50 MHz  TV int.: 0.7 DIV TV ext.: 0.15Vpp	Sync pulse amplitude Sync pulse amplitude
Triggering frequency range	AUTO: 20Hz ... $\geq$ 50MHz AC: 5Hz ... $\geq$ 50MHz DC: 0Hz ... $\geq$ 50MHz	Typically, stable triggering can still be obtained at 50MHz and 2 div. or 1Vpp amplitude
Level range	AUTO: proportional to peak-to-peak value of trigger signal. AC, DC: 8 div. at internal trigg., 1,6V at external trigg., and 16V at ext. $\div$ 10	+ or -4 div. and + or -0,8V ref. to centre of screen + or -8V ref. to centre of screen
Triggering slope	Positive or negative going	
Input impedance	1M $\Omega$ // 20pF, + 4pF or -0pF	
* Rated input voltage	42V (dc + ac peak)	Test voltage: 500V (r.m.s.) according to IEC348
**  Maximum safe input voltage	400V (dc + ac peak)	
Hold-off time	variable	

Designation	Specification	Additional Information
<b>1.2.5. X Deflection</b>		
Source	A, B, EXT., EXT., ÷ 10 or LINE	As selected by trigger source switch, if TIME/DIV switch is in pos. X DEFL.
Deflection coefficients	A or B: As selected by AMPL/DIV EXTERNAL: 0.2V/DIV EXT.: ÷ 10 : 2V/DIV LINE ≥ 8 divisions	At nominal line voltage
Deflection accuracy	± 10%	X 10 MAGN. off
Frequency range	DC: 0 ... 1MHz (−3dB) AC: 5Hz ... 1MHz (−3dB)	
Phase shift	≤ 3° at 100kHz	
Dynamic range	24 divisions	For frequencies ≤ 100kHz
<b>1.2.6. Calibration generator</b>		
Output voltage	1.2Vpp	Square wave
Accuracy	± 1%	
Frequency	≈ 2kHz	
<b>1.2.7. Power supply</b>		
AC supply:		
Nominal voltage range (on line-mains voltage adaptor)	110, 127, 220 or 240 Vac ± 10%	
Nominal frequency range	50 ... 400Hz ± 10%	
Power consumption	28W max.	At nominal mains voltage
Battery supply:		
Voltage range	22-27Vd.c.	Battery minus (−) connected to chassis
Current consumption	1.1A max.	
Capacity to earth	110pF 23pF	Measured with rubber feet on earthed metal plate of 1m <sup>2</sup> Measured 30cm above earthed plate of 1m <sup>2</sup>
<b>1.2.8. Z-mod input</b>		
DC coupled TTL compatible "1" is normal intensity "0" blanks display Min. pulse width required		
	20ns	

1.2.9. Environmental characteristics

*The environmental data are valid only if the instrument is checked in accordance with the official checking procedure. Details on these procedures and failure criteria are supplied on request by the PHILIPS organisation in your country, or by PHILIPS, SCIENTIFIC AND INDUSTRIAL EQUIPMENT DIVISION, EINDHOVEN, THE NETHERLANDS.*

Ambient temperatures:

Rated range of use	+ 5°C ... +40°C
Operating	−10°C ... +55°C
Storage and transport	−40°C ... +70°C

Altitude:

Operating to	5000m (15000 ft)
Non-operating to	15000m (45000 ft)

Humidity	21 days cyclic damp heat 25°C–40°C, R.H. 95%
----------	--

Shock	30g: half sinewave shock of 11 ms duration: 3 shocks per direction for a total of 18 shocks.
-------	--

Vibration	Vibrations in three directions with a maximum of 15min. per direction, 5 – 55Hz and amplitude of 0.7mm <sub>pp</sub> and 4g max. acceleration. Unit mounted on vibration table without shock absorbing material.
-----------	---

Electromagnetic interference	Meets VDE 0871 and VDE 0875 Grenzwertklasse B.
------------------------------	--

## 2. CIRCUIT DESCRIPTIONS

In chapter 2.1. the block diagram description is given and in the chapters 2.2. — 2.7. the detailed circuit information is described.

Additional the most important characteristics of the analog and digital circuits are described in chapter 2.8.

### 2.1. BLOCK DIAGRAM DESCRIPTION

This chapter serves to explain the main functions of the oscilloscope.

#### 2.1.1. Y Channel

The vertical channels A and B for the signals to be displayed are identical, each comprising an input coupling switch, an input step attenuator, an impedance converter and a preamplifier with trigger pick-off.

A channel multivibrator, controlled by the display mode pushbuttons, switches either channel A or channel B, to the final Y amplifier via the delay line. The channel multivibrator is operated by a pulse at the end of the sweep, and offers an uninterrupted display of the A and B waveforms in the ALT mode. In the CHOP mode the multivibrator is free-running and provides a chopped display of the two signals. In the ADD position, both switching amplifiers are connecting the signals through thus adding channels A and B. By inverting the B channel amplifier (PULL TO INVERT B) the A-B mode is obtained.

The AMPL/DIV switches provide x1 or x10 gain control of the preamplifier, which offers in conjunction with the step attenuator a full range of deflection coefficients in a 1-2-5 sequence.

#### 2.1.2. Triggering

To initiate sweeps, trigger signals can be derived from the A and B vertical channel preamplifiers, from an external source, or internally from the mains supply (LINE triggering) as selected by the trigger source switch. With A and B pushbuttons both depressed, composite triggering is derived from the delay-line driver stage. The polarity of the trigger signal, negative or positive-going, on which the display will start is determined by changing the output polarity of the impedance converter.

With the AUTO switch depressed, the peak-to-peak level detector comes into operation. The peak-to-peak level of the signal then determines the range of the LEVEL control.

With AC or DC depressed, the range of the LEVEL control is fixed.

In the TV mode the LEVEL control is inoperative and the TV sync separator is switched into circuit, thus initiating sweeps with line or frame pulses as dictated by the setting of the TIME/DIV switch.

#### 2.1.3. Time-base circuit

For normal internal time-base operation the horizontal amplifier is fed by sweeps from the time-base circuit.

With AUTO depressed, in the absence of trigger signals, the output of the sweep generator is fed back via the hold-off circuit and gate to its input. This causes sweeps to free-run and a resultant trace is displayed on the screen. As soon as the AUTO control circuit detects a trigger (i.e. change in the output of the sweep-gating logic) the sweep is fed back to the sweep-gating logic. This causes the circuit to revert to the normal triggering mode in which sweeps are initiated only by trigger pulses at the input of the sweep-gating logic.

With AC or DC depressed, AUTO control is made inoperative. Sweeps are then only produced provided a trigger signal is present and the LEVEL control appropriately set.

The display can be magnified in the horizontal direction by increasing the gain of the final amplifier.

In the EXT position of the TIME/DIV switch, the sweep generator output to the final amplifier is inhibited and the impedance converter is connected directly to the final amplifier. In this way, the signals normally selected for triggering, or an external source, can now be used for horizontal deflection.

#### 2.1.4. Hold-off circuit

The hold-off stage, as its name implies, "holds-off" triggers from the input of the time-base circuit until the trace has completely returned and the time-base circuits are completely reset. The hold-off time can be increased by turning the HOLD-OFF control clockwise.

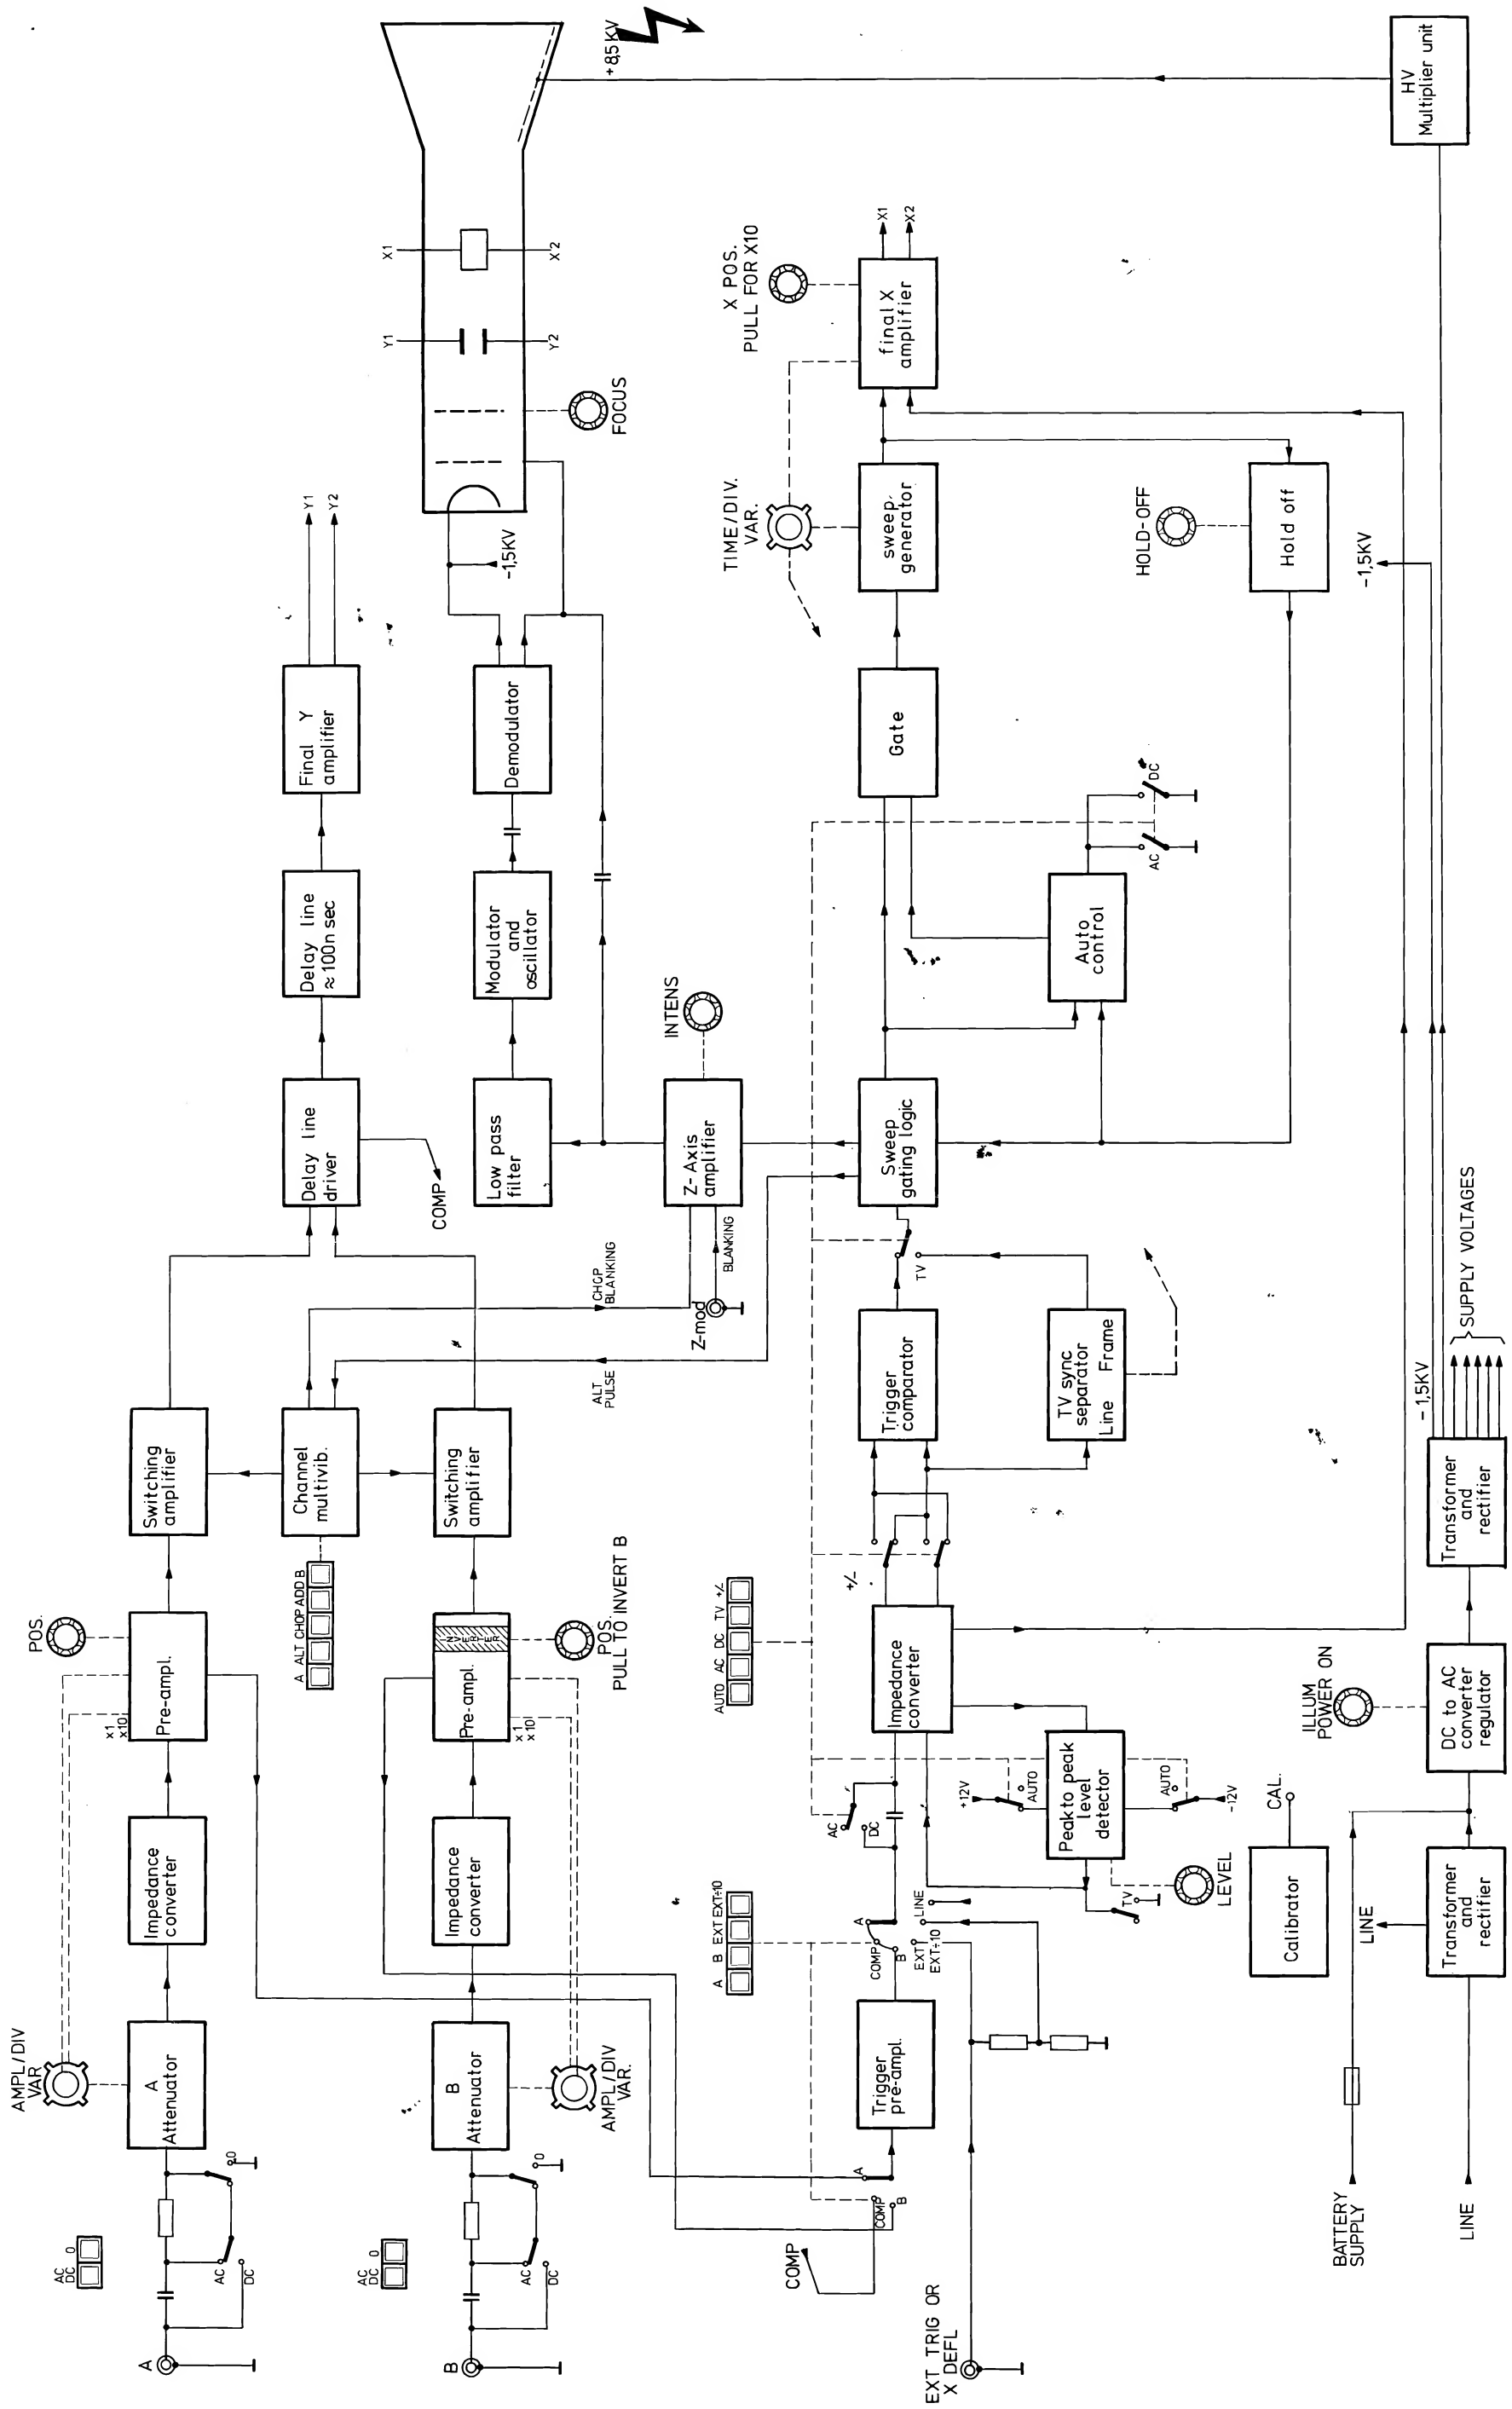


Fig. 2.1. Block Diagram



### 2.1.5. Z-Axis

The Z amplifier provides for the blanking of the trace during the fly-back and hold-off time. In addition, it blanks the sweep in the CHOP mode during the switching transients. Moreover the trace can be blanked by a signal applied to the external Z-mod input.

The l.f. components of the blanking signal are modulated and demodulated before they are applied to the Wehnelt cylinder together with the a.c. coupled h.f. components.

### 2.1.6. Power supply

The mains (line) supply is transformed and rectified before being applied to a d.c. to a.c. converter.

When the instrument is operated from a battery supply the battery output is connected directly to the d.c. to a.c. converter.

The output of the converter is coupled to a transformer and rectifier which, after rectification, provides the  $-1.5$  kV e.h.t. potential and the circuit supply voltages. The  $-1.5$  kV is also multiplied to 8.5 kV to supply the required total accelerating voltage of  $\approx 10$  kV.

## 2.2. DESCRIPTION OF THE VERTICAL SECTION

The vertical channels A and B for the signals to be displayed are identical, each comprising an input coupling switch, an input step attenuator, an impedance converter and a preamplifier with trigger pick-off.

A channel multivibrator, controlled by the display mode pushbuttons, switches either channel A or channel B to the final Y amplifier via the delay line driver and the delay line. The final Y amplifier feeds the Y deflection plates of the cathode-ray tube.

The individual stages of the vertical deflection system are now described in some detail.

As the signal paths for channel A and channel B are basically identical, only the channel B signal path is described.

### 2.2.1. Input coupling

Input signals connected to the BNC input socket X3 can be a.c. coupled, d.c. coupled or internally disconnected. In the AC position of S14, there is a capacitor (C401) in the signal path. This capacitor prevents the DC component of the input signal from being applied to the amplifier.

In position DC of switch S14, the input signal is coupled directly to the step attenuator.

At the same time, blocking capacitor C401 is discharged via R402, to prevent damage of the circuit under test by a possible high charge.

S15 (0) isolates the B input signal and earths the channel input for reference purposes; e.g. for calibration or centering the trace.

### 2.2.2. Input attenuator

The input attenuator is a frequency-compensated, high-impedance voltage divider with twelve positions. The overall attenuation of the stage is determined by the combination of the selected sections of two voltage dividers. The various combinations are selected by the twelve positions of the frontpanel AMPL/DIV attenuator switch S8.

The first divider sections attenuate by factor of 1.25, 3.125 and 6.25 and the second divider sections attenuate by a factor of 1x, 10x and 100x.

With the overall combinations of attenuation, nine different deflection coefficients are realised from 20 mV/div to 10 V/div in a 1-2-5-sequence. Only for the most sensitive positions 2 mV/div, 5 mV/div and 10 mV/div of AMPL/DIV attenuator switch S8, the gain of the Y amplifier is increased by a factor of 10.

The input capacitance of the attenuator cannot be adjusted in the individual positions. Small differences of approx. 1 pF are allowed.

Capacitor networks are provided in the voltage divider sections to make them frequency independent.

### 2.2.3. Impedance converter

The impedance converter is formed by V604 (two matched field-effect transistors). The two FET transistors are used in source follower configuration.

The signal level on the gate (and on the source) of the upper FET amounts to 1.6 mV/div or 16 mV/div.

Diode V601 together with the output impedance of the attenuator and also the attenuator action protects the input source follower, against excessive negative input signals. The d.c. balance of the circuit can be adjusted with R604, providing attenuator balance for the 10 mV/div and 20 mV/div positions.

#### 2.2.4. Preamplifier

The input stage formed by D601 (5 transistors) is switched in a Cherry-Hooper configuration and direct coupling is employed throughout.

In the positions 20 mV/div — 10 V/div of the AMPL/DIV switch S8, contact K601 is open and the gain is determined by

$$\frac{R628 + R632}{R611 + R612} = \text{approx. } 1,8x$$

If K601 is closed (in positions 2 mV/div, 5 mV/div and 10 mV/div) the gain of this stage is increased by a factor of 10. This is accurately adjusted with R621.

To prevent jumping of the trace when K601 is switched with the input short circuited, no voltage must be present across these contacts. R604 (attenuator balance) serves this purpose.

R8 in conjunction with R622, R623, R624 and R626 forms the vernier control. In the calibrated position (R8 is 1 kohm) the transfer of this network is 0,85x. With R8 to its minimum position (0 ohm) the transfer is 0,3x. Thus we have a control range of 3x.

V608, V609, V613, V614, V616 and V617 form a symmetrical cascode circuit supplying an output CURRENT to the channel switch.

The transfer conductance of this stage is:

$$\frac{I_{out}}{U_{in}} = \frac{1}{R641 // (R637 + R638) // (R646 + R647 + R648)} = 7 \text{ mA/V}$$

The signal level at the input of this stage is approx. 24 mV/div equivalent to approx. 170  $\mu$ A/div at the output.

*Note: The channel A gain can be equalised to the channel B gain with the aid of R543 (gain x1 in channel A amplifier).*

#### 2.2.5. Trigger pick-off

The trigger signal is picked-off at the emitters of V608 and V609, a signal source with a low internal resistance, by the series feed-back stage V611 and V612.

From this stage the trigger signal current is fed asymmetrically to the trigger selector via a 50  $\Omega$  cable.

#### 2.2.6. Normal invert switch

The B channel has a provision for inverting the polarity of the Y signal. Push-pull switch S4, PULL TO INVERT B, is mounted on the shaft of front-panel control B POSITION. In the invert position of the switch the normal signal paths are blocked because V613 and V614 are switched off.

Inversion is achieved by V616 and V617 providing alternative paths for the signal when their bases are switched less positive by S4. Possible unbalance between the two positions of the switch can be compensated by preset potentiometer R647 (Norm invert balance).

#### 2.2.7. Position control

Potentiometer R3 is the vertical POSITION control. Its balance is adjustable by means of R674 (shift balance).

*Fig. 2.2. Simplified diagram of the channel multivibrator*

In the ALT mode  $-12\text{ V}$  is applied via S1A, S1C, S1D and S1E and R710 to transistor V1506 in the beam blanking amplifier.

This transistor is then blocked and the only control signal for the beam unblanking amplifier is the normal unblanking pulse coming from the time-base circuit.

With CHOP (S1C) depressed: channels A and B are chopped.

In this mode the circuit acts as a chopper generator. S1C is open then, the DC path between the emitters of V703 and V704 is interrupted and the circuit is a-stable. Both diodes V701 and V702 are then turned-off and the circuit starts oscillating, the oscillating frequency being approx. 500 kHz.

During the switching transients in the CHOP mode, the c.r.t. is blanked with the aid of differentiated chopper blanking pulses (at the junction of R703 and C702) which are fed to the Z-amplifier.

With ADD (S1D) depressed: channel A and B are added.

Both transistors are turned-off, both collector voltages are high and both channels are switched on.

With B (S1E) depressed: only channel B is displayed.

The base of V704 is connected to the  $-12\text{ V}$  supply voltage. V704 is then turned-off, its collector voltage is high and channel B is switched on. At the same moment channel A is switched off.

### 2.2.9. Delay line driver

The symmetrical delay line is sandwiched between a series feed-back push-pull amplifier (called CHERRY) and a shunt feed-back push-pull amplifier (called HOOPER), consisting of integrated circuit D801.

Such an amplifier combination is called "CHERRY-HOOPER".

The series feed-back stage receives a signal of approx.  $30\text{ mV/div}$  which is obtained from a signal current of  $0,17\text{ mA/div}$  from the channel switch, multiplied by the value of the load resistance  $R803 + R804 = 200\ \Omega$ .

The emitter impedance of the series feedback stage consists besides  $R_E = R819 + R821$  of the parallel circuit of a number of RC networks. As the delay line is a source of distortion for higher frequencies, these networks are realizing the necessary delay line compensation.

At the input side, delay line D802 terminates in R828 and R829 (totally  $200\ \Omega$ ).

The delay line itself is a symmetrically mount spiralized cable with a characteristic impedance of  $200\ \Omega$  and a delay of  $110\text{ nsec/m}$ . At the output side, the cable terminates via R831 and R832 in the virtual earth points of the parallel feed-back stage (HOOPER). The input impedance on these virtual earth points is  $14\ \Omega$ . This value in series with the  $86,6\ \Omega$  of R831 and R832 forms the correct termination for the delay line. C814 and C816 are for HF correction.

### 2.2.10. Composite trigger pick-off

The composite trigger signal is picked-off at the emitters of the CHERRY stage (D801), a signal source with a low internal resistance, by the series-feedback stage V802 and V803. From this stage the composite trigger signal current is fed asymmetrically to the trigger selector via a  $50\ \Omega$  cable.

### 2.2.11. Final Y amplifier

The output of the delay line is applied to transistor array D802 (6,7,8) and (9,10,11) via terminators R837, R843. Together with the impedance across D802 (8,7) and (9,10) this termination corresponds with the characteristic impedance of the delay line. The constant current source D802 (12,13,14) is switched in the circuit to supply this parallel feed-back stage.

The output of the stage is applied to the series feed-back stage V811, V812 which drives the power stage V809, V813. The Y-plates of the c.r.t. are controlled by the output voltage of the power transistors.

To obtain a good square wave response, a correction network is switched between the emitters of V811 and V812.

The value of the collector resistance of the final power stage is  $790\ \Omega$  which is split-up into 4 resistors, switched in parallel to deviate the heat dissipation.

### 2.3. TRIGGERING

The trigger source switches for triggering the time-base generator, can select any of the following input sources:

- an internal signal from the vertical A channel
- an internal signal from the vertical B channel
- an internal composite signal of channel A and channel B
- a signal derived from the mains supply
- an external source
- an external source divided by 10

All these sources can be used for both triggering and X deflection purposes. Source selection is done by means of a trigger selector switch S16 that feeds the trigger signals to the trigger amplifier.

#### 2.3.1. Trigger source selection and preamplifier

The signal currents ( $60 \mu\text{A}/\text{div}$ ) of the three trigger pick-off stages are, after selection by S16C and S16D, amplified to a level of  $100\text{mV}/\text{div}$  by a shunt feed-back stage + emitter follower stage consisting of V351 and V352. After this stage there is a selection between its output signal, a signal on the external socket and a signal with the line frequency by means of S16A and S16B. Signals that are not used are short-circuited to mass. The externally applied signal is attenuated by a factor of two or twenty (depending on position of EXT and  $\text{EXT} \div 10$ ) allowing standardisation of the input impedance of the EXT socket to  $1\text{M}\Omega//20\text{pF}$ .

#### 2.3.2. Impedance converter

The trigger signal of  $100\text{mV}/\text{div}$  is fed via the AC-DC coupling switch S2C to a FET (V1006) in source follower configuration.

From here the signal is applied via an emitter follower to the  $\pm$  slope selection switch S3. This selection switch enables triggering on either the positive-going or the negative-going edge of the triggering signal.

#### 2.3.3. Trigger comparator

From the  $\pm$  slope selector switch S3 the signal is fed via a common emitter amplifier D1001(123/345) to the output shunt feed-back amplifier V1014 via the TV mode switch S2D. The voltage gain is high (28x) but its dynamic range is small ( $2.8\text{V}_{\text{p-p}}$  at the output). This is because of the tail current of the symmetrical common emitter stage is  $2\text{mA}$ . The current sweep at the output of this stage is consequently  $2\text{mA}$  at max. which is transformed into a  $2.8\text{V}$  max. voltage sweep at the output of the shunt feed-back amplifier V1014. This means that the trigger amplifier is completely driven at a trace height of 1 div. Which division on the screen this is, depends on the position of the LEVEL control R5.

With AC (S2B) or DC (S2C) depressed, the range of the LEVEL control is fixed. The DC voltage at the wiper of LEVEL control R5, which is fed to the FET (V1006) can vary between  $+3.5\text{V}$  and  $-3.5\text{V}$ . Diodes V1001 and V1002 are then turned-off, and the voltage on the gate of the FET is then adjustable between  $+0.9$  and  $-0.9\text{V}$ . At a signal level on the gate of the other FET of  $100\text{mV}/\text{div}$ , there will be a control range of  $\pm 9$  div.

#### 2.3.4. Peak to peak level detector

If the AUTO push-button S2A is depressed, the supply voltages for the level control circuit are interrupted. A trigger signal ( $300\text{mV}/\text{div}$ ) which is derived from the emitter follower stage and amplified by V1008, gives after peak to peak detection a DC voltage across the level control. This DC voltage is approx. proportional to the amplitude of the trigger signal. This is the auto trigger level control. The peak-to-peak level of the signal then determines the range of the level control.

### 2.3.5. T.V. Synchronisation separator

If the TV mode push-button S2D is depressed, the LEVEL control is switched off. The wiper of R5 is then connected to mass. A synchronisation separator for the television signals is then inserted into the trigger signal path.

A composite video signal contains, besides the video information, also synchronisation pulses with line and frame frequency which can be distinguished by their pulse width.

The TV synchronisation separator circuit is able to:

1. separate the synchronisation pulses from the video information.
2. distinguish between frame synchronisation pulses and line synchronisation pulses.

The first requirement is met by V1013 acting as a DC restorer and limiter, the second requirement by the integrating network R1047, C1011 and C1012.

The TV signal is picked-off at the  $\pm$  slope selector switch which in this case can be set for the right polarity of the TV signal. The TV trigger signal is then amplified by the series feed-back push-pull stage V1009, V1011 and applied to synchronisation separator V1013 via emitter follower V1012. The signal on the base of V1013 could be as follows:

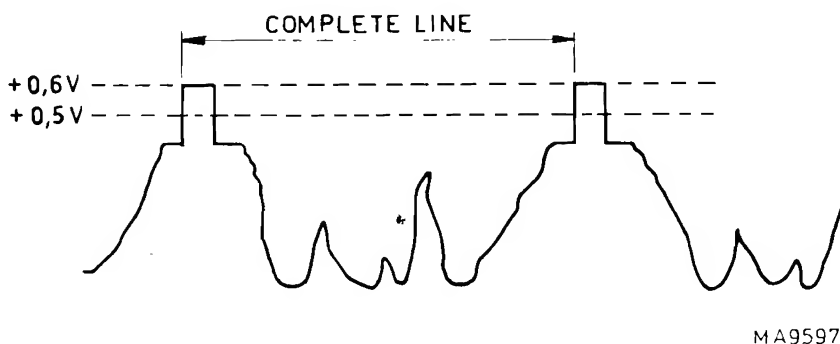


Fig. 2.3. Signal on the base of transistor V1013

The peaks of the synchronisation pulses are all at one level by the DC restorer action of C1007, R1039 and the base emitter diode of V1013. The base voltage will never exceed +0.6 V by a large amount, but the complete waveform will appear at the base. The signal level is at this point approx. 280 mV per screen div. Change in signal of approx. 100 mV is sufficient to turn off V1013. V1013 looks only to the peaks of the synchronisation pulses.

The rest of the TV signal has no influence. On the collector of V1013 we find exclusively the synchronisation signal consisting of line synchronisation pulses and the wider frame synchronisation pulses.

In the time base positions 20  $\mu\text{sec}/\text{div}$  and faster, this complete signal is transmitted to the time base generator and we have line triggering.

In the time base positions 50  $\mu\text{sec}/\text{div}$ . and slower, C1011 and C1012 are connected to mass. The narrower line synchronisation pulses are then, integrated out of the signal, but the wider frame synchronisation pulses remain, and frame triggering is obtained. A second threshold is built-up by V1016. V1017 reacts to the signal that still passes and consists of pure line or frame synchronisation pulses. After this the signal is fed to the time base generator via V1014.

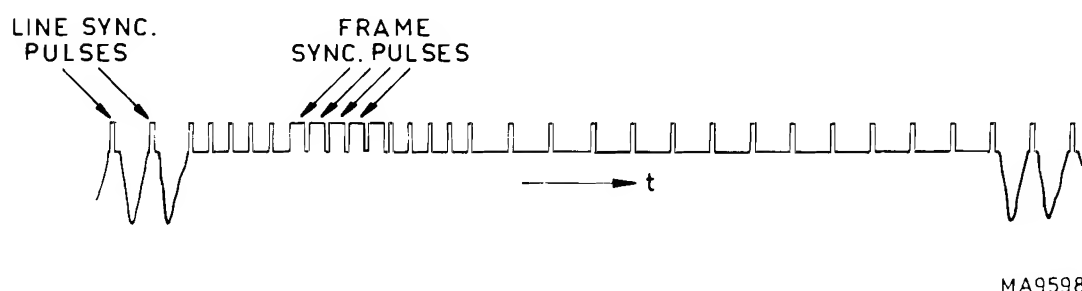


Fig. 2.4. A vertical interval with frame synchronisation pulse group



## 2.4. TIME-BASE GENERATOR

The time-base generator comprises a sweep gating logic, a sweep generator, a hold-off circuit, an auto sweep circuit and X final amplifier.

Before considering these stages in detail, the general principle is briefly described. Basically, the sweep gating logic, under the control of trigger signals from the trigger comparator and also feedback pulses from the hold-off circuit, supplies square-wave pulses to the switching transistor V1213 of the sawtooth generator. The time-base capacitors (effectively in parallel with the switching transistor) are charged linearly through a constant-current source to provide the forward sweep, and are discharged rapidly by the switching transistor to provide the flyback period. The resulting sawtooth is fed to the X-final amplifier.

### 2.4.1. Sweep generator

The sweep speed or time coefficient is determined by the value of the time-base capacitance in circuit, and also by the magnitude of the charging resistor selected.

The time-base capacitors are C1204 and C1207. Capacitor C1204 is always in circuit, the other one is selected by the transistor V1216. This transistor operates as an electronic switch and is either fully cut-off or fully-conducting. It is switched on by the application of a positive voltage to its base from the TIME/DIV switch S10. According to the position of S10, this transistor V1216 switches in the capacitor C1207 in parallel with C1204. As mentioned, the sweep speed is also dependent upon the magnitude of the accurate constant-current supplied by transistor V1212. This current can be adjusted in steps by selecting the emitter resistance of V1212 by means of the TIME/DIV switch S10. Continuous control of the charging current can be effected by varying the base drive to V1212 with the continuous sweep control, TIME/DIV potentiometer R9. In the CAL position of this potentiometer, switch S11 closes and the charging current is solely determined by the calibrated emitter resistance.

To compensate for the temperature coefficient of the transistor, the base voltage of V1212 is supplied via transistor V1214.

This also has the advantage of reducing the load on the TIME/DIV potentiometer R9.

This transistor, in turn, has its base controlled by preset potentiometer R1232 when TIME/DIV switch S10 is in one of the positions .5 s/div ... .5 ms/div. This provides a fine adjustment for the timing circuit in the slower sweep speeds. In these positions the preset potentiometer R1232 provides an additional measure of control over the base voltage of V1212. In the positions of S10 when C1207 is not in circuit, the diode V1218 is blocked and the preset control R1232 is inoperative.

The discharge circuit for the capacitors C1204 and C1207 consists of resistor R1219 and transistor V1213. This switching transistor is driven by the sweep gating logic via a number of diodes. Diodes V1207 and V1208 form an AND-gate for positive logic; V1209 and V1211 adapt the level to control transistor V1213.

The resulting sawtooth voltage is taken from two transistors V1219 and V1221 in a kind of Darlington pair configuration.

C1209 improves the transfer of faster sawtooth signals at the expense of the input impedance which need not to be that high then. The sawtooth voltage amplitude is approx. 5 V. This sawtooth voltage is then fed to the X-final amplifier.

### 2.4.2. Hold-off circuit

The hold-off circuit prevents the sweep gating logic from responding to trigger pulses before the time-base capacitor has fully discharged. The sawtooth output from the Darlington pair V1219 and V1221 is applied to the base of emitter follower V1223.

The switching transistor V1217 switches the hold-off capacitor C1208 in circuit, parallel to C1206, according to the position of the TIME/DIV switch S10, in a similar manner to that described for the time-base integrator timing capacitor. Capacitor C1206 is always in circuit irrespective of the TIME/DIV switch position.

Charging current for the hold-off capacitors flows via transistor V1223. When V1223 cuts off the discharge current flows through R1228 and hold-off control R12. This current is adjustable to change the hold-off time. The voltage across hold-off capacitor C1206 or C1206 + C1208 follows the sawtooth voltage fairly fast in positive going direction via emitter follower V1223. When a certain value is reached, integrated Schmitt-trigger D1201 reacts and the end of the sweep is initiated.

This is followed by a hold-off period in which the voltage across the hold-off capacitor decreases fairly slowly until the lower switching level of the Schmitt trigger is reached. The system can now be triggered again. In the mean-time also the time-base integrator timing capacitor C1204 or C1204 + C1207 has reached its quiescent state. The output (point 6) of D1201 is low during the hold-off time, at any other moment this output is high.

### 2.4.3. Sweep gating logic

The sweep gating logic which consists of TTL logic circuits is controlled by the following signals:

- The trigger signals supplied by the trigger comparator.
- The voltage supplied by the hold-off circuit.
- The voltage supplied by the auto circuit via the hold-off circuit.

The TTL circuit D1201 contains four 2-input NAND-gates with Schmitt-trigger properties.

D1202 contains four normal 2-input NAND-gates and D1203 contains three normal 3-input NAND-gates.

With the aid of the various gates two flip-flops are formed.

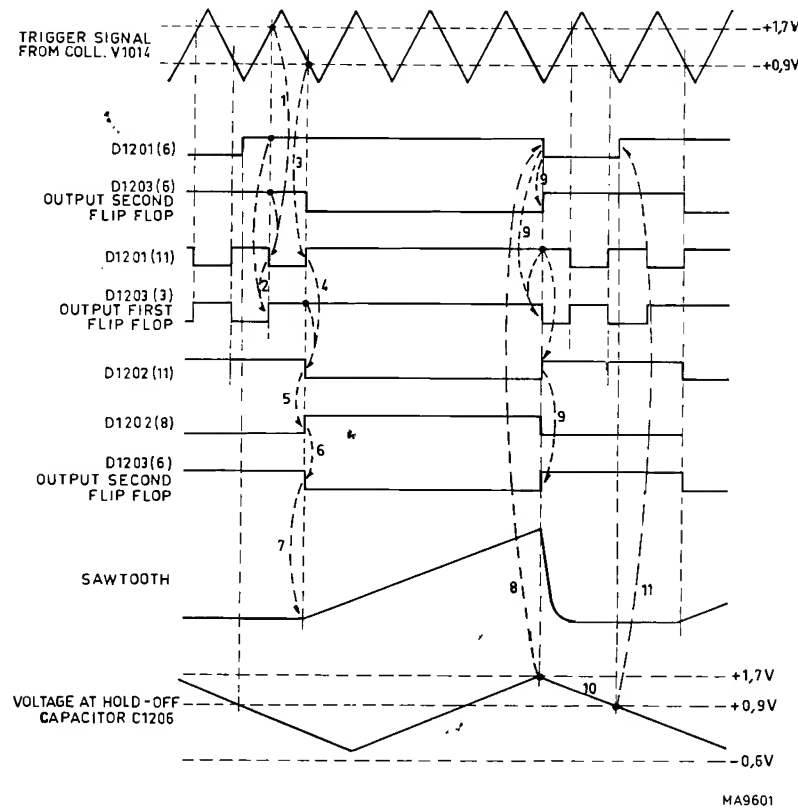


Fig. 2.5. Time relation diagram of the sweep-gating logic in the AC or DC mode

See for the following explanation time relation diagram Fig. 2.5.

- 1 The incoming trigger signal from the trigger comparator switches the Schmitt-trigger output (D1201, point 11) to zero after a positive going edge has exceeded the upper switching level (+1.7 V) of this Schmitt-trigger.
- 2 After this, the first flip-flop output (D1202, point 3) is set to the logic 1-state.
- 3 If the negative going edge of the incoming trigger signal drops below the lower switching level (+0.9 V) of the Schmitt trigger, the output (D1201, point 11) switches to logic 1 level again.
- 4,5,6 The logic 1 state of the first flip-flop and the output signal of the Schmitt-trigger allows the setting of the second flip-flop output (D1203, point 6) to the zero state by means of the NAND output (D1202, point 11).

- 7 The output signal of the second flip-flop is applied to switching transistor V1213 via an OR-gate which consists of R1216, V1207 and V1208. This signal causes the sweep to start.
- 8 The end of the sweep is reached when the signal across the hold-off capacitor C1206 exceeds the upper switching level (+1.7 V) of the hold-off Schmitt-trigger. The output of this Schmitt-trigger switches then to zero.
- 9 Both flip-flops are now reset. Switching transistor V1213 starts conducting and time-base capacitor C1204 will discharge.
- 10 The voltage across the hold-off capacitor C1206 decreases slowly until the lower switching level (+0.9 V) of the Schmitt-trigger is reached.
- 11 This is the end of the hold-off period. The output (D1201, point 6) of the hold-off Schmitt-trigger rises to 1 again and the system can be triggered again.

#### 2.4.4. Auto sweep circuit

In the absence of a trigger signal we would still like to see a display on the screen. The auto sweep circuit serves this purpose. Transistor V1203 senses the state of the output of the second flip-flop, this is the output of the sweep gating logic. Whenever this point reaches the logic zero level, transistor V1203 starts conducting enabling C1202 to discharge. Transistors V1204 and V1206 are then turned off. The collector of V1206 lies on  $-0.7$  V potential and the relevant gate of D1201 is then blocked. This means that output D1201 (3) is at logic 1 level (+5 V).

In the absence of a trigger signal, the output D1203 (6) of the sweep gating logic remains a logic 1 level (+5 V) and transistor V1203 remains turned-off. The voltage across capacitor C1202 remains increasing until after approximately 100 msec., transistor V1204 starts conducting and causes transistor V1206 to conduct. The collector of V1206 rises to approximately +5 V and the relevant gate of D1201 opens. The hold-off signal on point 6 of D1201 now can reach via gate D1201 (3) and the OR-gate, the switching transistor V1213. The loop is then closed and the time base generator is in the free running mode.

#### 2.4.5. X-final amplifier

Transistor V1407 is driven by either the time-base generator via diodes V1411 and V1409 when R1406 is kept at +12 V level via TIME/DIV switch S10 (in all the TIME/DIV positions of this switch), or the amplifier stage V1404 when R1407 is kept at +12 V level via TIME/DIV switch S10 (in position X DEFL).

Transistor V1404 receives its input signal from D1001 point 8 of the trigger amplifier.

This signal is derived from one of the sources, channel A, channel B, line or an external source, depending on the setting of the X deflection selector switch S16.

The final X amplifier consists of two amplifier stages in parallel (one for each deflection plate). Only one half is described.

The actual amplifier is the cascode circuit with transistors V1414 and V1416.

The resistors R1428 and R1429 are feedback resistors. The bias current for the amplifier is supplied by transistor V1413. The average voltage on the deflection plate is kept at +26 V by means of zener diodes V1424 and V1426. Capacitor C1413 improves the h.f. response.

This final stage is supplied from the +180 V and  $-180$  V because the X plates of the C.R.T. are mechanically displaced such that they are less sensitive than the Y plates.

The cascode amplifier stages are controlled via the transistors V1406 and V1407.

The bias of transistor V1406 can be varied with the X POSITION potentiometer R4, which consists of a tandem potentiometer with back-lash, giving a nice vernier control. Variation of the bias causes the balance of the amplifier to be disturbed, which results in a horizontal trace shift on the screen.

The X amplifier allows choice from X deflection by the time base signal or one of the sources, channel A, channel B, line or an external signal. The deflection source is selected with the aid of the TIME/DIV switch S10 and the X-deflection source selector switch S16.

The X amplifier offers the possibility of using either the nominal gain (x1 position of X MAGN switch S5), or the gain increased by a factor of 10 (x10 position of the X MAGN switch S5).

When the front-panel X MAGN switch is operated for 10x magnification, the emitter resistance R1416 + R1417 of transistors V1406 and V1407 is shunted by resistors R1418 + R1419 reducing the value by a factor of 10. Consequently, the gain of the stage is increased by the same factor.

The x1 gain can be set by potentiometer R1417 and the x10 gain by potentiometer R1419. The x10 gain is also operative when X DEFL is selected.

Both outputs of the X final amplifier are connected to the X-deflection plates of the C.R.T.

## 2.5. CATHODE-RAY TUBE CIRCUIT

The cathode-ray tube circuit consists of the c.r.t. and its associated controls: focus, intensity, trace rotation and the beam blanking amplifier.

 
### 2.5.1. C.R.T. controls

By means of the INTENS potentiometer R1, the brightness of the display can be continuously controlled. The display can be focused by means of the FOCUS potentiometer R6. Both INTENS and FOCUS controls are front panel controls.

Furthermore the C.R.T. circuitry comprises preset potentiometers for trace rotation, astigmatism and geometry. The FOCUS control R6 forms a part of a voltage divider network across the 1.5 kV output of the power supply. The slider of this potentiometer is connected direct to the focus, grid G3.

TRACE ROTATION is achieved by means of the trace rotation coil L1501. This coil mounted inside the mu-metal screen, provides a magnetic field for rotational control of the entire scan. The degree and direction of rotation is determined by the setting of front panel potentiometer R10 (screwdriver operated). The slider of R10 is connected to the bases of the complementary transistors V1521 and V1522.


The trace rotation coil L1501 is supplied by these transistors.



With the ASTIGMATISM control R1543, the form of the spot can be adjusted by influencing the voltage on the grids G2 and G4.



With the GEOMETRY control R1549 the barrel and pin-cushion distortion is corrected by influencing the voltage on the grid G7.

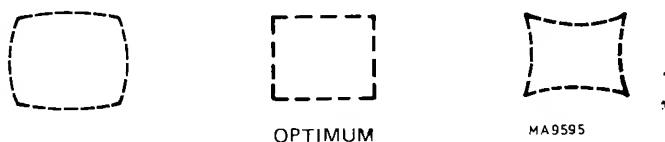

### 2.5.2. Beam blanking amplifier

The beam blanking amplifier receives two input signals. One signal originates in the time-base generator and is applied to the amplifier to unblank the trace during the sweep.

The other one is supplied by the channel switch to blank the trace during switching from channel to channel in the chop mode.

The INTENS potentiometer R1 determines the amount of input current fed to the amplifier.

In all the time/div. positions of the TIME/DIV switch S10, the anode of diode V1202 is kept at approx. +12 V, resulting in a logic 1 level at input 1 of NAND D1203.

The output point 12 of this NAND is now at logic 1 level when either input 2 or input 3 is low. In other words only during a sweep.

In the X DEFL position of the TIME/DIV switch S10, input 1 of NAND D1203 is at a logic 0 level, and in that case the output point 12 of this NAND is steady at logic 1 level. This output signal is inverted by a NAND and fed via diodes V1501 to diodes V1502 and V1503 of the beam blanking amplifier.

The chop mode blanking signal from the channel switch is fed to transistor V1506 via R1502. The inverted and amplified signal is applied to diode V1508.

Both signals are joined together at the base of transistor V1514 (point A in figure 2.6.). This is the virtual earth point of a shunt feedback amplifier.

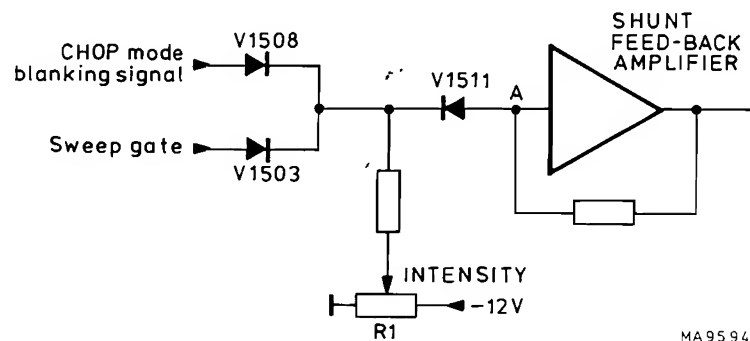


Fig. 2.6. Shunt feed back amplifier

Assume that V1503 and V1508 are turned-off by applying a logic zero to both inputs.

Then the output voltage of the amplifier can be varied with the aid of INTENS potentiometer R1. The light on the screen is variable then e.g. during a sweep or in the X deflection mode. A logic 1 on either one or both inputs of the diodes V1503 and V1508 turns V1511 off. The C.R.T. is then blank e.g. between sweeps or during the sweep when there is channel switching in the chop mode.

The blanking signal is amplified in the stage with transistors V1512, V1513 and V1514. At the output of this amplifier the a.c. and d.c. components of the blanking signal are guided along different paths. The a.c. path runs straight to the Wehnelt cylinder of the C.R.T. via capacitor C1512.

A d.c. signal is fed to the emitter of transistor V1517 via a low-pass filter R1528/C1508/R1527. Transistor V1517 constitutes a multivibrator together with transistor V1516. The a.c. voltage on the collector of V1517 has a peak-to-peak value which depends on the voltage fed to the emitter of V1516 by the shunt feed-back amplifier.

The a.c. voltage supplied by multivibrator V1516/V1517 is applied to a peak detector. This peak detector rectifies this a.c. voltage.

The reason for the a.c. and d.c. paths is isolation of the cathode and Wehnelt cylinder, which are on a -1,5 kV potential, from the other circuits. The a.c. component of the blanking signal is transmitted straight away to the high-voltage part via blocking capacitor C1512, which is a high voltage capacitor. The d.c. signal, however, is converted into an a.c. voltage and then transmitted to the high-voltage part, via capacitor C1509, after which it is rectified by means of diode V1519.

The dark level can be adjusted with the aid of potentiometer R1534 in the emitter circuit of transistor V1517 in the d.c. amplifier.

## 2.6. POWER SUPPLY

### 2.6.1. General

The power supply is designed on the switching regulator principle and permits the instrument to be connected to nominal mains voltages of 110V, 127V, 220V, or 240V by switch selection, or to an external battery supply of 22 ... 27V.

The power supply via POWER ON switch S23 is protected by fuse F202. The battery input is protected by fuse F201 and diode V206 safe-guards the circuit against reversed battery connection.

Basically, the power supply consists of:

- Mains transformer
- Converter and stabilized power supply
- Illumination circuit

### 2.6.2. Mains transformer

An incoming mains voltage is fed via the thermal fuse (F101) and the voltage selector S18 to the appropriate primary taps on the mains transformer T101. Transformer T101 has three primary windings which can be combined by means of voltage adapter S18. This combination allows the instrument to be used with mains voltages of 110 V, 127 V, 220 V and 240 V.

The voltage on the secondary windings of this transformer is full-wave rectified. The resulting negative d.c. voltage (approx. 24 V) across electrolytic capacitor C203, or alternatively a negative d.c. voltage on the rear panel BATTERY IN input socket X7, is applied to the voltage stabilizer and converter.

Part of the a.c. voltage on the secondary winding of the mains transformer is fed via C201, R373 and R372 to LINE trigger source selector switch S16A, to enable internal triggering on the line frequency.

### 2.6.3. Converter and stabilized power supply

The converter is a square-wave generator operating at a frequency of approx. 18 kHz and driven by the d.c. voltage across the electrolytic capacitor C203.

A basic diagram of the converter is shown in Fig. 2.7.

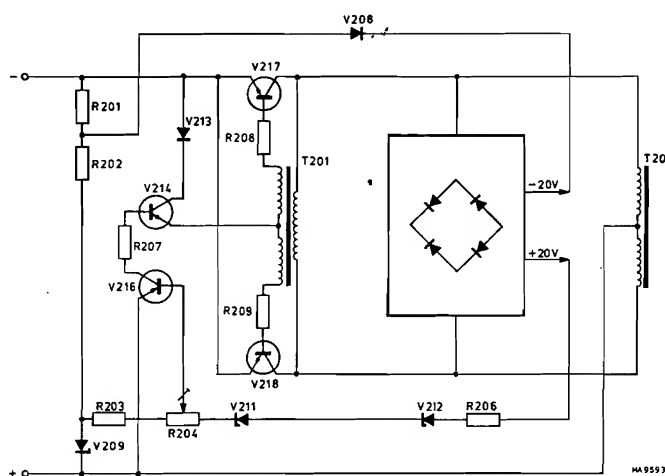


Fig. 2.7. Basic diagram of the converter



In the converter, transistors V217 and V218 function as switches and regulators and alternately connect the negative supply voltage to either end of the primary of T201/T202. Assume that transistor V217 has a slightly higher current gain than V218. Then the positive voltage from the feedback winding quickly drives transistor V217 into saturation. The current in the top half of the primary of T201/T202 increases linearly at a rate determined by the inductance of the primary. This current increase continues until the iron in transformer coil T201 is saturated.

Then the magnetic lines of flux stop changing and consequently no voltage is induced any longer in the feedback winding. When its base drive ceases, the transistor is cut off.

This reverses the polarity of the feedback voltage and transistor V218 is turned hard on. The bottom half of the primary then passes an increasing current until the core is saturated in the opposite direction.

The subsequent absence of feedback voltage initiates the switching back to V217 and the cycle starts again.

The regulation works as follows. When an input voltage is applied to the converter, the negative voltage across Zener diode V209 turns transistor V216 fully on, as there is no positive voltage from temperature compensation stabistors V211 and V212.

Then a bias current flows via transistor V216 through resistor R207, through the base-emitter junction of transistor V214 (operating as a diode since diode V213 interrupts the collector circuit) and from base to emitter of both transistors V217 and V218.

As there is then an a.c. voltage across the primary of T201/T202, diodes V222 and V223 produce a positive d.c. voltage of  $\pm 20$  V across capacitor C209. This voltage reduces the current through transistors V216 and V214 sufficiently to limit the drive to transistors V217 and V218 and produce the desired output level.

The setting of potentiometer R204 determines the value of the regulated output voltage. Possible differences from the set output voltage are fed back via the temperature compensation stabistors V211 and V212 to transistor V216 so that the drive of transistors V217 and V218 is adapted so as to compensate for the differences. This also applies to mains voltage fluctuations.

After rectifying and smoothing, the secondary voltages +5 V, +12 V, -12 V, +38 V, +180 V, -180 V, -1500 V and post acceleration voltage +8500 V are obtained. The voltage quintupler which supplies the +8500 V cannot be repaired and must be replaced when it breaks down.

T202 contains a separate secondary winding for the heater voltage for the C.R.T..

All supply voltages except the +8500 V and the -1500 V can be continuously short-circuited without damage to the components. Resistor R202 limits the collector current when the output is short-circuited and the switching action is stopped, thereby holding the dissipated power in transistors V217 and V218 at a safe level. Thus, the power supply of the oscilloscope is fully protected against short-circuits. A short-circuit is indicated either by a squeaking noise coming from the power supply or by the pilot lamp B1, which indicates the ON state of the oscilloscope, failing to light up.

If supplied by an external d.c. voltage, the instrument is protected against overloads and wrong polarity by internal fuse F201 and diode V206.

#### 2.6.4. Illumination circuit

The graticule of the C.R.T. can be illuminated by means of the bulbs E1. The intensity can be varied with the aid of ILLUM potentiometer R11 which controls the collector current (which is the current through the bulbs) of transistor V207. The illumination circuit is not short-circuit proof.

### 2.7. CALIBRATION UNIT

The calibrator circuit consists of transistors V1602 and V1603, which are configured as a stable multivibrator such as used in the channel switch. Good shape of the wave-form is obtained by a constant current supplied by transistor V1602 which will flow in turns through the left hand or right hand transistor. The amplitude is 1,2 V or 6 div in the 20 mV/div attenuator positions. (The straight through position of the attenuator.)

Potentiometer R1607 allows accurate adjustment of the amplitude of the calibrator output voltage. This square-wave output voltage is taken off from the collector of transistor V1603 and fed to socket X1. This is the front panel CAL terminal.

The calibrator output signal can be used for probe compensation and/or checking the vertical deflection accuracy.

## 2.8. BASIC ANALOG AND DIGITAL CIRCUITS

This section describes briefly the most important characteristics of the analog and digital circuits to be found in the instrument.

### 2.8.1. Basic analog circuits (See Fig. 2.8.)

#### — SERIES FEEDBACK AMPLIFIER

This is also called a Cherry configuration.

A voltage signal  $\Delta U$  is applied to the input; the output produces a

$$\text{current signal } \Delta I = \frac{\Delta U}{R_E}$$

#### — SHUNT FEEDBACK AMPLIFIER

This is also called a Hooper configuration.

A current signal  $\Delta I$  is applied to the input; the output produces a voltage signal  $\Delta U = \Delta I \cdot R_F$

#### — SERIES FEEDBACK AMPLIFIER followed by a SHUNT FEEDBACK AMPLIFIER

This combination of the two previous configurations is called a Cherry-Hooper circuit.

In this two-stage amplifier, both the input and the output are voltage signals. The gain of this amplifier is:

$$\frac{\Delta U_{OUT}}{\Delta U_{IN}} = \frac{R_F}{R_E}$$

#### — EMITTER-FOLLOWER

The emitter-follower is used as an impedance converter.

The input impedance is HIGH and the output impedance is LOW. The stage has a voltage gain of x1, and the output voltage signal is identical to the input voltage.

#### — DARLINGTON PAIR

This circuit consists of two emitter-followers connected in cascade. As a result, the input impedance is very high and the output impedance low.

Again, this stage has a voltage gain of x1 and the output voltage signal is identical to the input voltage signal.

#### — COMMON BASE CIRCUIT

This type of circuit is frequently used between amplifier stages for d.c. voltage level adaption or for buffering. The input impedance is low and the output impedance is high.

It has a current gain of x1, the output current signal being identical to the input current signal.

#### — LONG-TAILED PAIR

In the diagram of Fig. 2.8, the long-tailed pair is formed by transistors V1 and V2. Transistor V3 functions as a constant-current source for V1 and V2.

The current drawn from V3 is divided between V1 and V2, the proportion depending on the base voltages applied ( $U_1$  and  $U_2$ ).

The division is as follows:

$$I_1 - I_2 = \frac{U_1}{R_{E1}} - \frac{U_2}{R_{E2}}$$

### 2.8.2. Basic digital circuits (see Fig. 2.9.)

The type of logic used is TTL and the supply voltage +5V.

The logic levels used are defined as follows:

- a high level (H) constitutes an input between 2 ... 5V and an output between 2.4 ... 5V.
- a low level (L) constitutes an input between 0 ... 0.8V and an output of between 0 ... 0.4V.

The following types of logic circuit elements are used in this instrument.

AND-gate:	In this gate, the output is only H if all the inputs are H. Therefore, if one input is low, the state of the other inputs is irrelevant and the output is L.								
NAND-gate:	The output is only L if all the inputs are H. Therefore, if one input is L the state of the other inputs is irrelevant and the output is H.								
OR-gate:	The output is only L if all inputs are L. If one input is H, then the state of the other inputs is irrelevant and the output is H.								
NOR-gate:	The output is only H if all inputs are L. Therefore, if one input is H, the state of the other inputs is irrelevant and the output is L.								
D-FLIP-FLOP:	<p>One integrated circuit incorporates two flip-flops.</p> <p>Each flip-flop has an output (pin 5 or 9) and an inverted output (pin 6 or 8). If the reset input R (pin 1 or 13) is made L it is activated and the flip-flop is forced to the reset state: output L and inverted output H. The set input S (pin 4 or 10) is active when L and forces the flip-flop to the set state: output H and inverted output L.</p> <p>If the set and reset inputs are both H, the condition of the clock input CL (pin 3 or 11) and the data input D (pin 2 or 12) are important.</p> <p>The logic level on the data input (L or H) is clocked into the flip-flop if the clock goes from L to H – now the output also becomes L or H.</p>								
JK FLIP-FLOP:	<p>One IC contains two flip-flops. Each flip-flop has an output (pin 5 or 9) and an inverted output (pin 6 or 7). If the reset input R (pin 15 or 14) is made L, it is activated and the flip-flop is forced to the reset condition: output L and inverted output H.</p> <p>The set input S (pin 4 or 10) is active when L and forces the flip-flop to the set condition: output is H and inverted output is L.</p> <p>If both the set and reset inputs are H, the condition of the clock input C (pin 1 or 13), the J-input (pin 3 or 11) and the K-input (pin 2 or 12) are important.</p> <p>If the clock input goes from H to L, the following occurs:</p> <table border="0"> <tr> <td>If J = L and K = L:</td><td>the output states remain unchanged.</td></tr> <tr> <td>If J = H and K = L:</td><td>the output becomes H and the inverting output L.</td></tr> <tr> <td>If J = L and K = H:</td><td>the output becomes L and the inverting output H.</td></tr> <tr> <td>If J = H and K = H:</td><td>the outputs switch to the opposite state.</td></tr> </table>	If J = L and K = L:	the output states remain unchanged.	If J = H and K = L:	the output becomes H and the inverting output L.	If J = L and K = H:	the output becomes L and the inverting output H.	If J = H and K = H:	the outputs switch to the opposite state.
If J = L and K = L:	the output states remain unchanged.								
If J = H and K = L:	the output becomes H and the inverting output L.								
If J = L and K = H:	the output becomes L and the inverting output H.								
If J = H and K = H:	the outputs switch to the opposite state.								

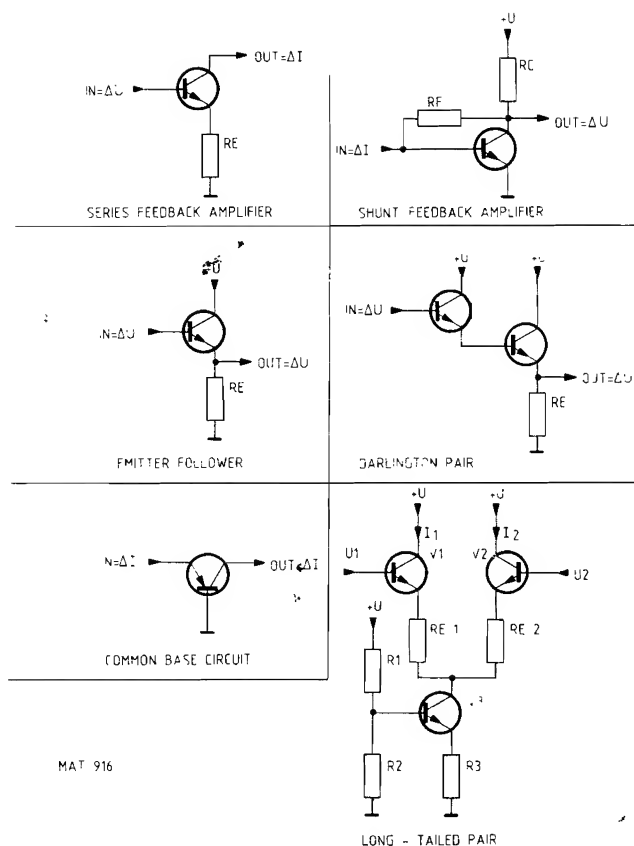


Fig. 2.8. Basic analog circuits

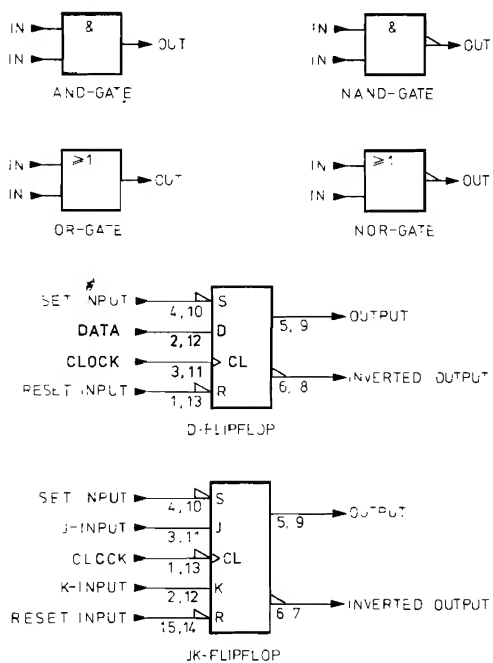


Fig. 2.9. Basic digital circuits

### 3. DISMANTLING THE INSTRUMENT

#### 3.1. GENERAL INFORMATION

This section provides the dismantling procedures required for the removal of components during repair operations.

All circuit boards removed from the instrument must be adequately protected against damage, and all normal precautions regarding the use of tools must be observed.

During dismantling a careful note must be made of all disconnected leads so that they can be reconnected to their correct terminals during assembly.

**CAUTION:** Damage may result if:

- The instrument is switched on when a circuit board has been removed.
- A circuit board is removed within one minute after switching-off the instrument.

#### 3.2. REMOVING THE INSTRUMENT COVERS

The instrument is protected by three covers: a front panel protection cover, a wrap-around cover with carrying handle, and a rear panel.

To facilitate removal of the wrap-around cover and the rear panel, first ensure that the front cover is in position.

Then proceed as follows:

- Hinge the carrying handle clear of the front cover; to this end, push both pivot centre buttons (Fig. 3.1.).
- Stand the instrument on its protective front cover on a flat surface.
- Slacken the two coin-slot screws located on the rear panel.
- Lift the rear panel and unplug the connector on the power supply board.
- Lift off the wrap-around cover.
- For access to the front-panel, stand the instrument horizontally and snap off the front cover.

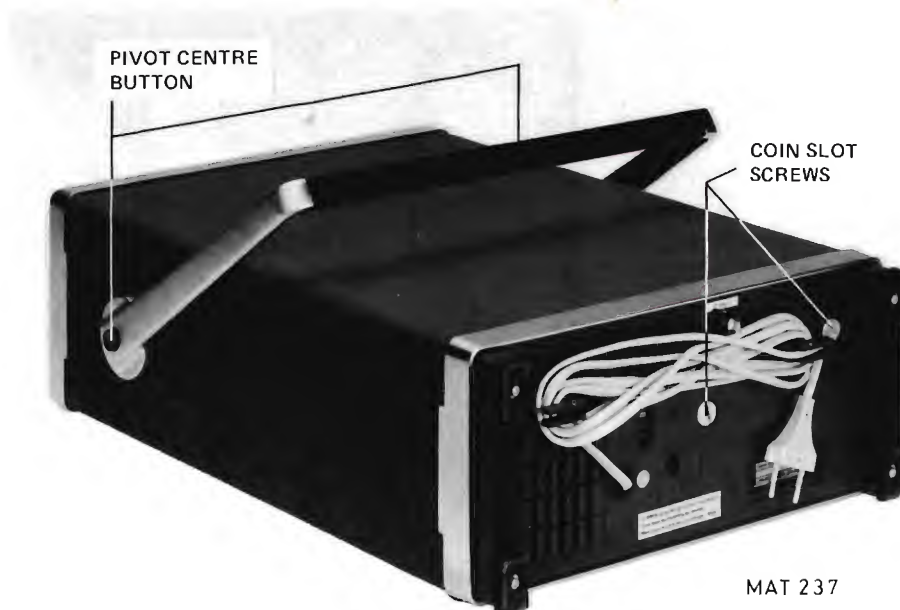


Fig. 3.1. Removing the instrument covers.

#### 3.3. ACCESS TO PARTS FOR CHECKING AND ADJUSTING PROCEDURE

All the adjustment elements can be reached after removing the instrument cover.

**NOTE:** For adjustment always use an insulated adjustment tool.

## 4. PERFORMANCE CHECK

### 4.1. GENERAL INFORMATION

**WARNING:** Before switching-on, ensure that the instrument has been installed in accordance with the Installation Instructions outlined in Section 2 of the Operating Manual.

This procedure is intended to:

- Check the instruments' specification.
- Be used for incoming inspection to determine the acceptability of newly purchased instruments and/or recently recalibrated instruments.
- Check the necessity of recalibration after the specified recalibration intervals.

**NOTE:** *The procedure does not check every facet of the instruments calibration; rather, it is concerned primarily with those parts of the instrument which are essential to measurement accuracy and correct operation. Removing the instruments covers is not necessary to perform this procedure. All checks are made from the outside of the instrument.*

If the test is started within a short period after switching-on, bear in mind that steps may be out of specification, due to insufficient warming-up time.

**Note 1:** *At the start of every check, the controls always occupy the preliminary settings; unless otherwise stated.*

**Note 2:** *The input voltage has to be supplied to the A-input; unless otherwise stated.*

**Note 3:** *Set the TIME/DIV switch to a suitable position; unless otherwise stated.*

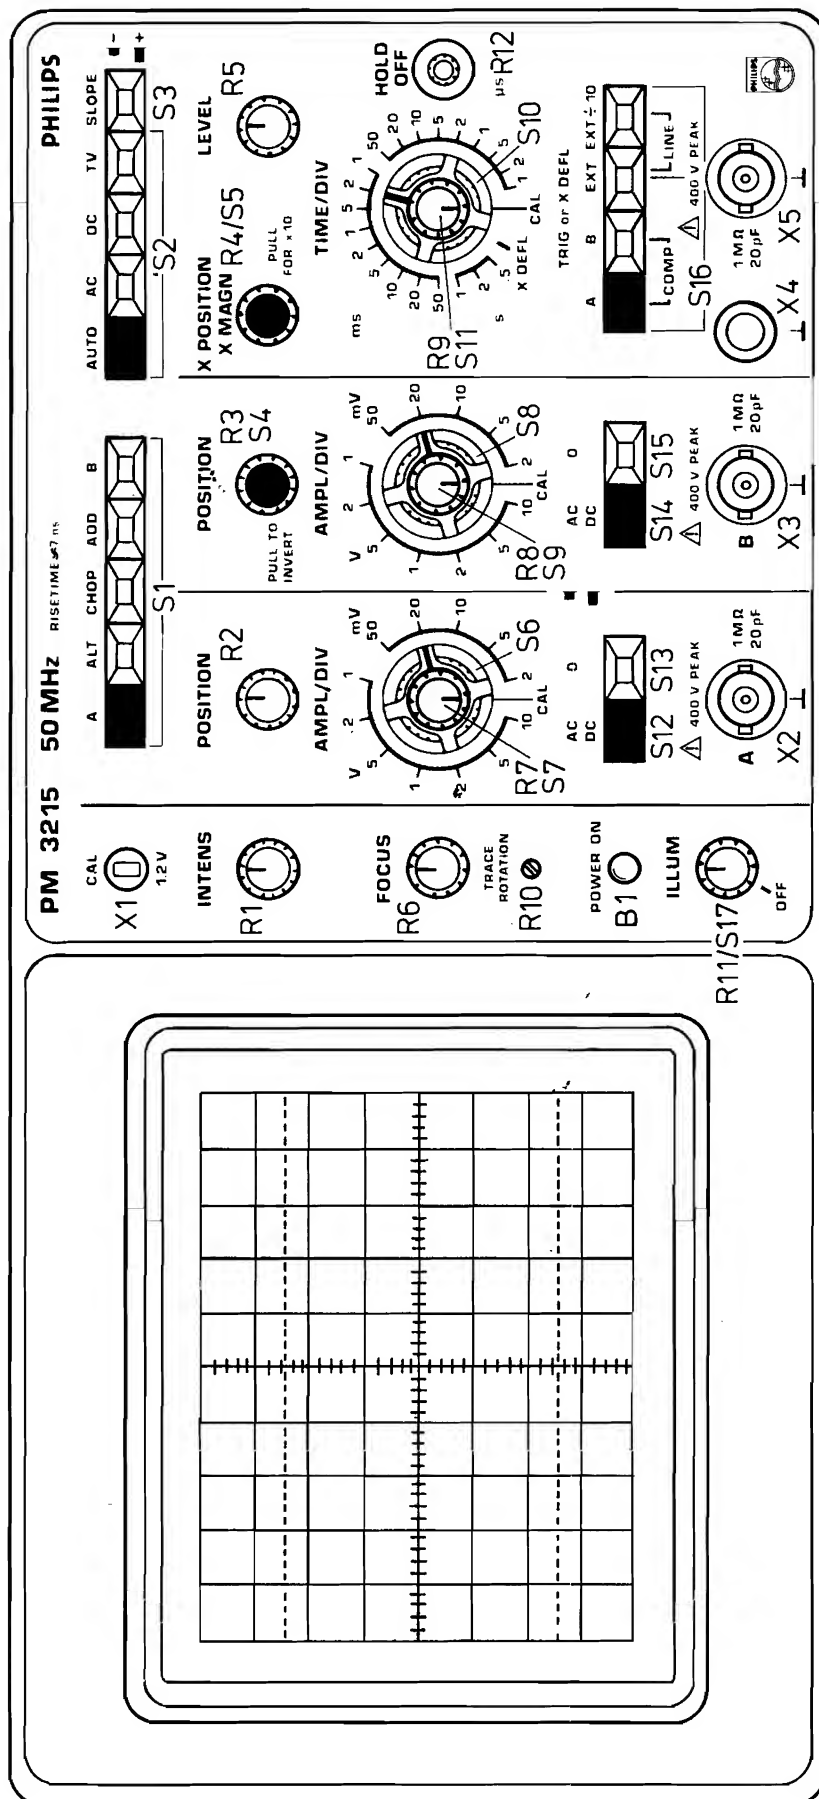


Fig. 4.1. Preliminary settings of the controls

## 4.2. PRELIMINARY SETTINGS OF THE CONTROLS



- Start this check procedure with **NO** input signals connected, **ALL** pushbuttons released and **ALL** switches in the CAL position.
- Depress the controls as indicated in figure 4.1.


## 4.3. RECOMMENDED TEST EQUIPMENT



Type instrument	Required specification	Example of recommended instrument
Function generator	Freq.: 1 mHz ... 10 MHz Sine-wave/Square-wave Ampl.: 0... 20 Vp-p DC offset 0...± 5 V Rise-time < 30 ns Duty cycle 50 %	Philips PM5134
Constant amplitude sine-wave generator	Freq.: 100 kHz ... 60 MHz Constant ampl. of 120 mVp-p and 3 Vp-p	Tektronix SG 503
Square-wave calibration generator	Freq.: 10 Hz ... 1 MHz Ampl.: 50 mV ... 60 V Rise-time < 1 ns Duty cycle 50 %	Tektronix PG 506
Time-marker generator	Repetition rate: 0,5 s ... 0,05 $\mu$ s	Tektronix TG 501
Variable mains transformer	Well-insulated output voltage 90 ... 264 Vac	Philips ord. number 2422 529 00005
DC power supply	Adjustable output: 20 ... 28 V Current: 1,5 A	Philips PE 1540
Moving-iron meter		
Dummy probe 2 : 1	$1 \text{ M}\Omega \pm 0,1 \% // 20 \text{ pF}$	
Cables, T-piece, terminations for the generators	General Radio types for fast rise-time square-wave and freq. sine-wave. BNC-typen for other applications	



## 4.4. CHECKING PROCEDURE


STEP	OBJECTIVE	INPUT VOLTAGE	SETTINGS	REQUIREMENTS	MEASURING RESULTS
4.4.1.	POWER ON				
4.4.1.a.	Start POWER ON a.c.		Set POWER ON switch S17 to ON	<ul style="list-style-type: none"> <li>Starts at selected mains voltage <math>\pm 10\%</math> and mains frequency 50-400Hz <math>\pm 10\%</math></li> <li>Pilot lamp POWER ON lights up 28W from a.c.</li> <li>Starts at battery supply voltages between 21V and 30V</li> <li>Pilot lamp POWER ON lights up 1,1A approx.</li> </ul>	
4.4.1.b.	Power consumption		Set POWER ON switch S17 to ON		
4.4.1.2.a.	Start POWER ON battery				
4.4.1.2.b.	Current rating				
4.4.2.	CRT SECTION				
4.4.2.1.	Intens		 INTENS potentiometer R1	Normal intens adjusting	
4.4.2.2.	Focus		 FOCUS potentiometer R6	Trace sharpness adjusting	
4.4.2.3.	Trace rotation		Screwdriver adjustment TRACE ROT R10	Trace must be in parallel with horizontal graticule lines; if necessary, readjust potentiometer TRACE ROT R10	
4.4.3.	VERTICAL AXIS				
4.4.3.1.	Display modes	Sine wave signal 60mVp-p, 2kHz to A and B input	— AMPL/DIV to 20mV/div Depress A of S1 Depress CHOP of S1 Depress ALT of S1 Depress ADD of S1 Depress B of S1	Signal of 3 div. is visible on the screen Traces of ch. A and ch. B are visible on the screen. Traces of ch. A and ch. B are visible on the screen. Signal of 6 div. is visible on the screen Signal of 3 div. is visible on the screen	


STEP	OBJECTIVE	INPUT VOLTAGE	SETTINGS	REQUIREMENTS	MEASURING RESULTS
4.4.3.2.	Polarity inversion ch.B.	as 4.4.3.1.	Pull the PULL TO INVERT switch S4	Display is inverted	
4.4.3.3.	Input coupling	Sine-wave signal, 2kHz + DC offset to A (B) input	Depress 0 of S13 (S15)  Release 0 of S13 (S15)  Release S12 (S14) to DC	Set the trace in the centre of the screen  Signal is visible on the screen, centre of the sine-wave is on the vertical centre of the screen  Signal is visible on the screen, centre of the sine-wave is on DC-offset level	
4.4.3.4.	Vertical deflection coefficients	Square wave signal, 2kHz to A (B) input  Ampl: 12mVp-p 30mVp-p 60mVp-p 120mVp-p 300mVp-p 600mVp-p 1,2Vp-p 3 Vp-p 6 Vp-p 12 Vp-p 30 Vp-p 30 Vp-p	AMPL/DIV switch position of S9 (S11)  2mV 5mV 10mV 20mV 50mV 0,1V 0,2V 0,5V 1 V 2 V 5 V 10 V  — AMPL/DIV switch position of S6 (S8) to 20mV/div. — Continuous control R7 (R8) 	Trace height 6 div. $\pm 3\%$ ( $\pm 0,9$ subdiv.) Trace height 6 div. $\pm 3\%$ ( $\pm 0,9$ subdiv.) Trace height 6 div. $\pm 3\%$ ( $\pm 0,9$ subdiv.) Trace height 6 div. $\pm 3\%$ ( $\pm 0,9$ subdiv.) Trace height 6 div. $\pm 3\%$ ( $\pm 0,9$ subdiv.) Trace height 6 div. $\pm 3\%$ ( $\pm 0,9$ subdiv.) Trace height 6 div. $\pm 3\%$ ( $\pm 0,9$ subdiv.) Trace height 6 div. $\pm 3\%$ ( $\pm 0,9$ subdiv.) Trace height 6 div. $\pm 3\%$ ( $\pm 0,9$ subdiv.) Trace height 6 div. $\pm 3\%$ ( $\pm 0,9$ subdiv.) Trace height 6 div. $\pm 3\%$ ( $\pm 0,9$ subdiv.) Trace height 6 div. $\pm 3\%$ ( $\pm 0,9$ subdiv.) Trace height 6 div. $\pm 3\%$ ( $\pm 0,9$ subdiv.) Trace height 6 div. $\pm 3\%$ ( $\pm 0,9$ subdiv.) Trace height 3 div. $\pm 3\%$ ( $\pm 0,45$ subdiv.) Continue range 1 : $\geq 2,5$ ( $\leq 2,4$ div.)	
4.4.3.5.	Continuous control	Square wave signal 120mVp-p, 2kHz to A (B) input			

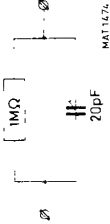



STEP	OBJECTIVE	INPUT VOLTAGE	SETTINGS	REQUIREMENTS	MEASURING RESULTS
4.4.3.6.	Vertical deflection via dummy, range capacitor 16 ... 24pF 	Square wave signal, 2kHz to A (B) input via dummy AMPL: 24mVp-p 60mVp-p 120mVp-p 240mVp-p 600mVp-p 1,2Vp-p 2,4Vp-p 6 Vp-p 12 Vp-p 24 Vp-p 30 Vp-p 40 Vp-p	AMPL/DIV switch position of S6 (S8)  2mV 5mV 10mV 20mV 50mV 0,1V 0,2V 0,5V 1 V 2 V 5 V 10 V  — AMPL/DIV switches to 20mV — Pull the PULL TO INVERT switch S4 — Depress ADD of S1  — AMPL/DIV to 0,1V — Position control R2 (R3)   as 4.4.3.8.  — Depress 0 of S13 (S15) — Set trace in centre of the screen — All positions of AMPL/DIV S6 (S8) except b. — AMPL/DIV switch S6 (S8) between 20mV → 10mV — Pull and push switch S14	Trace height 6 div. Trace height 6 div. Trace height 6 div. Trace height 6 div. Trace height 6 div. Trace height 6 div. Trace height 6 div. Trace height 6 div. Trace height 6 div. Trace height 3 div. Trace height 2 div. Rejection > 100 (signal < 0,25 div.)  24 div. trace height distortion free visible on the screen  Top of sine-wave signal visible on the screen in both extreme positions of the POSITION CONTROL  Trace jump ≤ 0,1 div.  Trace jump ≤ 1 div.  Trace jump ≤ 1 div.	
4.4.3.7.	Common mode rejection	Sine-wave signal 480mV, 1MHz to A and B input			
4.4.3.8.	Dynamic range	Sine-wave signal 2,4V, 10MHz to A (B) input			
4.4.3.9.	Vertical positioning	Sine-wave signal 2,4V 10kHz to A (B) input			
4.4.3.10.	Trace jump a. attenuator  b. 20mV → 10mV  c. normal/invert				

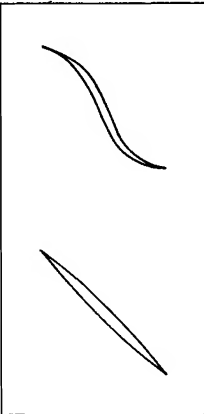STEP	OBJECTIVE	INPUT VOLTAGE	SETTINGS	REQUIREMENTS	MEASURING RESULTS
4.4.3.11.	Pulse aberrations	Square wave signal 120mVp-p, 1MHz risetime $\leq$ 1nsec.	— AMPL/DIV switch S6 (S8) to 20mV	Trace height 6 div. $\pm$ 3 div. from screen centre Pulse aberrations $\leq$ 3% ( $\leq$ 5% p-p)	
4.4.3.12.	Risetime	Square wave signal 100mVp-p, 1MHz, risetime $\leq$ 1msec. as 4.4.3.12.	— Set signal between dotted lines	Rise time measured between 10% and 90% (4 div.) must be $\leq$ 7 nsec. Leading edge visible on the screen	
4.4.3.13.	Visible signal delay		— AMPL/DIV to 20mV — PULL X MAGN S5 — MTB TIME/DIV to 0,1 $\mu$ s		
4.4.3.14.	Bandwidth	Sine-wave signal to A (B) input 1MHz  1MHz - 50 MHz		Adjust the sine-wave amplitude for a trace height of 6 div. Trace height $\geq$ 4,2 div.	

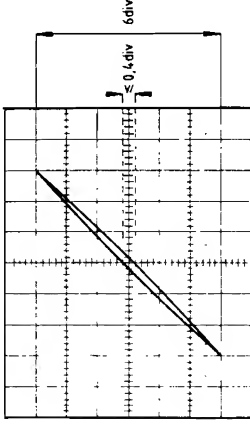

STEP	OBJECTIVE	INPUT VOLTAGE	SETTINGS	REQUIREMENTS	MEASURING RESULTS
4.4.4.1.	TIME BASE Time coefficients	Marker pulse signal to A input  Repetition time: 0,1µsec 0,2µsec 0,5µsec 1 µsec 2 µsec 5 µsec 10 µsec 20 µsec 50 µsec 0,1msec 0,2msec 0,5msec 1 msec 2 msec 5 msec 10 msec 20 msec 50 msec 0,1sec 0,2sec 0,5sec	– TIME/DIV switch positions:  0,1µs 0,2µs 0,5µs 1 µs 2 µs 5 µs 10 µs 20 µs 50 µs 0,1ms 0,2ms 0,5ms 1 ms 2 ms 5 ms 10 ms 20 ms 50 ms 0,1 s 0,5 s 0,5 s	Coefficient error ≤ 3% (c.i. 0,3 div. over 10 div. screenwidth)	
4.4.4.2.	X Magnifier	Marker pulse to A input, repetition time 0,1msec as 4.4.4.2.	– TIME/DIV switch to 1msec – PULL X MAGN S5	Coefficient error ≤ 5% (c.i. 0,5 div. over 10 div. screenwidth)	
4.4.4.3.	Continuous control		– TIME/DIV switch to 10µsec – Continuous control R9 ↻	Continuous range 1 : ≥ 2,5	

STEP	OBJECTIVE	INPUT VOLTAGE	SETTINGS	REQUIREMENTS	MEASURING RESULTS
4.4.5.	XY-DEFLECTION				
4.4.5.1.	Mode A (B)	Sine-wave signal 120mVp-p, 2kHz to A (B) input	Depress A (B) of S1 Depress A (B) of S16 Set TIME/DIV to X DEFL AMPL/DIV to 20mV	A line is visible with an angle of 45° with respect to the horizontal graticule line; trace height and trace width 6 div. ± 10% (c.i. ± 0,6 div.)	
4.4.5.2.	Mode EXT	Sine-wave signal 1,6Vp-p, 2kHz to EXT input X5	Depress EXT of S16 Set TIME/DIV to X DEFL	Trace width 8 div. ± 10%	
4.4.5.3.	Mode EXT ÷ 10	Sine-wave signal 16Vp-p, 2kHz to EXT input X5	Depress EXT ÷ 10 of S16 Set TIME/DIV to X DEFL	Trace width 8 div. ± 10%	
4.4.5.4.	Mode LINE		Depress LINE of S16 Set TIME/DIV to X DEFL	Trace width ≥ 8 div.	
4.4.5.5.	Bandwidth	Sine-wave signal, 2kHz to EXT input X5 1MHz 1MHz 1MHz	Depress EXT of S16 Set TIME/DIV to X DEFL	Adjust the input voltage for a trace width of 8 div.	
4.4.5.6.	Dynamic range	Sine-wave signal 1,2V - 100kHz to A input	Depress DC of S2 Depress AC of S2 — AMPL/DIV to 0,2V — AMPL/DIV to 50mV — Set TIME/DIV to X DEFL — Adjust Y pos. R2 and X pos. R4 to check the whole signal form	Trace width ≥ 5,6 div. Trace width ≥ 5,6 div. Trace width ≥ 5,6 div. Trace height is 6 div.	<p>— The displayed signal is visible distortion free, c.i. top and bottom are not compressed</p> 

STEP	OBJECTIVE	INPUT VOLTAGE	SETTINGS	REQUIREMENTS	MEASURING RESULTS
4.4.5.7.	Phase shift between X and Y amplifier	Sine-wave signal to A-input 2kHz 100kHz	<ul style="list-style-type: none"> <li>– Set TIME/DIV to X DEFL</li> <li>– AMPL/DIV to 20mV</li> </ul>	<p>Adjust the input voltage for a horizontal deflection of 6 div. Phase shift <math>\leq 30^\circ</math> (c.i. <math>\leq 0.4</math> div.)</p>  <p>(NOTE: If triggers the NOT TRIG'D lamp is extinguished)</p>	
4.4.6.	TRIGGERING				
4.4.6.1.	Trigger source A and B	Sine-wave signal, 10kHz to A input and square-wave signal, 2kHz to B input	<ul style="list-style-type: none"> <li>– Depress ALT of S1</li> <li>– Adjust the input signals for a trace height of 6 div. approx.</li> <li>– Depress B of S16</li> <li>– Depress COMP of S16</li> </ul>	Well triggered display of channel A	
4.4.6.2.	Trigger source EXT.	Sine-wave signal, 240mV, 2kHz to A input and EXT input X5	Depress EXT of S16	Well triggered display of channel B Well triggered display of channel A and channel B Well triggered display	
4.4.6.3.	Trigger source LINE	Sine-wave signal, related to mains frequency to A input	Depress LINE of S16	Well triggered display	

STEP	OBJECTIVE	INPUT VOLTAGE	SETTINGS	REQUIREMENTS	MEASURING RESULTS
4.4.6.4.	Slope	Sine-wave signal, 120mV, 2kHz to A input	— Release SLOPE S3 — Depress SLOPE S3	Signal triggers on positive going edge Signal triggers on negative going edge	
4.4.6.5.	Sensitivity INT	Sine-wave signal to A input frequency: 1Hz 5Hz 20Hz 5MHz 50MHz	Depress DC of S2 Depress AC of S2 Depress AUTO of S2	Signal triggers at 0,5 div. Signal triggers at 0,5 div. Signal triggers at 0,5 div. Signal triggers at 0,5 div. Signal triggers at 1 div.	
4.4.6.6.	Sensitivity EXT	Sine-wave signal to A input and EXT input X6 frequency: 5MHz 50MHz 5MHz 50MHz	Depress EXT of S16	Signal triggers at 0,15Vp-p Signal triggers at 0,2Vp-p Signal triggers at 1,5Vp-p Signal triggers at 2Vp-p Signal triggers at 0,7 div.	
4.4.6.7.	Sensitivity TV	TV signal to A input input	Depress TV of S2 Depress A of S16	Trace is triggered in the most extreme positions of the LEVEL control	
4.4.6.8.	LEVEL range	Sine-wave signal 80mVp-p 2kHz to A input	LEVEL control R5   Depress DC of S2 LEVEL control R5   AMPL/DIV to 10mV LEVEL control R5   Depress EXT of S16 LEVEL control R5 	Trace is not triggered in the most extreme positions of the LEVEL control Trace is triggered in the most extreme positions of the LEVEL control (range $\geq 8$ div.) Trace is triggered in the most extreme positions of the LEVEL control (range $\geq 1,6V$ )	



STEP	OBJECTIVE	INPUT VOLTAGE	SETTINGS	REQUIREMENTS	MEASURING RESULTS
4.4.6.9.	EXT trigger input impedance	<p>Sine-wave signal 2Vp-p 2kHz to A input and to EXT input via dummy</p> <p>Sine-wave signal 4Vp-p, 2kHz to A input and to EXT input via dummy</p>	<p>Depress EXT of S16 LEVEL control R5 </p> <p>LEVEL control R5 </p>	<p>Trace is not triggered in the most extreme positions of the LEVEL control</p> <p>Trace is triggered in the most extreme positions of the LEVEL control</p>	
4.4.7.	CALIBRATION			<p>Calibration voltage is 1,2Vp-p</p> <p>Calibration frequency is <math>\approx</math> 2kHz square wave</p>	
4.4.8.	Z-MODULATION (additional)	TTL compatible signal to Z-MOD input at the rear side		<p>Logic "1" is normal intensity</p> <p>Logic "0" is blanked</p>	

## **5. CHECKING AND ADJUSTING**

### **5.1. GENERAL INFORMATION**

The following information provides the complete checking and adjusting procedure for the oscilloscope. As various control functions are interdependent, a certain order of adjustment is often necessary. The procedure is, therefore, presented in a sequence which is best suited to this order, cross-reference being made to any circuit which may affect a particular adjustment.

Before any check or adjustment, the instrument must attain its normal operating temperature.

- Where possible, instrument performance is checked before an adjustment is made.
- Warming-up time under average conditions is 30 minutes.
- All limits and tolerances given in this section are calibration guides and should not be interpreted as instrument specifications unless they are also published in chapter 1.2. characteristics.
- Tolerances given are for the instrument under test and do not include test equipment error.
- The most accurate display adjustments are made with a stable, well-focused, low-intensity display. Unless otherwise noted, adjust the Intensity, Focus and Trigger Level controls as needed.
- Unless otherwise noted the controls occupy the same position as in the previous check.

### **5.2. RECOMMENDED TEST EQUIPMENT**

As indicated in chapter 4.3.

Additional equipment for the checking and adjusting procedure:

Digital multimeter e.g. PM 2522 (A).

Trimming tool set e.g. Philips 800 NTX.

### **5.3. PRELIMINARY SETTINGS OF THE CONTROLS**

As indicated in chapter 4.2.

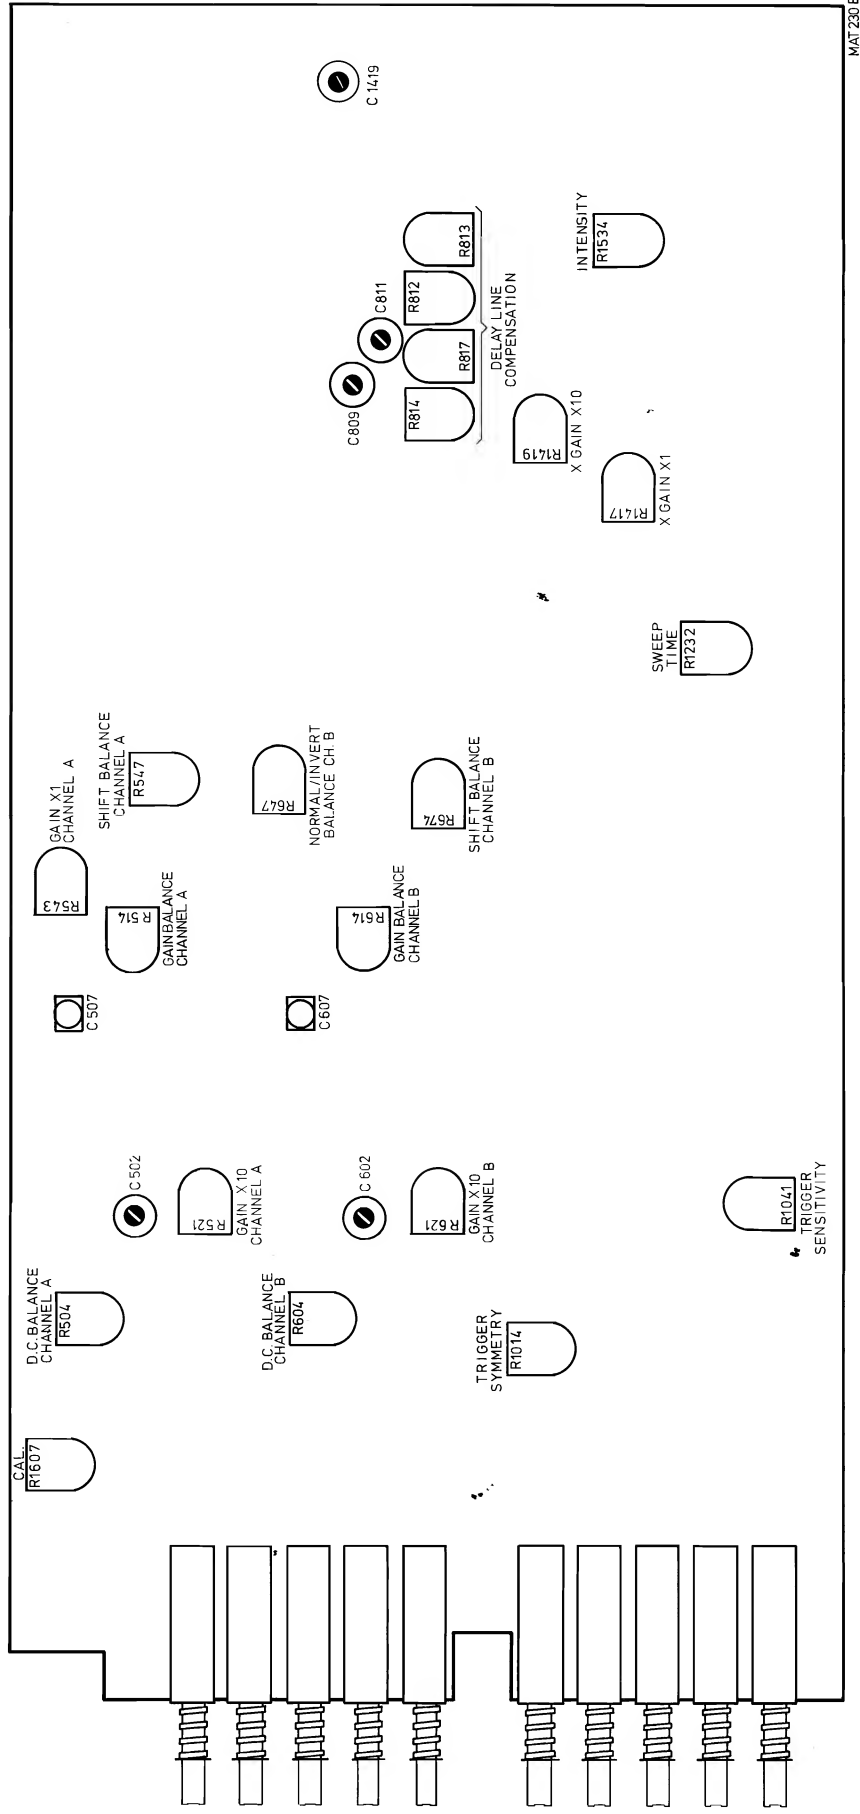


Fig. 5.1. Adjusting element amplifier board

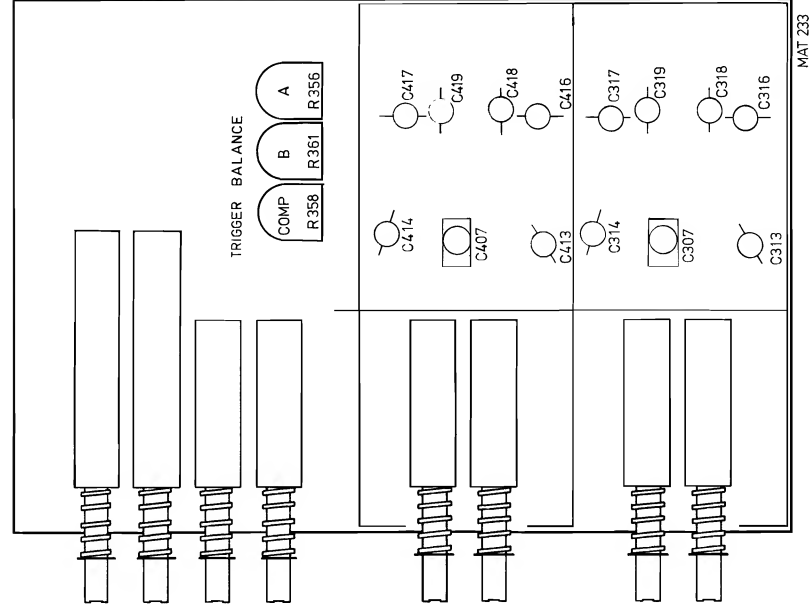


Fig. 5.2. Adjusting elements attenuator

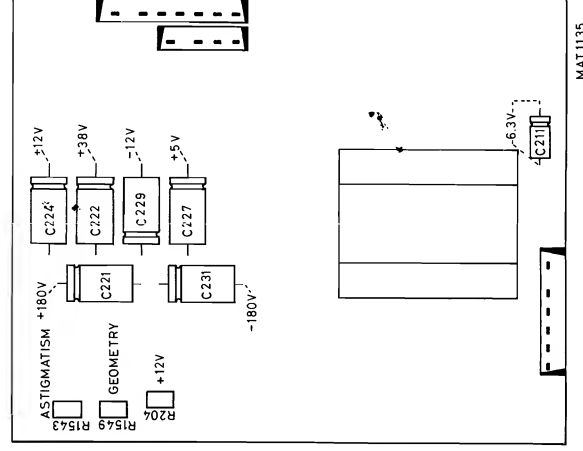


Fig. 5.3. Adjusting elements power supply

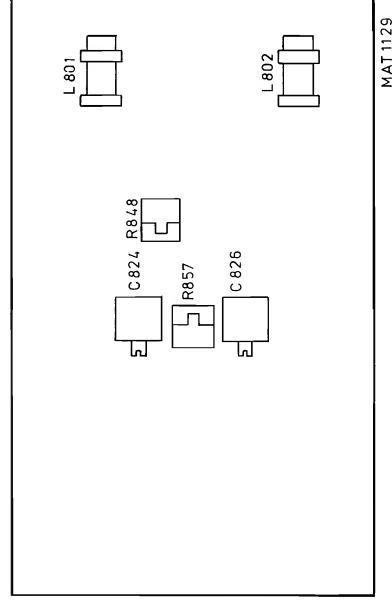


Fig. 5.4. Adjusting elements final amplifier

#### 5.4. SURVEY OF ADJUSTING ELEMENTS AND AUXILIARY EQUIPMENT

ADJUSTMENT	ADJUSTING ELEMENT	ADJUSTING RESULT	RECOMMENDED INSTRUMENT AND INPUT SIGNALS	CHAPTER	FIGURES
<b>Power supply</b> Supply voltage adjustment	R204	+ 12V, + or - 0,25V	Digital multimeter	5.5.1.	5.3.
<b>Cathode-ray tube circuit</b> Intensity Trace rotation	R1534 R10	Spot just not visible Trace runs exactly in parallel with horizontal graticule lines.	—	5.5.2.	5.1.
Focus and astigmatism	R1543	Sharp and well-defined trace.	—	5.5.2.	—
Geometrie	R1549	Displayed vertical lines as straight as possible and signal must fall in area.	Function generator, sine-wave signal 10kHz.	5.5.2.	5.3.
			Function generator, sine-wave signal 10kHz.	5.5.2.	5.3.
<b>Y-Amplifier balance.</b> DC balance	R504 (R604)	Minimum jump when switching 10mV - 20mV	—	5.5.3.	5.1.
Gain balance	R514 (R614)	Minimum jump when rotating AMPL/DIV control	—	5.5.3.	5.1.
Normal/invert balance ch.B	R647	Minimum jump when switching normal-invert.	—	5.5.3.	5.1.
Shift balance	R547 (R674)	Sine-wave displayed distortion free.	Function generator, sine-wave signal 10kHz.	5.5.3.	5.1.
<b>Trigger balances</b> A-balance	R356	Spot lies in centre of the screen.	—	5.5.4.	5.2.
B-balance	R361	Spot lies in centre of the screen.	—	5.5.4.	5.2.
COMP-balance	R358	Spot lies in centre of the screen.	—	5.5.4.	5.2.
<b>Time-base generator</b> Time coefficients	R1417	Centre 8 cycles occupy 8 divisions.	Time marker generator, time marker pulse 1μsec.	5.5.5.	5.1.
	R1419	Centre 8 cycles occupy 8 divisions.	Time marker generator, time marker pulse 0,1μ sec.	5.5.5.	5.1.
	R1232	Centre 8 cycles occupy 8 divisions	Time marker generator, time marker pulse 1msec.	5.5.5.	5.1.
	C1409	Beginning of the time-base as linear as possible.	Time marker generator, time marker pulse 10nsec.	5.5.5.	5.1.

<b>Vertical channels</b> Gain sensitivity x1 Gain sensitivity x10 Square-wave resp. attenuators	R848 (R543) R621 (R521) C407 (C307) C413 (C313) C414 (C314) C416 + C418 (C316 + C318) C417 + C419 (C317 + C319)	Signal occupies 6 divisions. Signal occupies 6 divisions. Optimal square-wave response pulse top errors + or - 0,5 subdiv. trace height 6div. + or - 0,5 subdiv. AMPL/DIV 20mV AMPL/DIV 50mV AMPL/DIV 0,1 V AMPL/DIV 0,2 V AMPL/DIV 2 V	Function generator, square-wave signal 2kHz. Function generator, square-wave signal 2kHz. Square-wave calibration generator, frequency 10kHz and risetime $\leq 100\text{nsec}$ .	5.1. 5.1. 5.2. 5.3.6.	5.5.6. 5.5.6. 5.5.6.
	Square-wave response final amplifier R813 R812 R814 L801 L802 R857 C826 C824 C809 R817 C811 C607 (C507) C602 (C502)	Optimal square-wave response pulse top errors + or - 0,5 sub- div. and risetime $\leq 7\text{nsec}$ . freq. 10 Hz 100kHz 100kHz-1MHz 1MHz 1MHz 1MHz 1MHz 1MHz 1MHz 1MHz 1MHz 1MHz	Square-wave calibration generator frequency 10kHz - 1MHz and risetime $\leq 1\text{nsec}$ .	5.1. 5.5.6.	5.5.6. 5.5.6.
	Cross talk R812 + R813 Triggering R1041 Trigger sensitivity Calibration R1607 Calibration voltage	Minimum cross talk Lowest signal with a triggered trace. Square-wave voltage $1,2V_{p-p} \pm 0,7\%$	Square-wave calibration generator, frequency 10kHz, risetime $\leq 1\text{nsec}$ . Function generator, square wave signal 2kHz.	5.1. 5.5.6. 5.5.7. 5.5.9.	5.1. 5.5.6. 5.5.7. 5.5.9.

## 5.5. CHECKING AND ADJUSTING PROCEDURE

The adjusting elements are indicated in Fig. 5.1., 5.2., 5.3. and 5.4.

### 5.5.1. Power supply

#### *Mains current*

- Check that the mains voltage adapter has been set to the local mains voltage and connect the instrument to such a voltage.
- Switch the oscilloscope on and check that the pilot lamp on the front panel lights up.
- Check that the current consumption does not exceed 150mA at 220V local mains and 300mA at 117 V local mains. (Measured with a moving iron meter).

#### *Supply voltages (Fig. 5.3.).*

- Check that the voltage on capacitor C224 is +12V, + or -0,25V; if necessary, readjust potentiometer R204.
- Check the supply voltages in accordance with the following table:

Voltage	Measuring point	Required value	Max. allowable ripple
+5 V	C227	+ 4,8 V to + 5,2 V	2mVp-p
+12V	C224	+11,75V to +12,25V	4mVp-p
- 12V	C229	- 11,75V to - 12,25V	4mVp-p
+38V	C222	+ 37 V to + 39 V	40mVp-p
+6,3V	C211	+5,7 V to +6,9 V	
+180V	C221	+171 V to +189 V	1 Vp-p
-180V	C231	-171 V to -189 V	1 Vp-p

- Vary the a.c. voltage to which the instrument is connected with + or -10% of the nominal voltage.
- Check that the supply voltage does not vary more than 2%.

### 5.5.2. Cathode-ray tube circuit

#### *Intensity*

- Set the controls as indicated in Fig. 4.1.
- Set the TIME/DIV switch to X DEFL.
- Set the INTENS control R1 to 90° from its left hand stop.
- Adjust potentiometer R1534 so that the spot is just not visible.
- Turn the INTENS control R1 fully anti-clockwise.

#### *Trace rotation*

- Set the TIME/DIV switch to 0,1ms/div.
- Centre the time-base line using the A POSITION control R2.
- Check that the time-base line runs exactly in parallel with the horizontal graticule lines; if necessary readjust the front panel TRACE ROTATION potentiometer R10.

#### *Focus and astigmatism*

- Set A AMPL/DIV switch to 0,1V/div.
- Set the TIME/DIV switch to 50μs/div.
- Apply a sine-wave voltage of approx. 600mVp-p, 10kHz to the A input socket X2.
- Set the INTENS control R1 for normal brightness.
- Adjust the FOCUS control R6 for a sharp and well-defined trace over the whole screen area; if necessary, readjust potentiometer R1543 (astigmatism).

*Geometrie*

- Set the TIME/DIV switch to 0,1ms/div.
- Apply a sine-wave voltage of 1,2Vp-p, 10kHz to the channel A-input X2.
- Check that the displayed vertical lines are as straight as possible and that the signal falls between  $95 \times 75 \text{ mm}^2$  and  $92,3 \times 73,4 \text{ mm}^2$ ; if necessary, readjust potentiometer R1549.
- Remove the input signal.

**5.5.3. Y-amplifier balance***General information*

The adjustments of the vertical amplifier channels A and B are identical. The knobs, sockets and adjusting elements of channel B are shown in brackets after those of channel A.

*D.C. balance*

- Set the controls as indicated in Fig. 4.1.
- Depress A (B) of S1.
- Depress O of S13 and S15.
- Centre the trace using the A (B) POSITION control R2 (R3).
- Check that the trace does not jump if AMPL/DIV switch S6 (S8) is rotated; if necessary, readjust potentiometer R504 (R604).

*Gain balance*

- Depress A (B) of S1.
- Check that the trace does not move when the AMPL/DIV control R6 (R7) is rotated; if necessary, readjust potentiometer R514 (R614).

*Normal/invert balance channel B*

- Depress B of S1.
- Check that the trace does not jump when PULL TO INVERT switch S4 is switched between normal and invert; if necessary, readjust potentiometer R647.

*Shift balance*

- Depress A (B) of S1.
- Depress A (B) of S16.
- Set the TIME/DIV switch to  $50 \mu\text{s}/\text{div}$ .
- Release O of S13 and S15.
- Apply a sine-wave voltage of 480mV p-p, 10kHz to the A (B) input socket X2 (X3).
- Check if the extremes of the sine-wave can be displayed distortion free on the screen by rotating the A (B) POSITION control R2 (R3); if necessary; readjust potentiometer R547 (R674).
- Remove the input signal.

#### 5.5.4. Trigger balances

##### *A-balance*

- Set the controls as indicated in Fig. 4.1.
- Shift the trace to the first vertical graticule line using the X-pos control R4.
- Set the TIME/DIV switch to X DEFL.
- Depress EXT of S16.
- Check that the spot lies in the centre of the screen; tol. 2 div.
- Depress DC of S2.
- Depress A of S16.
- Check that the spot lies in the centre of the screen; if necessary, readjust potentiometer R356.

##### *B-balance*

- Depress B of S16.
- Check that the spot lies in the centre of the screen; if necessary, readjust potentiometer R361.

##### *Comp.-balance*

- Depress A and B (= COMP) of S16.
- Check that the spot lies in the centre of the screen; if necessary, readjust potentiometer R358.

#### 5.5.5. Time-base generator

##### *Time-coefficients*

- Set the controls as indicated in Fig. 4.1.
  - Set the TIME/DIV switch to  $1\mu\text{s}/\text{div}$ .
  - Depress DC of S2.
  - Release S12 to DC.
  - Apply a time-marker voltage with a repetition time of  $1\mu\text{s}$  and an amplitude of 80mVp-p to the A input socket X2.
  - Check that the central 8 cycles occupy 8 divisions; if necessary, readjust potentiometer R1417.
  - Pull the X MAGN switch S5 to x10.
  - Change the repetition time of the applied input signal to  $0,1\mu\text{s}$ .
  - Check that the central 8 cycles occupy 8 divisions; if necessary, readjust potentiometer R1419.
  - Push the X MAGN switch S5 to x1.
  - Set the TIME/DIV switch to  $1\text{ms}/\text{div}$ .
  - Change the repetition time of the applied input signal to 1ms.
  - Check that the central 8 cycles occupy 8 divisions; if necessary, readjust potentiometer R1232.
  - Pull the X MAGN switch S5 to x10.
  - Set the TIME/DIV switch to  $0,1\mu\text{s}/\text{div}$ .
  - Change the repetition time of the applied input signal to 10ns.
  - Set the X POS control R4 fully clockwise.
  - Check that the beginning of the time-base is as linear as possible; if necessary, readjust trimmer C1409.
  - Push the X MAGN switch S5 to x1.
  - Check all TIME/DIV switch positions.
- The repetition time of the applied input signal should correspond to the position of the TIME/DIV switch. The central 8 cycles should always occupy 8 divisions; tolerance + or - 1 subdivision (2 subdivisions with the X MAGN switch S5 to x10).
- Check that in all the positions of the TIME/DIV switch, the time-base length is at least 10 divisions.
  - Check the control range of the TIME/DIV potentiometer R9 in the position  $0,2\text{ms}/\text{div}$  of the TIME/DIV switch. The range must be between 1 : 2,6 and 1 : 3,5.

##### *Hold off*

- Set the TIME/DIV switch to  $1\mu\text{s}/\text{div}$ .
- Turn the HOLD OFF control R12 fully clockwise.
- Turn the HOLD OFF control slowly anti-clockwise and check that the brightness of the trace decreases. Also check that the starting point of the trace does not change.



### 5.5.6. Vertical Channels

#### General Information

The adjustments of the vertical amplifier channel A and B are identical. The knobs, sockets and adjusting elements of channel A are shown in brackets after those of channel B.

#### Gain sensitivity $\times 1$

- Set the controls as indicated in Fig. 4.1.
- Depress B (A) of S1.
- Release S14 and S12 to DC.
- Set B (A) AMPL/DIV switch to 20mV/div.
- Set TIME/DIV switch to 0,2ms/div.
- Depress B (A) of S16.
- Apply a square-wave voltage of 120mVp-p frequency 2kHz, to the B (A) input socket X3 (X2).
- Check that the signal occupies 6 divisions; if necessary, readjust potentiometer R848 (R543).
- Repeat the measurement for channel A.

#### Gain sensitivity $\times 10$

- Depress B (A) of S1.
- Set B (A) AMPL/DIV switch to 2mV/div.
- Depress B (A) of S16.
- Apply a square-wave voltage of 12mVp-p, frequency 2kHz, to the B (A) input socket X3 (X2).
- Check that the signal occupies 6 divisions; if necessary, readjust potentiometer R621 (R521).
- Repeat the measurement for channel A.

#### Square-wave response attenuators


- Depress B (A) of S1.
- Set the TIME/DIV switch to 20 $\mu$ s/div.
- Depress B (A) of S16.
- Apply a square-wave voltage with an amplitude as indicated in the following table, a frequency of 10kHz and a risetime  $\leq 100$ ns to the B (A) input socket X3 (X2).
- Check that the pulse top errors do not exceed + or - 0,5 subdivision and that the trace height is 6 divisions + or - 0,5 subdivision; if necessary, readjust the relevant trimmer.

B (A) Ampl.	YB (YA) input signal	Adjuster
2mV	12mV	
5mV	30mV	
10mV	60mV	
20mV	120mV	C407 (C307)
50mV	300mV	C413 (C313)
0,1V	600mV	C414 (C314)
0,2V	1,2V	C416 + C418 (C316 + C318)
0,5V	3 V	
1 V	6 V	
2 V	12 V	C417 + C419 (C317 + C319)
5 V	30 V	
10 V	60 V	

- Remove the input signal.

Input capacitance

- Apply a square-wave voltage with an amplitude as indicated in the following table, frequency 10kHz and rise time  $\leq 100\text{ns}$  to the B (A) input socket X3 (X2) via a dummy probe.

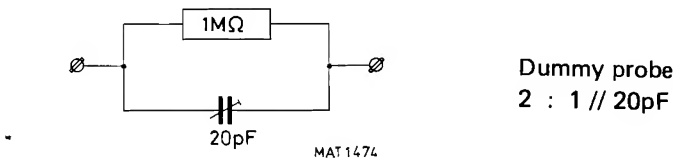


- Check that the pulse top errors do not exceed + or - 0,5 subdivision and that the trace height is 6 divisions + or - 0,5 subdivision.

B (A) Ampl.	YB (YA) input signal	Adjuster
2mV	24mV	Cv dummy
5mV	60mV	Cv dummy
10mV	120mV	Cv dummy

- Check that the difference in input capacitance do not exceed 1pF.
- Remove the input signal.

Square-wave response

- Depress B of S1.
- Set the B AMPL/DIV switch to 20mV/div.
- Depress B of S16.
- Set the TIME/DIV switch to .1  $\mu\text{s}/\text{div}$ .
- Apply a square-wave voltage of 120mVp-p (or 300 mVp-p), frequency 1MHz and a risetime  $\leq 1\text{ns}$  to the B input socket X3.
- Set the adjusting elements C809, C811, R817 and C607 on the Amplifier unit and C824, C826 and R857 on the Final Amplifier unit in their mid-position.
- Set level \*A\* (see figure below) of the square-wave signal to the lowest horizontal graticule line.
- Adjust L801 and L802 for minimal pulse aberrations.
- Check the square-wave response; pulse top errors may not exceed 0,5 subdiv. in the 20mV, 50mV and INVERT position of channel B.
- If necessary, readjust the adjusting elements according to the figure below.

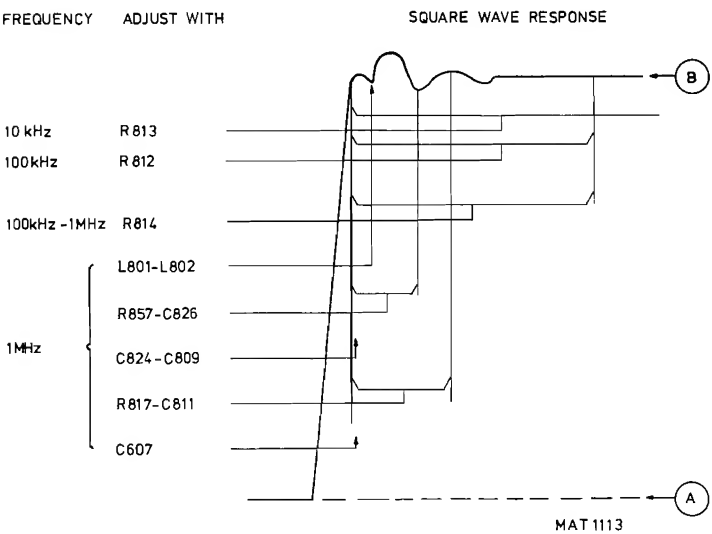

NOTE: The cores of L801 and L802 must be turned into the coils as far as possible (not necessarily equal).

- Set level \*B\* of the square-wave signal to the lowest horizontal graticule line.
- Check that the pulse top errors do not exceed + or –1 subdivision.
- Check and readjust the square-wave response according to the table below.

<i>Channel</i>	<i>AMPL/DIV</i>	<i>Input signal</i>	<i>Trace height</i>	<i>Rep rate</i>	<i>Adj. with</i>	<i>Max. error</i>
B	2mV/div.	12mV	6div.	1MHz	C602	0,5 subdiv.
A	20mV/div.	120mV	6div.	1MHz	C507	0,5 subdiv.
A	2mV/div.	12mV	6div.	1MHz	C502	0,5 subdiv.

#### *Cross talk*

- Depress CHOP of S1.
- Set the A and B AMPL/DIV switches to 20mV/div.
- Set the TIME/DIV switch to 0,5ms/div.
- Depress O of S13.
- Depress B of S16.
- Apply a square-wave voltage of 120mVp-p, frequency 10kHz and a risetime  $\leq 1$ ns to the B input socket X3.
- Check that the crosstalk between both channels is as small as possible; if necessary, readjust potentiometers R812 and R813.
- Remove the input signal.

#### *Bandwidth*

- Depress A (B) of S1.
- Set A (B) AMPL/DIV switch to 2mV/div.
- Set TIME/DIV switch to 0,1ms/div.
- Release O of S13 and S15.
- Depress A (B) of S16.
- Apply a sine-wave signal of 12mVp-p, frequency 100kHz and risetime  $\leq 1$ ns to the A(B) input socket X2 (X3).
- Check that the trace height is 6 div.
- Increase the frequency of the input signal to 50MHz and check that the trace height is at least 4,8 div. at all input frequencies to 50MHz.
- Repeat the measurement for channel B.

#### *Common-mode rejection*

- Depress ADD of S1.
- Pull S4 to INVERT.
- Set A and B AMPL/DIV switches to 20mV/div.
- Apply a sine-wave signal of 480mVp-p frequency 1MHz to both A and B input sockets X2 and X3.
- Check that the rejection factor is  $\geq 100$ x.
- Increase the frequency of the input signal to 10MHz.
- Check that the rejector factor is  $\geq 50$ x.
- Push S4 to NORM.
- Remove the input signal.

#### *Alternate and chopped mode*

- Depress ALT of S1.
- Set TIME/DIV switch to 10ms.
- Depress O of S13 and S15.
- Check that the two traces are displayed alternately.
- Depress CHOP of S1.
- Check that the two traces are displayed simultaneously.

### 5.5.7. Triggering

#### *Trigger slope*

- Set the controls as indicated in Fig. 4.1.
- Depress O of S13.
- Set the LEVEL control R5 to its mid position.
- Check that the DC-output voltage of the trigger amplifier (c.i. collector of V1014) does not change if the SLOPE pushbutton is switched between + and –.  
If necessary, readjust potentiometer R1014.
- Release S12 to DC.
- Release O of S13.
- Apply a sine-wave signal of 120mVp-p, frequency 2kHz to the A input socket X2.
- Depress SLOPE switch S3 to the – position and check that the trace starts with a negative going edge.
- Release SLOPE switch S3 to the + position and check that the trace starts with a positive going edge.

#### *Trigger sensitivity*

- Find the lowest possible input signal at which it is still possible to obtain a triggered trace with the aid of the LEVEL control R5 and potentiometer R1041.

#### *Trigger level internal*

- Depress AC of S2.
- Apply a sine-wave signal of 80mVp-p, frequency 2kHz to the A input socket X2.
- Check that the starting point of the trace moves upwards when the LEVEL control R5 is turned clockwise.
- The trace may not be triggered if the LEVEL control is set in its both extreme positions.
- Increase the amplitude of the applied input signal to 400mVp-p.
- Check that the trace is triggered if the LEVEL control R5 is set in its both extreme positions.

#### *Trigger level auto*

- Depress AUTO of S2.
- Apply a sine-wave signal for a trace equivalent of 6 divisions, frequency 100Hz to the A input socket X2.
- Check that the starting point of the sine-wave can be shifted across approx. 3 divisions with the aid of the LEVEL control R5.

#### *Trigger level EXT and EXT ÷ 10*

- Depress AC of S2.
- Depress EXT of S16.
- Apply a sine-wave signal of 800mVp-p, frequency 2kHz to the A input socket X2 and the EXT input socket X5.
- Check that the starting point of the sine-wave can be shifted across the entire amplitude with the aid of the LEVEL control R5.
- Depress EXT ÷ 10 S16.
- Increase the input voltage to 8Vp-p.
- Check that the starting point of the sine-wave can be shifted across the entire amplitude with the aid of the LEVEL control R5.

*Trigger sensitivity*

- Apply a sine-wave signal with a frequency as given in the table below, to the A-input X2; B-input X3 or EXT input X5.
- Adapt the setting of TIME/DIV switch to the frequency of the input signal.
- Check the trigger sensitivities in accordance to the table below.

<i>Signal to</i>	<i>Frequency</i>	<i>S16</i>	<i>S2</i>	<i>Trace height</i>
YA	10 Hz	A	AUTO	≤ 0,7 div.
YA	10 kHz	A	AUTO	≤ 0,7 div.
YA	50 MHz	A	AUTO	≤ 0,8 div.
YA	20 Hz	A	AC	≤ 0,7 div.
YA	50 MHz	A	AC	≤ 0,8 div.
YA	50 MHz	A	DC	≤ 0,8 div.
YB	20 Hz	B	DC	≤ 0,7 div.
YB	50 MHz	B	DC	≤ 0,8 div.
YB	50 MHz	COMP	DC	≤ 0,8 div.
EXT	20 Hz	EXT	DC	≤ 140mV
EXT	50 MHz	EXT	DC	≤ 140mV
EXT	50 MHz	EXT ÷ 10	DC	≤ 1,4V

*Line-triggering*

- Depress A of S1.
- Depress AUTO of S2.
- Depress B of S16.
- Set the TIME/DIV switch to 2ms/div.
- Release S12 to DC.
- Apply a mains voltage derived signal of 10mVp-p via a mains transformer to the A input X2.
- Check that the trace is not triggered.
- Depress EXT and EXT ÷ (= LINE) of S16.
- Check that the trace is triggered.
- Remove the input signal.

*TV triggering*

- Depress TV of S2.
- Depress A of S16.
- Apply a TV signal with a synchronisation pulse of 14mVp-p to the A input X2.
- Release SLOPE S3 for a TV signal with positive video.
- Check that a triggered display is visible on the screen.
- Depress SLOPE S3 for a TV signal with negative video.
- Check that a triggered display is visible on the screen.
- Increase the amplitude of the synchronisation pulse to 40mVp-p.
- Check that a triggered display is visible on the screen.
- Release SLOPE S3.
- Remove the input signal.

**5.5.8. X-Deflection***Sensitivity*

- Set the controls as indicated in Fig. 4.1.
- Set the TIME/DIV switch to X DEFL.
- Depress EXT of S16.
- Apply a sine-wave voltage of 1,6Vp-p, frequency 2kHz to the EXT input socket X5.
- Check that the trace length is 8 divisions ± 1 division.
- Remove the input signal.

*Bandwidth X-ampl.*

- Apply a sine-wave voltage with a frequency of 2kHz to the EXT input socket X5 and adjust the amplitude of the input voltage so that the trace length is 8 divisions.
- Increase the frequency of the input voltage to 1MHz.
- Check that the trace length is at least 5,6 divisions.
- Remove the input signal.

*X-Deflection with a line signal*

- Depress EXT and EXT ÷ 10 (= LINE) of S16.
- Check that the trace length is  $\geq 8$  divisions.

*Horizontal sensitivity via YA*


- Depress B of S1.
- Depress A of S16.
- Apply a sine-wave voltage of 120mVp-p, frequency 2kHz to the A input socket X2.
- Check that the trace length is 6 divisions  $\pm 0,6$  division.
- Remove the input signal.

*Horizontal sensitivity via YB*

- Depress A of S1.
- Depress B of S16.
- Apply a sine-wave voltage of 120mVp-p, frequency 2kHz to the B input socket X3.
- Check that the trace length is 6 divisions  $\pm 0,6$  division.

*Phase difference between X and Y channels*

- Depress B of S1.
- Check that the line is displayed under an angle of  $45^\circ$  with the horizontal central line.
- Increase the frequency of the input to 100kHz.
- Check that the phase error does not exceed  $3^\circ$  ( $\leq 2$  subdivisions).
- Remove the input signal.

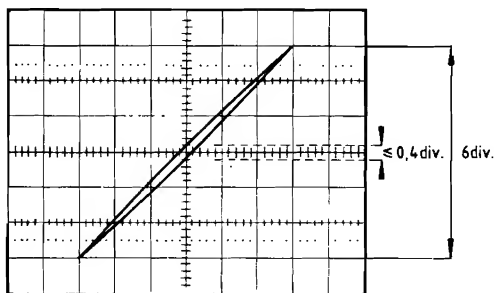

MAT 985

**5.5.9. Calibration voltage**

- Check that the voltage on the CAL output X1 is a square-wave voltage of 1,2Vp-p  $\pm 0,7\%$  ; if necessary, readjust potentiometer R1607.
- Check that the frequency of the CAL voltage is 2kHz  $\pm 10\%$ .

## 5.6. ADJUSTMENT INTERACTIONS

ADJUSTMENT MADE		ADJUSTMENTS AFFECTED	
		POWER SUPPLY	CRT DISPLAY ADJUSTMENTS
		Supply voltage	Intensity
			Trace rotation
			Focus and astigmatism
			Geometrie
			Y-AMPLIFIER BALANCE
			Attenuator balance
			Normal-Invert balance
			Shift balance
			TRIGGER BALANCES
			A balance
			B balance
			COMP balance
			TIME-BASE GENERATORS
			MTB-time coefficients
			DTB-time coefficients
			DELAY TIME multiplier
			Trace separation
			VERTICAL CHANNELS
			Gain x1
			Gain x10
			Square wave resp. attenuators
			Square wave resp. final amplifier
			Crosstalk
			TRIGGERING
			Trigger sensitivity
			CALIBRATION
			Calibration voltage
POWER SUPPLY			
Supply voltage adjustment			
CRT DISPLAY ADJUSTMENTS			
Intensity			
Trace rotation			
Focus and astigmatism			
Geometrie			
Y-AMPLIFIER BALANCE			
Attenuator balance			
Normal-Invert balance			
Shift balance			
TRIGGER BALANCES			
A balance			
B balance			
COMP balance			
TIME-BASE GENERATORS			
MTB-time coefficients			
DTB-time coefficients			
DELAY TIME multiplier			
Trace separation			
VERTICAL CHANNELS			
Gain x1			
Gain x10			
Square wave resp. attenuators			
Square wave resp. final amplifier			
Crosstalk			
TRIGGERING			
Trigger sensitivity			
CALIBRATION			
Calibration voltage			

## 6. CORRECTIVE MAINTENANCE

### 6.1. REPLACEMENTS

**WARNING:** The EHT-cable is unbreakably connected to the EHT multiplier unit. The cable can be disconnected from the CRT. When the EHT-cable is disconnected from the CRT the end of the cable must be discharged immediately by shorting it to the instrument's earth.

#### Standard parts

Electrical and mechanical replacement parts can be obtained through your local Philips organisation or representative. However, many of the standard electronic components can be obtained from other local suppliers.

Before purchasing or ordering replacement parts, check the parts list for value tolerance, rating and description.

*Note: Physical size and shape of a component may affect instrument performance, particularly at high frequencies. Always use direct-replacement components, unless it is known that a substitute will not degrade instrument performance.*

#### Special parts

In addition to the standard electronic components, some special components are used.

These components are manufactured or selected by Philips to meet specific performance requirements.

#### Transistors and integrated circuits

Transistors and I.C.'s (integrated circuits) should not be replaced unless they are actually defective. If removed from their sockets during routine maintenance return them to their original sockets. Unnecessary replacement or switching of semiconductor devices may affect the calibration of the instrument. When a transistor is replaced, check the operation of the part of the instrument that may be affected.

**WARNING:** Handle silicone grease with care. Avoid getting silicone grease in the eyes. Wash hands thoroughly after use.

Any replacement component should be of the original type or a direct replacement. Bend the leads to fit the socket and cut the leads to the same length as on the component being replaced.



### 6.1.1. Replacing internal fuses and mains transformer

- Remove the rear cover and instrument cover as described in chapter 3.2.
- Now three fuses are accessible:
  - Thermal fuse of the mains transformer.
  - Fuse 201 of external battery supply protection.
  - Fuse 202 of power supply protection.

#### 6.1.1.1. Replacing the mains transformer

- Take the lid of the voltage adapter compartment after removing the 4 cross-slotted screws.
- Remove the 4 cross-slotted screws that hold the lid of the transformer compartment.
- Lift the lid with the attached transformer, simultaneously sliding the wire from between transformer and voltage adapter out of the slit in the transformer compartment.
- The transformer is then accessible for replacement.

#### 6.1.1.2 Replacing the thermal fuse

- Remove the mains transformer.
- Unsolder fuse terminals 1 and 2 (Fig. 6.1. and Fig. 6.2.).
- Only the fuse wire of the old fuse is replaced and not the complete fuse; to this end, bend the housing of the fuse slightly outwards, disengage the locking pin and pull out the wire.
- Take the new fuse and remove the fuse wire out of its housing in the same way as described above.
- Push the new fuse wire into the housing of the old one until the locking pin snaps into the hole. The loop in the fuse wire must point to terminal 1.
- Solder the fuse wire to terminals 1 and 2.

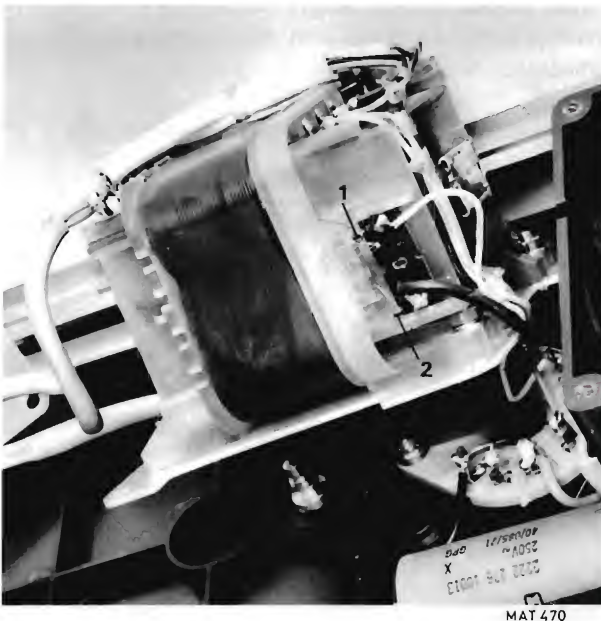


Fig. 6.1. Mains transformer with incorporated thermal fuse.

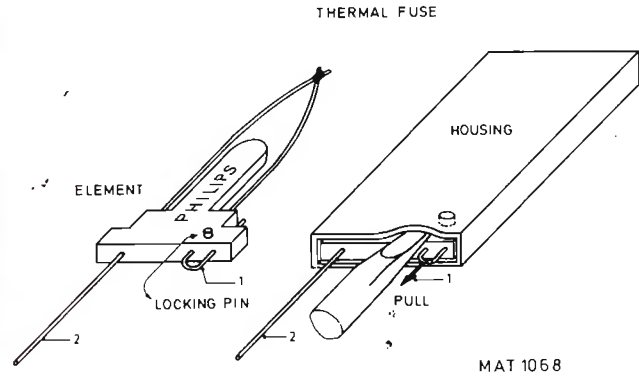


Fig. 6.2. Thermal fuse.

#### 6.1.1.3. Replacing fuse F201 and F202

These fuses are situated on the power supply unit and can easily be replaced.

### 6.1.2. Replacing single knobs

- Prise off cap A.
- Slacken screw (or nut) B.
- Pull the knob from the spindle.

When fitting a knob or cap, ensure that the spindle is in a position which allows reference lines to be coincident with the markings on the text plate of the oscilloscope.

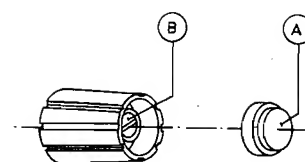


Fig. 6.3.

### 6.1.3. Replacing double knobs

- Prise off cap A and slacken screw B.
- Pull the inner knob from the spindle.
- Slacken nut C and pull the outer knob from the spindle.

When fitting a knob or cap, ensure that the spindle is in a position which allows reference lines to be coincident with the markings on the text plate of the oscilloscope.

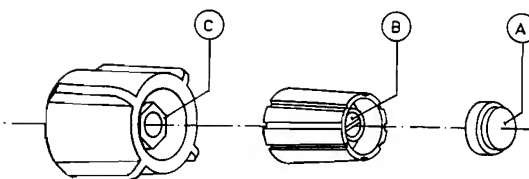


Fig. 6.4.

MAT 163

### 6.1.4. Removing the textplate

- After having removed all knobs the textplate can be removed by loosening the four hexagonal nuts of the AMPL/DIV and TIME/DIV switches.

### 6.1.5. Removing the front assembly

In order to gain access to parts on the AMPL/DIV switches, to replace trimmer capacitors or other components on the attenuator board, it is best to remove the front panel assembly as a whole in accordance with the following procedure:


- Remove the instrument covers in accordance with section 3.2.
- Remove the INTENS, FOCUS and ILLUM knobs by pulling them off the shaft.
- Remove the earthing terminal at the front.
- Remove the three screws A (Fig. 6.5.)
- Remove the two screws B that hold the attenuator to the frame bar (Fig. 6.6.).
- Remove the three screws C (Fig. 6.7.)
- Make a note of the positions of the miniature socket connections on the amplifier board.
- Remove all plugs, miniature sockets, coaxial sockets and clamping terminals from the unit and the amplifier board.
- Remove the complete front assembly from the instrument: screening covers can then be removed to gain access to and remove parts.
- When the front panel assembly is reinstalled, make sure not to interchange the connections of the Y position controls. The connections are correct when the trace shifts upwards if the Y position control is rotated clockwise.

### 6.1.6. Replacing the cathode-ray tube

- Remove the instrument covers and rear frame (section 3).
- Remove bezel and contrast plate.
- Unplug the connectors on the c.r.t. neck.
- Ease the base socket off the c.r.t.
- Slacken the brace around the c.r.t. neck.
- Unplug the trace rotation coil connector on the amplifier board and pull cable and plug through the elongated hole in the centre frame.
- Withdraw the c.r.t. through the front panel until the e.h.t. connector at the side of the tube becomes accessible.
- Remove the e.h.t. connector.
- Take the c.r.t. out of the instrument via the front panel; mind the wire and plug of the trace rotation coil.
- Install a c.r.t. in reverse order; position the c.r.t. screen flush with the contrast plate. The torque applied to the screw of the brace around the c.r.t. neck must be between 0,4 and 0,6Nm.


**WARNING:** Handle the CRT carefully. Rough handling or scratching can cause the CRT to implode.

In particular be very careful with the side connections of the CRT. If these pins are bent the CRT is likely to develop a loss of vacuum.

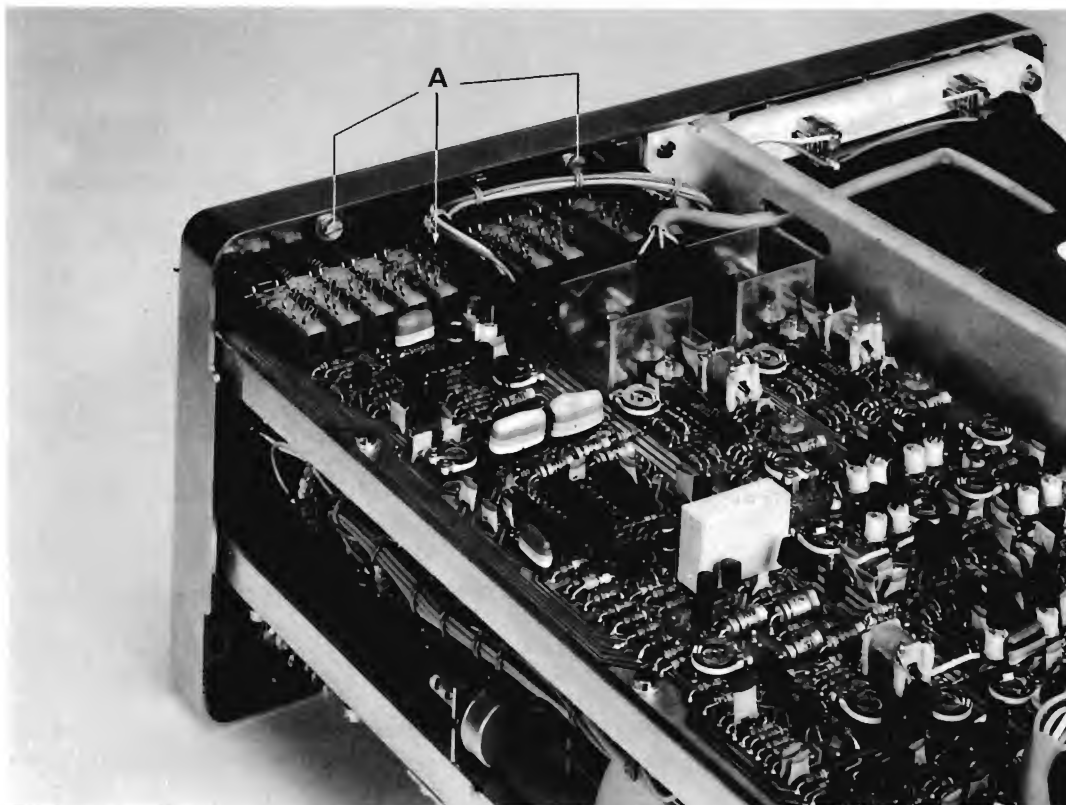


MAT 238

*Fig. 6.5. Removing the front assembly*

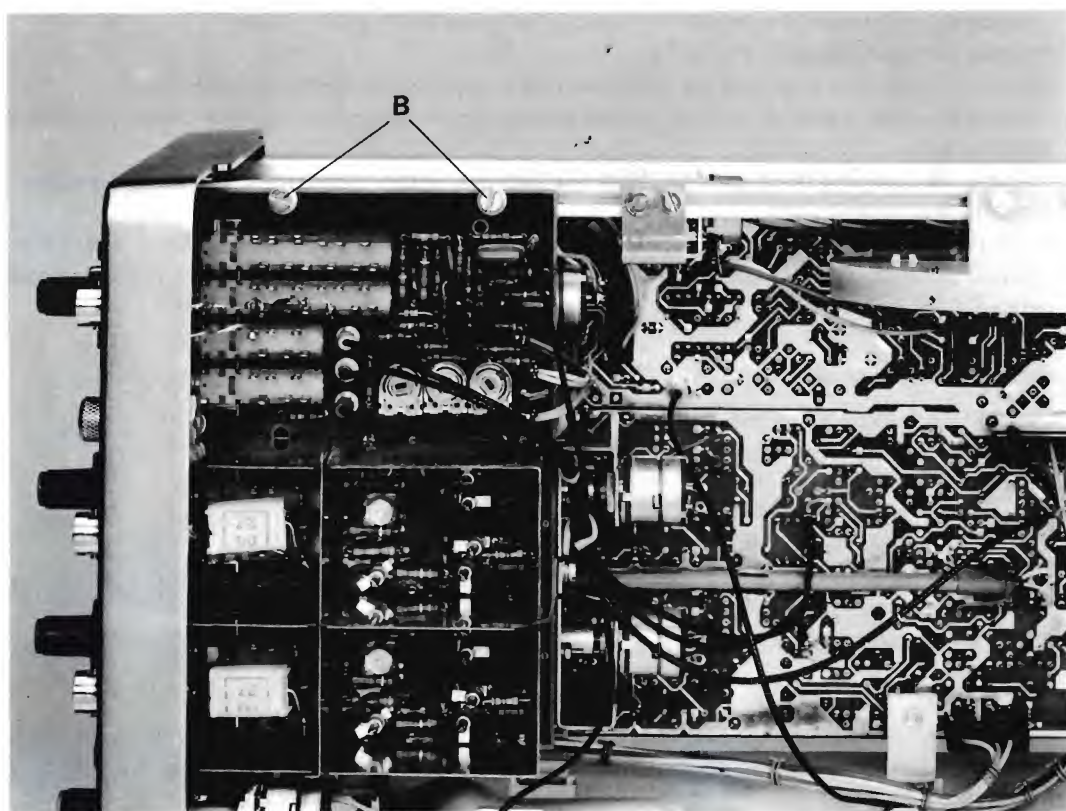

MAT 239

*Fig. 6.6. Removing the front assembly*

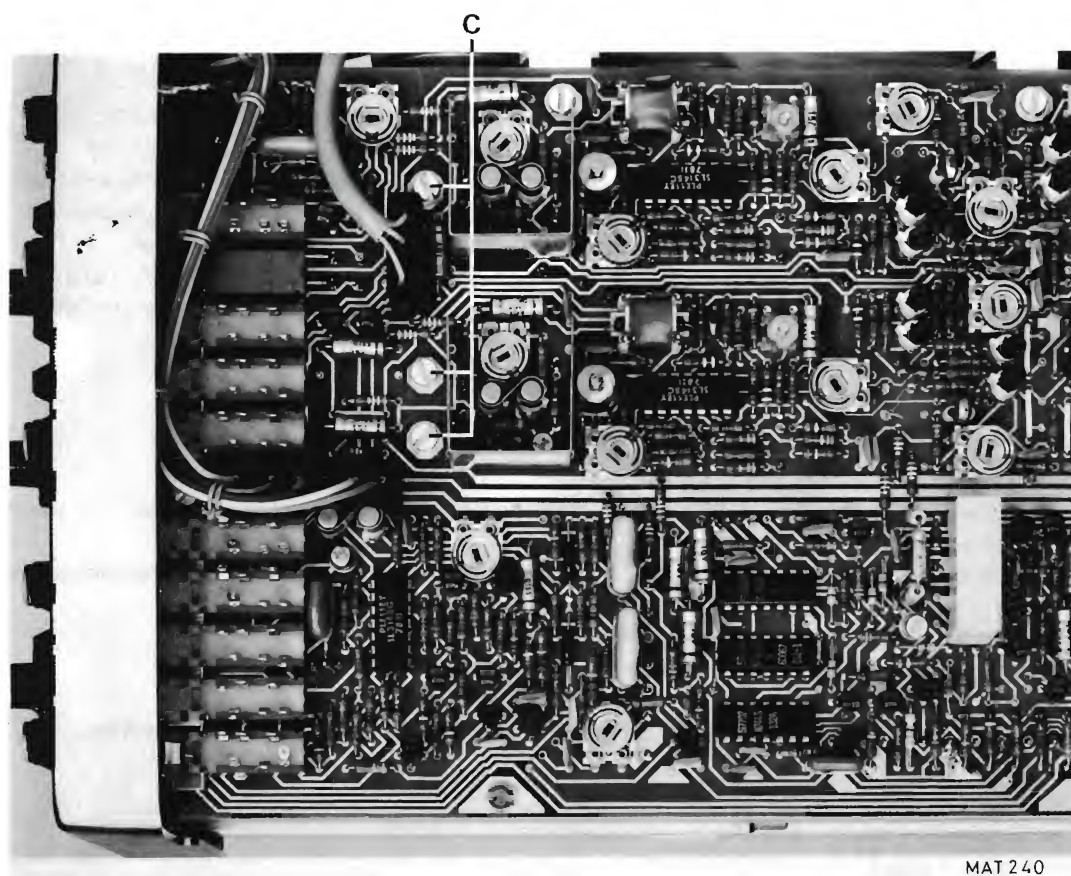

*Fig. 6.7. Removing the front assembly*

## 6.1.7. Replacing switches

### 6.1.7.1. General

- To replace the AMPL/DIV switches, first remove the front panel assembly (section 6.1.5.)
- To replace the TIME/DIV switch, first remove knobs and text plate (section 6.1.2. — 6.1.4.)
- If one of the pushbutton switches of the trigger source selector (A, B, EXT, LINE) or the input coupling switch (AC/DC 0) must be replaced, it is best to remove the front panel assembly first (section 6.1.5.). The defective switch is then replaced in accordance with the procedure described below.
- To replace one of the pushbutton switches of the vertical mode switch (A, ALT, CHOP, ADD, B) or the trigger mode switch (AUTO, AC, DC, TV, SLOPE), the amplifier board can be removed if so desired and the defective switch is then replaced as described below.

### 6.1.7.2. Replacing a switch of a pushbutton unit

- Straighten the 4 retaining lugs of the relevant switch as shown in Fig. 6.8.
- Break the body of the relevant switch by means of a pair of pliers and remove the pieces. The soldering pins are then accessible.
- Remove the soldering pins and clean the holes in the printed-wiring board (e.g. with a suction soldering iron).
- Solder the new switch on to the printed-wiring board.
- Bend the four retaining lugs back to their original positions.

**NOTE:** The ALT switch is a dummy switch which can be replaced by a not self-releasing type.

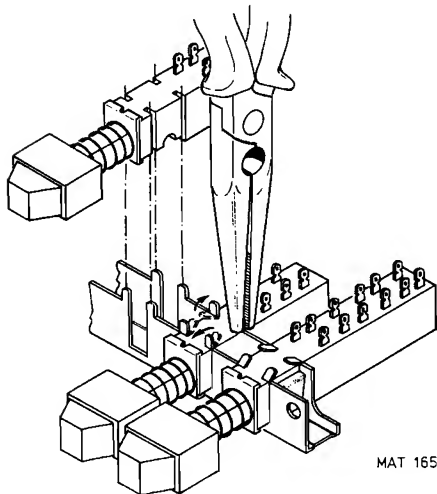



Fig. 6.8. Replacing a pushbutton switch



## 6.1.8. Removing cabinet parts

### 6.1.8.1. Removing the carrying handle

- Prise off the centre knobs from each pivot, using a screwdriver in one of the small slots at the sides of the knobs.
- Remove the cross-head screws that are now accessible.
- Bend both arms of the handle slightly outwards and take it off the cabinet.
- Grip and arms of the carrying handle must be ordered separately (see mechanical parts list). A complete carrying handle can easily be constructed by pressing the arms into the grip.

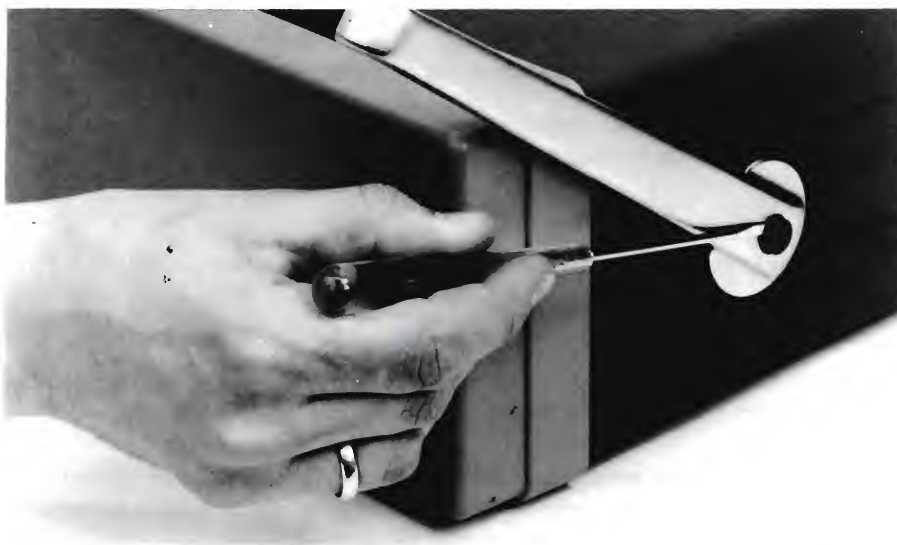

MAT 536

*Fig. 6.9. Removing the carrying handle*

### 6.1.8.2. Removing the bezel and the contrast plate

- Take hold of the bezel's bottom corners and gently pull it from the front panel.
- The contrast filter can be removed by pressing it gently out of the bezel.



MAT 535

*Fig. 6.10. Removing the bezel and the contrast plate*

## 6.2. SOLDERING TECHNIQUES

### Working method:

- Carefully unsolder one after the other the soldering tags of the semi-conductor.
- Remove all superfluous soldering material. Use a sucking iron or sucking copper litze wire.
- Check that the tags of the replacement part are clean and pre-tinned on the soldering places.
- Locate the replacement semi-conductor exactly on its place, and solder each tag to the relevant printed conductor on the circuit board.

*Note: Bear in mind that the maximum permissible soldering time is 10 seconds during which the temperature of the tags must not exceed 250 deg. C. The use of a solder with a low melting point is therefore recommended.*

*Take care not damage the plastic encapsulation of the semi-conductor.*

**ATTENTION:** When you are soldering inside the instrument it is essential to use a low-voltage soldering iron, the tip of which must be earthed to the mass of the oscilloscope.

### Suitable soldering irons are:

- ORYX micro-miniature soldering instrument, type 6A, voltage 6 V, in combination with PLATO pin-point tip type 0-569.
- ERSa miniature soldering iron, type minot 040 B, voltage 6 V.
- Low Voltage Mini Soldering Iron, Type 800/12 W - 6 V, power 12 W, voltage 6 V, order no. 4822 395 10004, in combination with 1 mm-pin-point tip, order no. 4822 395 10012.

Ordinary 60/40 solder and 35- to 40-watt pencil-type soldering iron can be used to accomplish the majority of the soldering. If a higher wattage-rating soldering iron is used on the etched circuit boards, excessive heat can cause the etched circuit wiring to separate from the board base material.

### 6.3. SPECIAL TOOLS

#### Trimming Tool Kit (Type 800/NTX)

This useful kit contains 3 twin-coloured holders, 2 extension holders and 21 interchangeable trimming pins. The wide variety of pin allows almost every type of trimming function to be carried out in instruments to be calibrated (e.g. measuring instruments, radio and T.V. sets).

Ordering number 4822 310 50015.

(A spare set containing the 8 most commonly used pins is available under the ordering number 4822 310 50016).



MAT 362

*Fig. 6.11. Trimming Tool Kit*

### 6.4. RECALIBRATION AFTER REPAIR

After any electrical component has been replaced the calibration of that particular circuit should be checked, as well as the calibration of other closely related circuit.

Since the power supply affects all circuits, calibration of the entire instrument should be checked if work has been done in the power supply or if the transformer has been replaced.

### 6.5. INSTRUMENT REPACKAGING

If the instrument is to be shipped to a Service Centre for service or repair, attach a tag showing owner (with address) and the name of an individual at your firm that can be contacted. The Service Centre needs the complete instrument serial number and a fault description.

Save and re-use the packing in which your instrument was shipped. If the original packing is unfit for use or not available, repack the instrument in such a way that no damage during transport occurs.



## 6.6. TROUBLE-SHOOTING

### 6.6.1. Introduction

The following information is provided to facilitate trouble shooting. Information contained in other sections of this manual should be used along with the following information to aid in locating the defective component. An understanding of the circuit operation is helpful in locating troubles, particularly where integrated circuits are used. Refer to the Circuit Description section for this information.

### 6.6.2. Trouble-shooting hints

If a fault appears, the following test sequence can be used to find the defective circuit part:

- Check if the settings of the controls of the oscilloscope are correct. Consult the operating instructions in the Operating manual.
- Check the equipment to which the oscilloscope is connected and the interconnection cables.
- Check if the oscilloscope is well-calibrated. If not refer to section 5 (checking and adjusting).
- Visually check the part of the oscilloscope in which the fault is suspected. In this way, it is possible to find faults such as bad soldering connections, bad interconnection plugs and wires, damaged components or transistors and IC's that are not correctly plugged into their sockets.
- Location of the circuit part in which the fault is suspected: the symptom often indicates this part of the circuit. If the power supply is defective the symptom will appear in several circuit parts.

After having carried out the previous steps, individual components in the suspected circuit parts must be examined:

- Transistors and diodes. Check the voltage between base and emitter (0,7Volt approx. in conductive state) and the voltage between collector and emitter (0,2Volt approx. in saturation) with a voltmeter or oscilloscope. When removed from the p.c.b. it is possible to test the transistor with an ohmmeter since the base/emitter and base/collector junctions can be regarded as diodes. Like a normal diode, the resistance is very high in one direction and low in the other direction. When measuring take care that the current from the ohmmeter does not damage the component under test.  
Replace the suspected component by a new one if you are sure that the circuit is not in such a condition that the new one will be damaged.
- Integrated circuit. In circuit testing can be done with an oscilloscope or voltmeter. A good knowledge of the circuit part under-test is essential. Therefore first read the circuit description in section 2.
- Capacitors. Leakage can be traced with an ohmmeter adjusted to the highest resistance range. When testing take care of polarity and maximum allowed voltage. An open capacitor can be checked if the response for AC signals is observed. Also a capacitance meter can be used: compare the measured value with value and tolerance indicated in the parts list.
- Resistors. Can be checked with an ohmmeter after having unsoldered one side of the resistor from the p.c.b. Compare the measured value with value and tolerance indicated in the parts list.
- Coils and transformers. An ohmmeter can be used for tracing an open circuit. Shorted or partially shorted windings can be found by checking the wave-form response when HF signals are passed through the circuit. Also an inductance meter can be used.

**NOTE:** *If a component must be replaced always use a direct-replacement. If not available use an equivalent after carefully checking that it does not degrade the instrument's performance. See also section 6.1. (replacement).*

*After replacement of a component the calibration of the instrument may be affected due to component tolerances. If necessary do the required adjustments.*

### 6.6.3. Mains transformer data

The available unloaded voltage tapings and the number of turns per winding are listed in the circuit diagram (Fig 8.7.) in the form of a table.

### 6.6.4. Voltages and waveforms in the instrument

The d.c. voltage levels at the electrodes of the transistors and the voltage waveforms in the time-base generator are shown at the relevant points on the circuit diagram (Fig. 8.5.).

The oscilloscope under test must be set in the following way to measure the voltage wave-forms as shown in Fig. 8.5.

- X-POSITION potentiometer R4 at mid-range
- A-POSITION potentiometer R2 at mid-range
- LEVEL potentiometer R5 at mid-range
- SLOPE switch in position "+"
- TRIGGER source selector switch S16 in position "A"
- A and AUTO pushbuttons S1A and S2A depressed
- A AMPL/DIV switch to S6 to 1V/div. and potentiometer R7 to CAL
- TIME/DIV switch S10 to 0,2ms/div. potentiometer R9 to CAL and X MAGN switch S5 to x1
- Input signal on A input socket X2: 2,5kHz sine-wave voltage for 8 div. deflection.

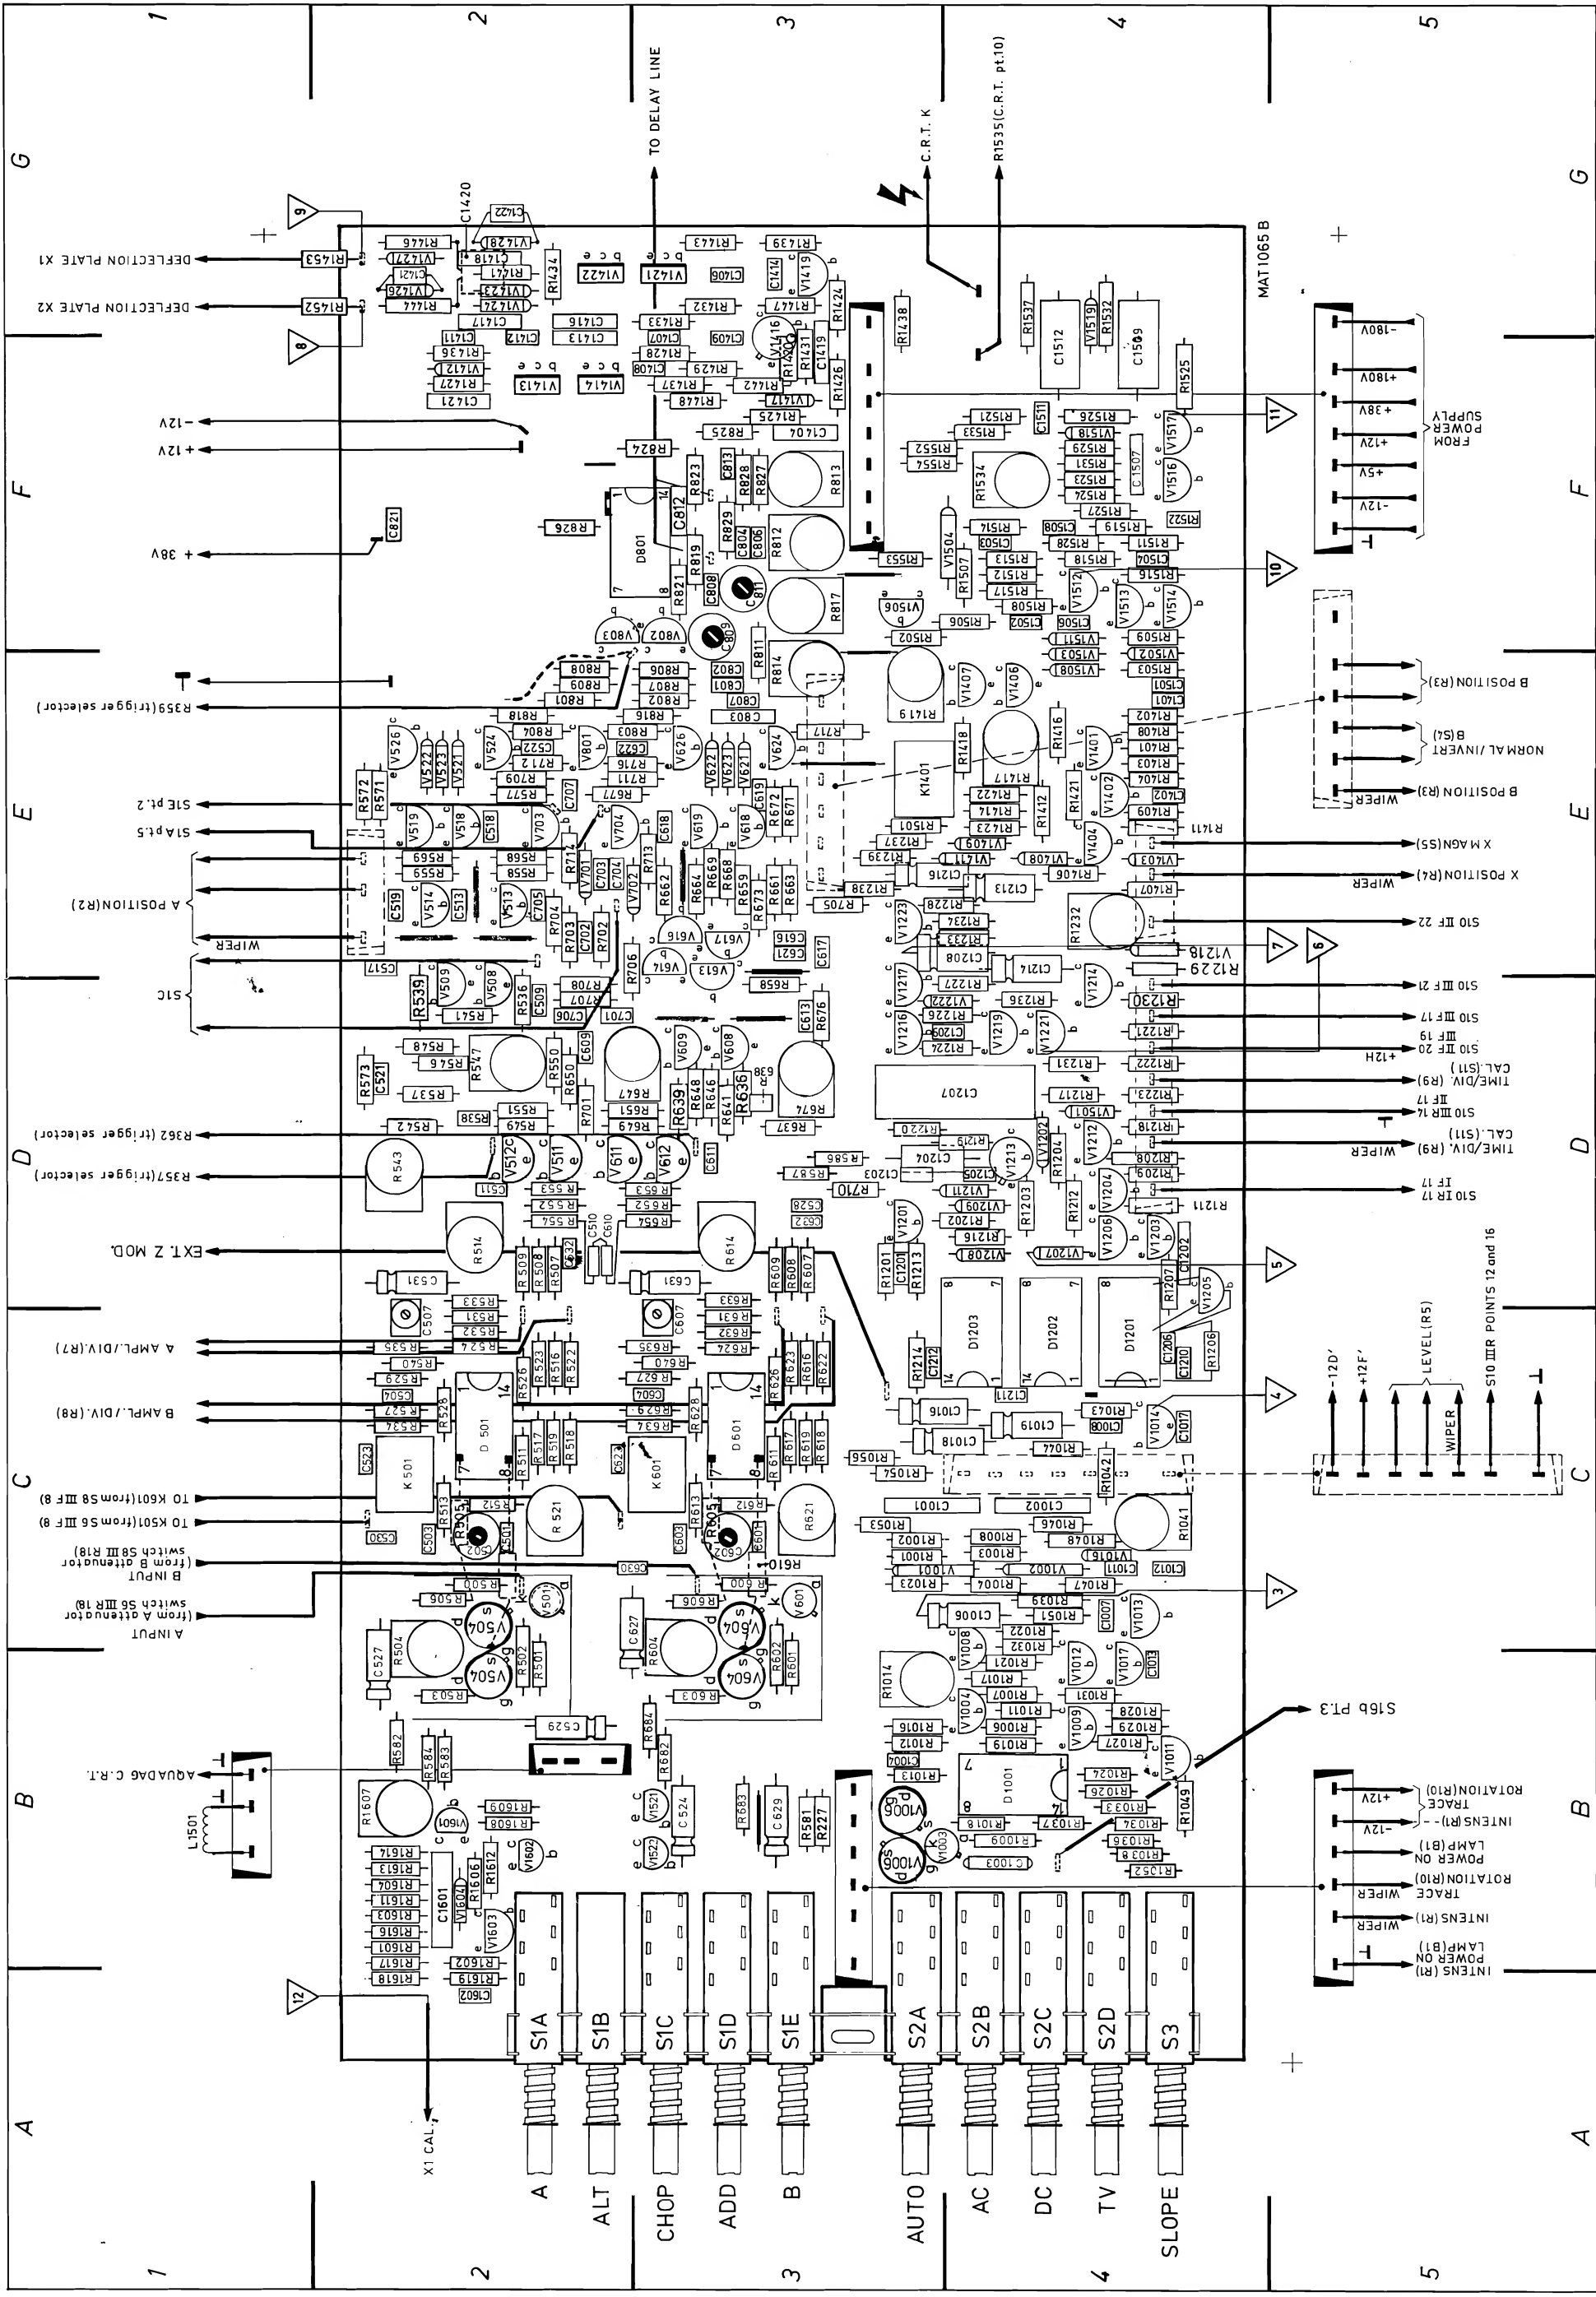


Fig. 6.12 Amplifier unit pcb

6.6.5. Component location list

Item	Grid loc.	Item	Grid loc.	Item	Grid loc.
C101	Rear panel	C324	Att. unit	C524	B-3
C200	Power supply	C325	Att. unit	C527	B-2/C-2
C201	Power supply	C351	Att. unit	C528	D-3
C202	Power supply	C352	Att. unit	C529	B-2
C203	Power supply	C353	Att. unit	C530	C-2
C204	Power supply	C354	Att. unit	C531	C-2
C206	Power supply	C356	Att. unit	C532	D-2
C207	Power supply	C357	Att. unit	C601	C-3
C208	Power supply	C358	Att. unit	C602	C-3
C209	Power supply	C401	Att. unit	C603	C-3
C211	Power supply	C405	Att. unit	C604	C-3
C212	High tension unit	C407	Att. unit	C607	C-3/D-3
C213		C408	Att. unit	C608	D-3
C214		C409	Att. unit	C609	D-2
C215		C410	Att. unit	C610	D-2
C216		C411	Att. unit	C611	D-3
C217		C412	Att. unit	C612	D-3
C218	Power supply	C413	Att. unit	C613	D-3
C219	Power supply	C414	Att. unit	C614	D-3
C221	Power supply	C415	Att. unit	C616	E-3
C222	Power supply	C416	Att. unit	C617	E-3
C223	Power supply	C417	Att. unit	C618	E-3
C224	Power supply	C418	Att. unit	C619	E-3
C226	Power supply	C419	Att. unit	C621	E-3
C227	Power supply	C420	Att. unit	C622	E-2/E-3
C228	Power supply	C421	Att. unit	C623	C-2
C229	Power supply	C422	Att. unit	C627	B-2/C-2
C231	Power supply	C424	Att. unit	C628	B-3/C-3
C301	Att. unit	C425	Att. unit	C629	B-3
C305	Att. unit	C501	C-2	C630	C-2/C-3
C307	Att. unit	C502	C-2	C631	D-3
C308	Att. unit	C503	C-2	C632	D-3
C309	Att. unit	C504	C-2	C701	D-2
C310	Att. unit	C507	C-2/D-2	C702	E-2
C311	Att. unit	C508	D-2	C703	E-2
C312	Att. unit	C509	D-2	C704	E-2
C313	Att. unit	C510	D-2	C705	E-2
C314	Att. unit	C511	D-2	C706	D-2
C315	Att. unit	C513	E-2	C707	E-2
C316	Att. unit	C517	E-2	C801	E-3
C317	Att. unit	C518	E-2	C802	E-3
C318	Att. unit	C519	E-2	C804	F-3
C319	Att. unit	C521	D-2	C806	F-3
C320	Att. unit	C522	E-2	C807	E-3
C321	Att. unit	C523	C-2	C808	F-3
C322	Att. unit			C809	F-3

Item	Grid loc.	Item	Grid loc.	Item	Grid loc.
C811	F-3	C1207	D-3/D-4	R200	Power supply
C812	F-3	C1208	E-3/E-4	R201	Power supply
C813	F-3	C1209	D-3/D-4	R202	Power supply
C814	Final Y ampl.	C1210	C-4	R203	Power supply
C818	Final Y-ampl.	C1211	C-4	R204	Power supply
C819	Final Y-ampl.	C1212	C-3	R206	Power supply
C821	Final Y-ampl.	C1213	E-4	R207	Power supply
C822	Final Y-ampl.	C1214	E-4	R208	Power supply
C824	Final Y-ampl.	C1216	E-3/E-4	R209	Power supply
C826	Final Y-ampl.	C1401	E-4	R210	Power supply
C827	Final Y-ampl.	C1402	E-4	R211	High t.u.
C828	Final Y-ampl.	C1403	E-4	R212	Power supply
C829	Final Y-ampl.	C1404	F-3	R227	B-3
C831	Final Y-ampl.	C1406	G-3	R302	Att. unit
C832	Final Y-ampl.	C1407	F-3/G-3	R303	On switch S6
C833	Final Y-ampl.	C1408	F-3	R304	} On switch S6
C835	Final Y-ampl.	C1409	F-3/G-3	R306	
C836	Final Y-ampl.	C1411	F-2/G-2	R307	Att. unit
C837	Final Y-ampl.	C1412	F-2/G-2	R308	Att. unit
C838	Final Y-ampl.	F1413	F-2/G-2	R309	Att. unit
C839	Final Y-ampl.	F1414	G-3	R311	Att. unit
C840	Final Y-ampl.	C1416	G-2	R312	Att. unit
C841	Final Y-ampl.	C1417	G-2	R313	} On switch S6
C842	Final Y-ampl.	C1418	G-2	R314	
C1001	C-3/C-4	C1419	F-3	R316	Att. unit
C1002	C-4	C1420	G-2	R317	Att. unit
C1003	B4	C1421	F-2	R318	Att. unit
C1004	B-3	C1501	E-4	R319	Att. unit
C1006	C-3/C-4	C1502	F-4	R320	Att. unit
C1007	C-4	C1503	F-4	R354	Att. unit
C1008	C-4	C1504	F-4	R356	Att. unit
C1011	C-4	C1506	F-4	R367	Att. unit
C1012	C-4	C1507	F-4	R358	Att. unit
C1013	B-4	C1508	F-4	R359	Att. unit
C1016	C-3/C-4	C1509	F-4/G-4	R361	Att. unit
C1017	C-4	C1511	F-4	R362	Att. unit
C1018	C-3/C-4	C1512	F-4/G-4	R363	Att. unit
C1019	C-4	C1513	On Tube	R364	Att. unit
C1201	D-3	C1601	B-2	R366	Att. unit
C1202	D-4	C1602	A-2	R367	Att. unit
D1203	D-3	R1	} Front panel	R369	Att. unit
D1204	D-3/D-4	R2		R371	Att. unit
D1205	D-4	R3		R372	Att. unit
D1206	C-4	R4		R373	Att. unit
		R5		R402	Att. unit
		R6		R403	} On switch S8
		R7		R404	
		R8		R406	
		R9		R407	Att. unit
		R10		R408	Att. unit
		R11			

Item	Grid loc.	Item	Grid loc.	Item	Grid loc.
R409	Att. unit	R539	D-2	R617	C-3
R411	Att. unit	R540	C-2	R618	C-3
R412	Att. unit	R541	D-2	R619	C-3
R413	On switch S8	R542	D-2	R621	C-3
R414		R543	D-2	R622	C-3
R416	Att. unit	R546	D-2	R623	C-3
R417	Att. unit	R547	D-2	R624	C-3
R418	Att. unit	R548	D-2	R626	C-3
R419	Att. unit	R549	D-2	R627	C-2/C-3
R420	Att. unit	R550	D-2	R628	C-3
R500	C-2	R551	D-2	R629	C-2/C-3
R501	B-2/C-2	R552	D-2	R631	C-3
R502	B-2/C-2	R553	D-2	R632	C-3
R503	B-2	R554	D-2	R633	D-3
R504	B-2/C-2	R558	E-2	R634	C-2/C-3
R505	C2	R559	E-2	R635	C-2/C-3
R506	C-2	R567	E-2	R636	D-3
R507	D-2	R568	E-2	R637	D-3
R508	D-2	R569	E-2	R638	D-3
R509	D-2	R571	E-2	R639	D-3
R510	C-2	R572	E-2	R640	C-3
R511	C-2	R573	D-2	R641	D-3
R512	C-2	R577	E-2	R646	D-3
R513	C-2	R581	B-3	R647	D-2/D-3
R514	D-2	R582	B-2	R648	D-3
R516	C-2	R583	B-2	R649	D-2/D-3
R517	C-2	R584	B-2	R650	D-2
R518	C-2	R586	D-3	R651	D-2/D-3
R519	C-2	R587	D-3	R652	D-2/D-3
R521	C-2/D-2	R600	C-3	R653	D-2/D-3
R522	C-2/D-2	R601	B-3/C-3	R654	D-2/D-3
R523	C-2/D-2	R602	B-3/C-3	R658	D-3
R524	C-2	R603	B-3	R659	E-3
R526	C-2/D-2	R604	B-3/C-3	R661	E-3
R527	C-2/D-2	R605	C3	R662	E-3
R528	C-2	R606	C-3	R663	E-3
R529	C-2/D-2	R607	D-3	R664	E-3
R531	C-2/D-2	R608	D-3	R666	E-3
R532	C-2	R609	D-3	R667	E-3
R533	D-2	R610	C3	R668	E-3
R534	C-2	R611	C-3	R669	E-3
R535	C-2	R612	C-3	R671	E-3
R536	D-2	R613	C-3	R672	E-3
R537	D-2	R614	D-3	R673	E-2
R538	D-2	R616	C-3	R674	D-3

Item	Grid loc.	Item	Grid loc.	Item	Grid loc.
R676	D-3	R833	Final Y-ampl.	R1001	C-3
R677	E-2/E-3	R834	Final Y-ampl.	R1002	C-3
R682	B-3	R834	Final Y-ampl.	R1003	C-4
R683	B-3	R836	Final Y-ampl.	R1004	C-4
R684	B-3	R837	Final Y-ampl.	R1006	B-4
R701	D-2	R838	Final Y-ampl.	R1007	B-4
R702	E-2	R839	Final Y-ampl.	R1008	C-4
R703	E-2	R841	Final Y-ampl.	R1009	B-4
R704	E-2	R842	Final Y-ampl.	R1011	B-4
R705	E-3	R843	Final Y-ampl.	R1012	B-3
R706	D-2/E-2	R844	Final Y-ampl.	R1013	B-3
R707	D-2	R846	Final Y-ampl.	R1014	B-3
R708	D-2	R847	Final Y-ampl.	R1016	B-3
R709	E-2	R849	Final Y-ampl.	R1017	B-4
R710	D-3	R851	Final Y-ampl.	R1018	B-4
R711	E-2/E-3	R852	Final Y-ampl.	R1019	B-4
R712	E-2	R853	Final Y-ampl.	R1021	B-4
R713	E-3	R856	Final Y-ampl.	R1022	C-4
R714	E-2	R858	Final Y-ampl.	R1023	C-3
R716	E-2/E-3	R859	Final Y-ampl.	R1024	B-4
R717	E-3	R861	Final Y-ampl.	R1026	B-4
R801	E-2	R862	Final Y-ampl.	R1027	B-4
R802	E-3	R863	Final Y-ampl.	R1028	B-4
R803	E-2/E-3	R864	Final Y-ampl.	R1029	B-4
R804	E-2	R865	Final Y-ampl.	R1031	B-4
R806	E-3	R866	Final Y-ampl.	R1032	B-4/C-4
R807	E-3	R867	Final Y-ampl.	R1033	B-4
R808	E-2	R868	Final Y-ampl.	R1034	B-4
R809	E-2	R869	Final Y-ampl.	R1036	B-4
R811	E-3/F-3	R870	Final Y-ampl.	R1037	B-4
R812	F-3	R871	Final Y-ampl.	R1038	B-4
R813	F-3	R872	Final Y-ampl.	R1039	C-4
R814	E-3	R873	Final Y-ampl.	R1041	C-4
R816	E-2/E-3	R874	Final Y-ampl.	R1042	C-4
R817	F-3	R876	Final Y-ampl.	R1043	C-4
R818	E-2	R877	Final Y-ampl.	R1044	C-4
R819	F-3	R878	Final Y-ampl.	R1046	C-4
R821	F-3	R879	Final Y-ampl.	R1047	C-4
R823	F-3	R881	Final Y-ampl.	R1048	C-4
R824	F-2/F-3	R882	Final Y-ampl.	R1049	B-4
R825	F-3	R883	Final Y-ampl.	R1051	C-4
R826	F-2/F-3	R886	Final Y-ampl.	R1052	B-4
R827	F-3	R887	Final Y-ampl.	R1053	C-3
R828	F-3	R888	Final Y-ampl.	R1054	C-3
R829	F-3	R889	Final Y-ampl.	R1056	C-3
R832	Final Y-ampl.				

Item	Grid loc.	Item	Grid loc.	Item	Grid loc.
R1201	D-3	R1407	E-4	R1514	F-4
R1202	D-4	R1408	E-4	R1516	F-4
R1203	D-4	R1409	E-4	R1517	F-4
R1204	D-4	R1411	E-4	R1518	F-4
R1207	D-4	R1412	E-4	R1521	F-4
R1208	D-4	R1414	E-4	R1522	F-4
R1209	D-4	R1416	E-4	R1523	F-4
R1211	D-4	R1417	E-4	R1524	F-4
R1212	D-4	R1418	E-4	R1525	F-4
R1213	D-3	R1419	E-3	R1526	F-4
R1214	C-3	R1421	E-4	R1527	F-4
R1216	D-4	R1422	E-4	R1528	F-4
R1217	D-4	R1423	E-4	R1529	F-4
R1218	D-4	R1424	G-3	R1531	F-4
R1219	D-4	R1425	F-3	R1532	G-4
R1220	D-3	R1426	F-3	R1533	F-4
R1221	D-4	R1427	F-2	R1534	F-4
R1222	D-4	R1428	F-3	R1535	On tube
R1223	D-4	R1429	F-3	R1536	On tube
R1224	D-3/D-4	R1431	F-3	R1537	G-4
R1226	D-3/D-4	R1432	G-3	R1538	Power supply
R1227	D-4	R1433	G-3	R1539	Power supply
R1228	E-3/E-4	R1434	G-2	R1541	Power supply
R1229	D-4	R1436	F-2	R1542	Power supply
R1231	D-4	R1437	F-3	R1543	Power supply
R1232	E-4	R1438	F-3/G-3	R1544	Power supply
R1233	E-4	R1439	G-3	R1546	Power supply
R1236	D-4	R1440	On R4	R1547	Power supply
R1237	E-3	R1441	G-2	R1548	Power supply
R1238	E-3	R1442	F-3	R1551	Power supply
R1239	E-3	R1443	G-3	R1552	F-3/F-4
R1276	On switch S10	R1445	On R4	R1553	F-3
R1277		R1447	G-3	R1554	F-3/F-4
R1278		R1448	F-3	R1601	B-2
R1279		R1450	On R4	R1602	B-2
R1281		R1501	E-3	R1603	B-2
R1282		R1502	F-3	R1604	B-2
R1283		R1503	E-4	R1606	B-2
R1284		R1506	F-4	R1607	B-2
R1286		R1507	F-4	R1608	B-2
R1287		R1508	F-4	R1609	B-2
R1288		R1509	F-4	R1611	B-2
R1289		R1511	F-4	R1612	B-2
R1401	E-4	R1512	F-4	R1613	B-2
R1402	E-4	R1513	F-4	R1614	B-2
R1403	E-4				
R1404	E-4				
R1406	E-4				



Item	Grid loc.	Item	Grid loc.	Item	Grid loc.
R1616	B-2	V504	B-2/C-2	V1003	B-3/B-4
R1617	B-2	V508	D-2/E-2	V1004	B-4
R1618	A-2	V509	D-2/E-2	V1006	B-3/C-3
R1619	A-2	V511	D-2	V1008	B-4/C-4
		V512	D-2	V1009	B-4
V1	C.R.T.	V513	E-2	V1011	B-4
V201	Power supply	V514	E-2	V1012	B-4/C-4
V202	Power supply	V518	E-2	V1013	C-4
V203	Power supply	V519	E-2	V1014	C-4
V204	Power supply	V521	E-2	V1016	C-4
V206	Power supply	V522	E-2	V1017	B-4/C-4
V207	Power supply	V523	E-2	V1201	D-3
V208	Power supply	V524	E-2	V1202	D-4
V209	Power supply	V526	E-2	V1203	D-4
V211	Power supply	V601	C-3	V1204	D-4
V212	Power supply	V604	B-3/C-3	V1206	D-4
V213	Power supply	V608	D-3	V1207	D-4
V214	Power supply	V609	D-3	V1208	D-4
V216	Power supply	V611	D-2/D-3	V1209	D-4
V218	Power supply	V612	D-3	V1211	D-4
V219	Power supply	V613	D-3/E-3	V1212	D-4
V221	Power supply	V614	E-3	V1213	D-4
V221	Power supply	V616	E-3	V1214	D-4/E-4
V222	Power supply	V617	E-3	V1216	D-3
V223	Power supply	V618	E-3	V1217	D-3/E-3
V224	Power supply	V619	E-3	V1218	E-4
V226	High tension unit	V621	E-3	V1219	D-4
V227		V622	E-3	V1221	D-4
V228		V623	E-3	V1222	D-3/D-4
V229		V624	E-3	V1223	E-3
V231		V626	E-3	V1401	E-4
V232	Power supply	V701	E-2	V1402	E-4
V233	Power supply	V702	E-2/E-3	V1403	E-4
V234	Power supply	V703	E-2	V1404	E-4
V236	Power supply	V704	E-2	V1406	E-4
V237	Power supply	V801	E-2	V1407	E-4
V238	Power supply	V802	F-3	V1408	E-4
V239	Power supply	V803	F-2	V1409	E-4
V241	Power supply	V809	Final Y-ampl.	V1411	E-4
V242	Power supply	V811	Final Y-ampl.	V1412	F-2
V243	Power supply	V812	Final Y-ampl.	V1413	F-2
V244	Power supply	V813	Final Y-ampl.	V1414	F-2
V246	Power supply	V814	Final Y-ampl.	V1416	F-3/G-3
V247	Power supply	V1001	C-3/C-4	V1417	F-3
V351	Att. unit	V1002	C-4	V1419	G-3
V352	Att. unit			V1421	G-3
V353	Att. unit			V1422	G-2
V354	Att. unit			V1423	G-2
V501	C-2				

Item	Grid loc.	Item	Grid loc.	
V1424	G-2	D601	C-3	
V1426	G-2	D801	F-2/F-3	
V1427	G-2	D802	Final Y-ampl.	
V1428	G-2	D1001	B-4	
V1501	D-4	D1201	C-4/D-4	
V1502	E-4/F-4	D1202	C-4/D-4	
V1503	E-4/F-4	D1203	C-4/D-4	
V1504	F-4/F-3	B1	LED	
V1506	F-3	F201	Power supply	
V1508	E-4	F202	Power supply	
V1511	F-4	K501	C-2	
V1512	F-4	K601	C-2/C-3	
V1513	F-4	K1401	E-3	
V1514	F-4	L201	Power supply	
V1516	F-4	L202	Power supply	
V1517	F-4	L203	Power supply	
V1518	F-4	L801	Final Y-ampl.	
V1519	F-4/G-4	L802	Final Y-ampl.	
V1521	B-3	L1501	Trace rot. coil	
V1522	B-3	T101	Rear panel	
V1601	B-2	T201	Power supply	
V1602	B-2	T202	Power supply	
V1603	B-2	L301	Att. unit	
V1604	B-2	L401	Att. unit	
D501	C-2			

## 6.7. MAINS VOLTAGE SETTING (PM3215U only)

If the instrument is to be used with 127V, 220V or 240V mains supply, the appropriate voltage should be selected by switching the adaptor on the rear panel until the required voltage is indicated.

If the mains plug has to be adapted, the mains cord must be connected as stated below:

green	: protective earth
black	: phase
white	: neutral

## 6.8. SAFETY INSPECTION AND TESTS AFTER REPAIR AND MAINTENANCE IN THE PRIMARY CIRCUIT

### 6.8.1. General directives

- Take care that the creepage distances and clearances have not been reduced.
- Before soldering, the wires should be bent through the holes of solder tags, or wrapped around the tag in the form of an open U, or, wiring rigidity shall maintained by cable clamps or cable lacing.
- Replace all insulating guards and -plates.

### 6.8.2. Safety components

Components in the primary circuit may only be renewed by components selected by Philips, see also clause 6.1.

### 6.8.3. Checking the protective earth connection (in instruments with a three-core mains cable)

The correct connection and condition is checked by visual control and by measuring the resistance between the protective lead connection at the plug and the cabinet/frame. The resistance shall not be more than 0.1  $\Omega$ . During measurement the mains cable should be moved. Resistance variations indicate a defect.

### 6.8.4. Checking the insulation resistance (in instruments with a three-core mains cable)

Measure the insulation resistance at  $U = 500V$  dc between the mains connections and the protective lead connections. For this purpose set the mains switch to ON. The insulation resistance shall not be less than 2M  $\Omega$ .

*NOTE: 2M $\Omega$  is a minimum requirement at 40°C and 95% Relative Humidity. Under normal conditions the insulation resistance should be much higher (10 ... 20M  $\Omega$ ).*

### 6.8.5. Checking the leakage current

The leakage current shall be measured between each pole of the mains supply in turn, and all accessible conductive parts connected together (including the measuring earth terminal). The leakage current is not excessive if the measured currents from the mentioned parts is  $\leq 3,5mA$  rms. (For safety class II instruments this is  $\leq 0,7mA$  rms).

### 6.8.6. Voltage test

The instrument shall withstand, without electrical breakdown, the application of a test voltage between the supply circuit and accessible conductive parts that are likely to become energized.

The test potential shall be 1500V rms at supply-circuit frequency, applied for one second.

The test shall be conducted with the instrument is fully assembled, and with the primary switch in the ON position.

During the test, both sides of the primary circuit of the instrument are connected together and to one terminal of the voltage test equipment; the other voltage test equipment terminal is to be connected to the accessible conductive parts.

(For class II instruments the test potential shall be 3000V rms).

6.9. EXTRA IN- AND OUTPUT CIRCUITS

The PM3215 is equipped with Z-mod input mounted at the rear panel and with facilities to add two extra output circuits with a minimum of components. The in- and output BNC sockets are mounted in the holes above the c.r.t. socket; only 15-mm-holes must be drilled in the plastic rear cover (Fig. 6.13.) on the positions as indicated.

6.9.1. External Z-modulation input

*Characteristics*

- TTL Compatible
- Current drain at 0 V: –3 mA; at +5 V: +1 mA
- Brightness: light from +2 V to +7 V maximum  
dark from +0.8 V to –1.2 V minimum
- Rise time from light to dark and vice versa: 50 ns
- Delay time from input socket to screen: 85 ns

*Used components*

- |                                 |                |
|---------------------------------|----------------|
| – Coax. cable (per metre)       | 5322 320 10003 |
| – BNC connector                 | 5322 267 10004 |
| – Filler ring for BNC connector | 5322 532 24319 |
| – Nut for BNC connector         | 5322 506 14001 |
| – Solder tag                    | 5322 290 34022 |

6.9.2. Time base sweep output

*Characteristics*

- Output voltage: minimum level –1,8 V  
maximum level +3,8 V ± 0,5 V
- Internal resistance: 1 kohm
- The output is protected against short-circuits

*Required components*

- |                                 |                |
|---------------------------------|----------------|
| – Coax. cable (per metre)       | 5322 320 10003 |
| – BNC connector                 | 5322 267 10004 |
| – Filler ring for BNC connector | 5322 532 24319 |
| – Nut for BNC connector         | 5322 506 14001 |
| – Resistor 1 kohm               | 5322 116 54549 |
| – Resistor 1,27 kohm            | 5322 116 50555 |
| – Transistor BC548C             | 5322 130 44196 |
| – Solder tag                    | 5322 290 34022 |

*Fitting the output*

- Fit the BNC connector as described in section 6.9.
- Fit the resistors as indicated in Fig. 6.14.
- Fit the transistor as indicated in Fig. 6.14.
- Connect one end of the coaxial cable to the points indicated in Fig. 6.14. and the other end to the BNC connector.
- Make sure that the coaxial cable is also earthed at the BNC connector end.

### 6.9.3. Time base gate output

#### *Characteristics*


- Output voltage: high level more than +2,7 V  
low level less than 0,5 V
- TTL output via 50  $\Omega$  resistor
- The output is protected against short-circuits.

#### *Required components*

- |                                 |                |
|---------------------------------|----------------|
| – Coax. cable (per metre)       | 5322 320 10003 |
| – BNC connector                 | 5322 267 10004 |
| – Filler ring for BNC connector | 5322 532 24319 |
| – Nut for BNC connector         | 5322 506 14001 |
| – Solder tag                    | 5322 290 34022 |
| – Resistor 5.1.1. $\Omega$      | 5322 116 54442 |

#### *Fitting the output*

- Fit the BNC connector as described in section 6.9.
- Fit the resistor as indicated in Fig. 6.14.
- Connect one end of the coaxial cable to the points indicated in Fig. 6.14. and the other end to the BNC connector.
- Make sure that the coaxial cable is also earthed at the BNC connector end.

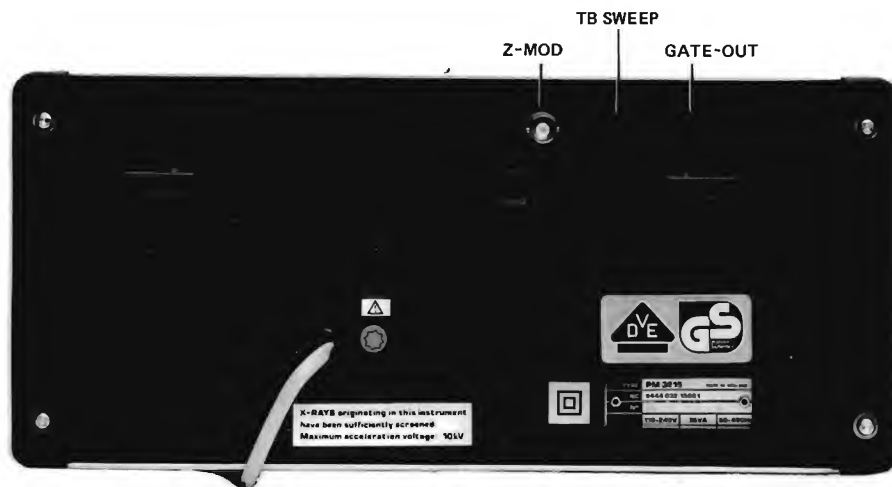

MAT 1529

Fig. 6.13. Rear view of the oscilloscope

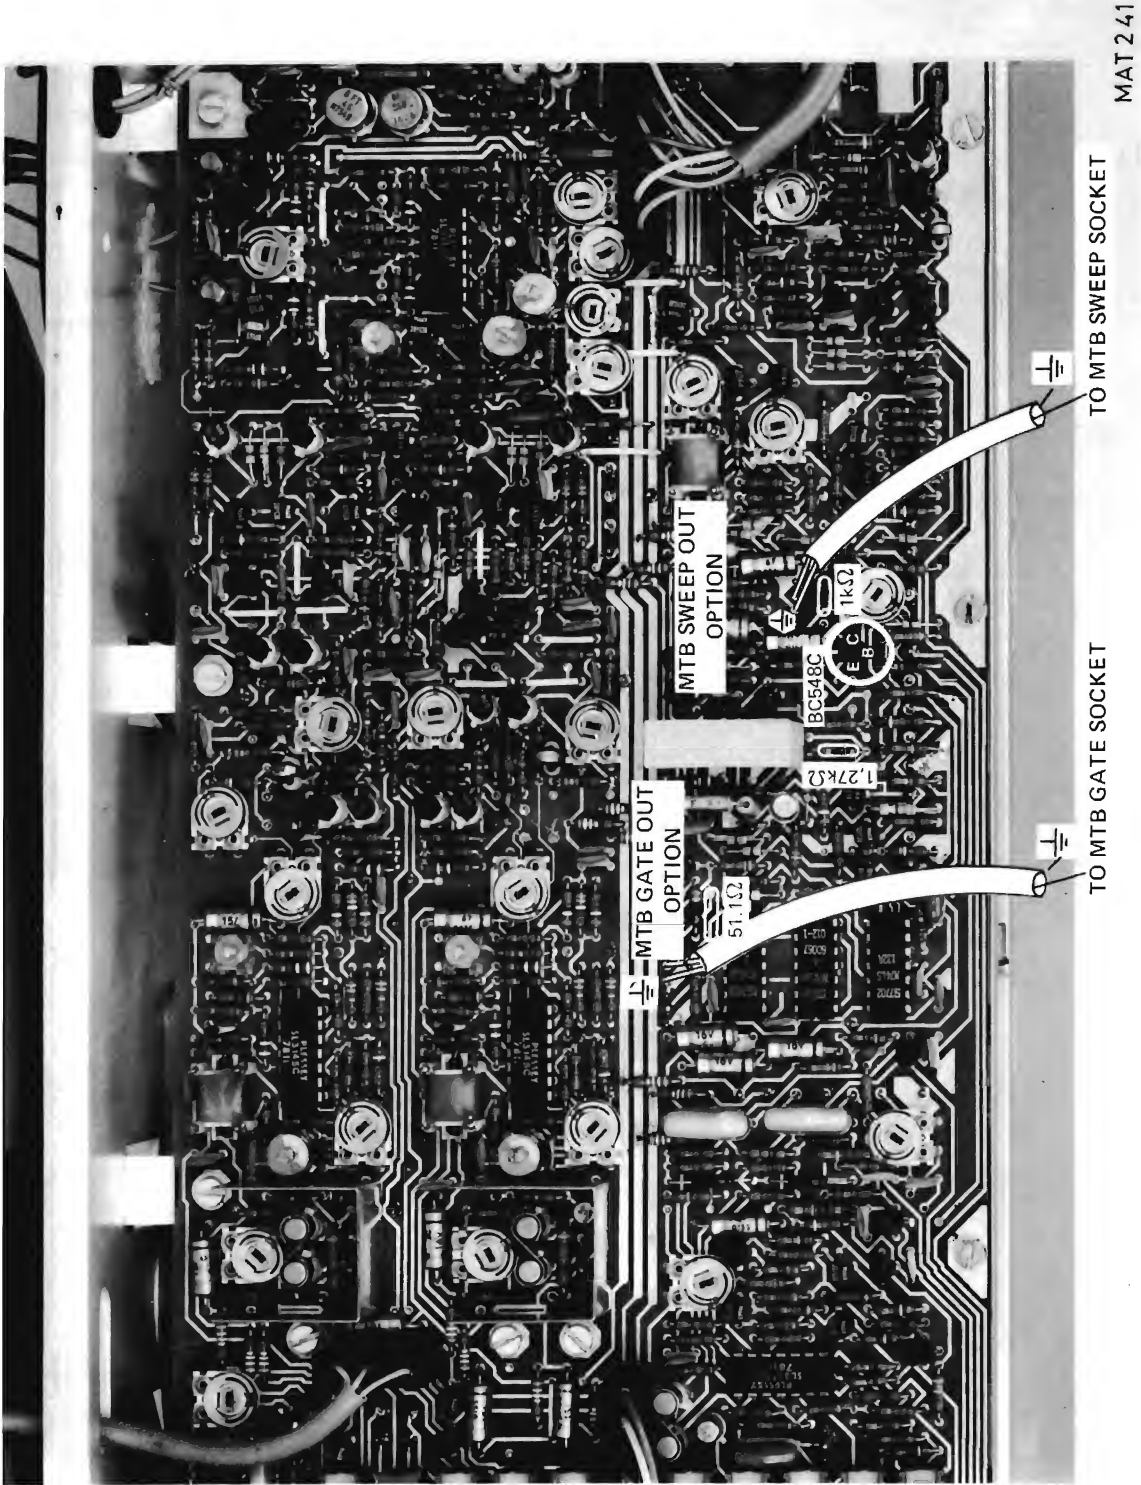


Fig. 6.14. Mounting the components and the cables

6.10. ACCESSORY INFORMATION

Dismantling

*Dismantling the probe (see Fig. 6.15.)*

The front part 11 of the probe can be screwed from the rear part 13. Item 11 can then be slid from 12 and 13. The RC combination 12 is soldered to 13. For replacement of 12 refer to the next section.

*Dismantling the compensation box (see Fig. 6.15.)*

Unscrew the ribbed collar of the compensation box to the cable. The case 14 can then be slid sideways off the compensation box. The electrical components on the printed-wiring board are then accessible.

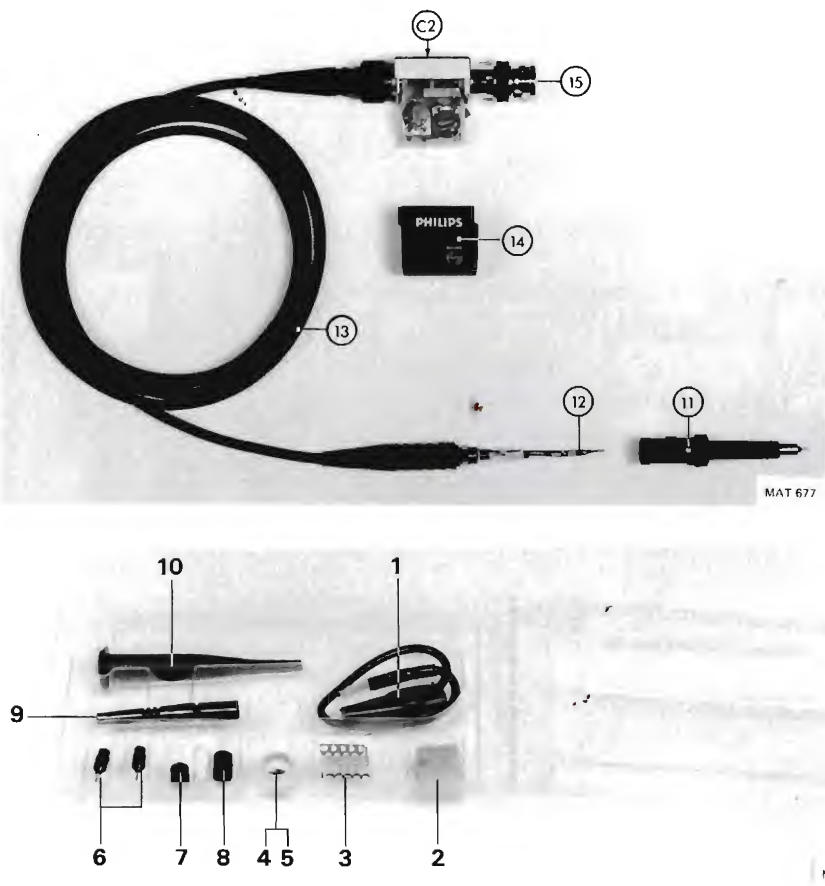


Fig. 6.15. Dismantling + accessories

Replacing parts

*Assembling the probe*

A new RC network is slid over the cable nipple, after which the cable core is soldered on to the resistor wire. When a measuring probe is assembled, the RC network must be at dead centre in the probe tip.

*Replacing the cable assembly*

Dismantle the compensation box.

Unsolder the connection between the inner conductor and the printed-wiring board. Keep the frame of the compensation box steady and loosen the cable nipple with a 5 mm spanner on the hexagonal part. Replace the cable and fit it, working in the reverse order.

*Replacing the BNC*

Dismantle the compensation box.

Unsolder the connection to the printed-wiring board. Hold the frame of the compensation box firmly and loosen the BNC with a 3/8 inch spanner. Replace the BNC and fit it, working in the reverse order.

Replacing the probe tip

The damaged tip can be pulled out by means of a pair of pliers. A new tip must be firmly pushed in.

Parts list

Mechanical parts (see Fig. 6.15. and Fig. 6.16.)

Items 1 to 10 are standard accessories supplied with the probe.

Item	Order number	Qty	Description
1	5322 321 20223	1	Earth cable
2	5322 256 94136	1	Probe holder
3	5322 255 44026	10	Soldering terminals which may be incorporated in circuits as routine test points
4	5322 532 64223	2	Marking ring red
5	5322 532 64224	2	Marking ring white
	5322 532 64225	2	Marking ring blue (not shown)
6	5322 268 14017	2	Probe tip
7	5322 462 44319	1	Insulating cap to cover metal part of probe during measurements in densely wired circuits
8	5322 462 44318	2	Cap facilitating measurements on dual-in-line integrated circuits
9	5322 264 24018	1	Wrap pin adaptor
10	5322 264 24019	1	Spring-loaded test clip
11	5322 264 24021	1	Probe shell with check-zero button
12	5322 216 54152	1	RC network
13	5322 320 14063	1	Cable assembly
14	5322 447 61006	1	Cap
15	5322 268 44019	1	BNC connector

Electrical parts

Item	Order number	Description
C1	—	Part of RC network (not supplied separately)
C2	5322 125 54003	Trimmer 60 pF, 300 V
R1	—	Part of RC network (not supplied separately)
R2	5322 101 14047	Potmeter 470 $\Omega$ , 20 %, 0.5 W
R3	5322 100 10112	Potmeter 1 k $\Omega$ , 20 %, 0.5 W

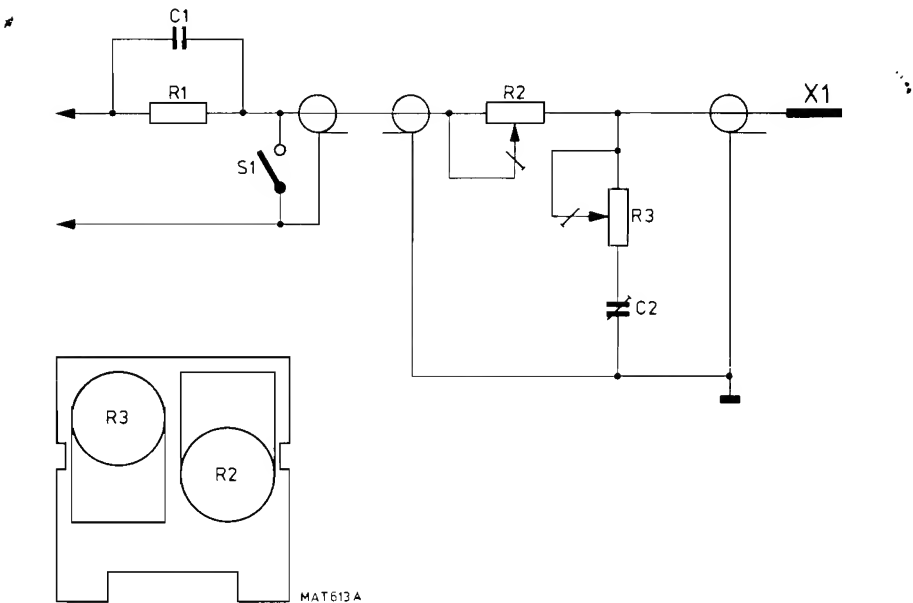


Fig. 6.16. Printing wiring board showing adjusting elements, circuit diagram




## 7. PARTS LIST (Subject to alteration without notice)

### 7.1. MECHANICAL PARTS


#### 7.1.1. Front view (see fig. 7.1., fig. 7.2. and fig. 7.3.).

Fig.	Item	Q.ty	Ordering Code	Description	
7.1.	1	1	5322 447 90347	Cabinet assy without handle	
7.1.	2	1	5322 466 64162	Grip for handle	} handle complete
7.1.	3	2	5322 498 54072	Bracket for handle	
7.2.	1	2	5322 520 14267	Bearing bush	
7.2.	2	2	5322 528 34128	Ratchet	
7.2.	3	2	5322 530 84075	Spring	
7.2.	4	2	5322 414 30043	Knob	
7.2.	5	2	4822 502 30085	Screw 3,5 x 9,5	
7.2.	6	2	4822 532 10582	Washer	
7.1.	4	1	5322 450 20271	Bezel	
7.1.	5	1	5322 480 34074	Contrast filter blue	
7.1.	5	1	5322 705 34232	Contrast filter amber, used for CRT with long persistence time	
7.1.	6	1	5322 455 71007	Textplate (European version)	
7.1.	6	1	5322 455 71008	Textplate (U.S.A. version)	
7.1.	7	1	5322 264 24015	Calibration terminal	} Calibration socket complet X1
7.1.	8	1	5322 325 80235	Calibration grommet	
7.1.	9	1	5322 535 84346	Earthing terminal	} Earthing socket complete X4
7.1.	10	1	5322 530 80218	Toothed washer	
7.1.	11	1	5322 505 14178	Knurled nut	
7.1.	12	1	5322 506 14005	Hexagonal nut	
7.1.	13	3	5322 267 10004	BNC connector X2, X3 and X5.	
7.1.	14	1	5322 464 94002	Cast aluminium front fame	
7.1.	15	1	5322 255 44088	LED holder for B1	
—	—	1	5322 447 90348	Front cover (not shown)	
—	—	4	5322 462 44297	Foot for cabinet (not shown)	
7.1.	16	2	5322 255 24015	Lamp holder for E1 and E2	
7.1.	17	1	5322 381 14151	Light reflector assy with 2 rubber buffers	
7.3.	—	1	5322 263 24005	BNC — 4 mm adapter	

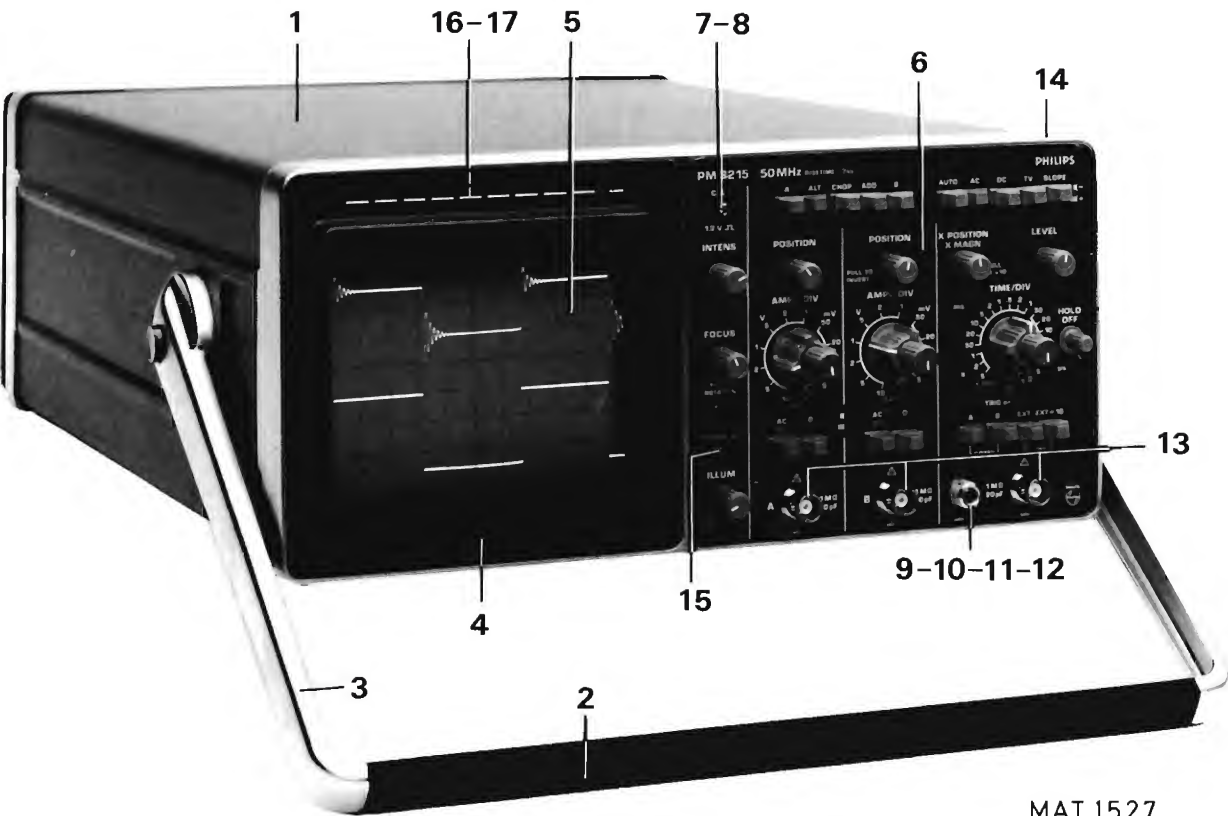

MAT 1527

Fig. 7.1. Front view showing item numbers

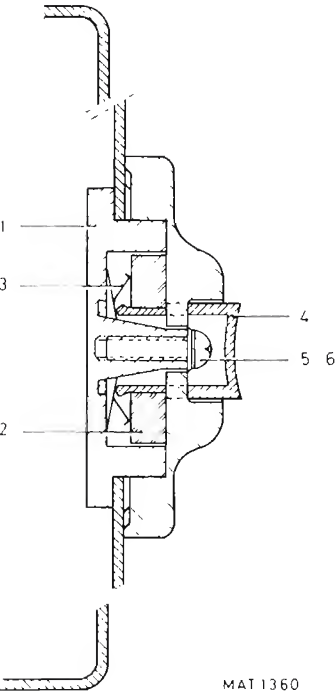

MAT 1360

Fig. 7.2. Handle item numbers



MAT 618

Fig. 7.3. BNC - 4 mm adapter

7.1.2. Rear-view (see fig. 7.4.)

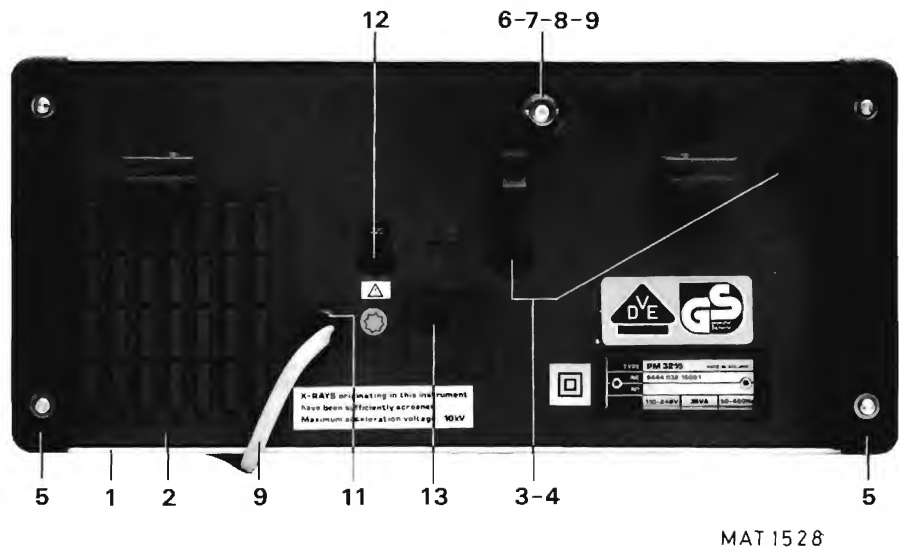


Fig. 7.4. Rear-view showing item numbers

Fig.	Item	Q.ty	Ordering number	Description
7.4.	1	1	5322 464 94001	Cast aluminium rear frame
7.4.	2	1	5322 447 90349	Plastic rear cover
7.4.	3	2	5322 500 14228	Coin slot screw for rear cover
7.4.	4	2	5322 530 70324	Circlip for coin slot screw
7.4.	5	2	5322 462 44298	Foot
7.4.	6	1	5322 267 10004	BNC connector for Z-MOD output
7.4.	7	1	5322 506 14001	Nut for BNC connector
7.4.	8	1	5322 535 24319	Filler ring for BNC connector
7.4.	9	1	5322 209 34022	Solder tag for BNC connector
7.4.	10	1	5322 321 10084	Line cable, European version
7.4.	10	1	5322 321 10331	Line cable, U.S.A. version
7.4.	10	1	5322 321 20816	Line cable, British version
7.4.	11	1	5322 325 64083	Grommet for European version
7.4.	11	1	5322 325 50101	Grommet for U.S.A. of British version
7.4.	12	1	4822 272 10079	Line voltage adaptor
7.4.	13	1	4822 265 20051	Battery input socket X7
—	—	1	4822 266 20014	Battery power input plug (not shown)
—	—	1	4822 321 20125	Battery power input cord set (not shown)

7.1.3. Knobs and covers (see fig. 7.5.)


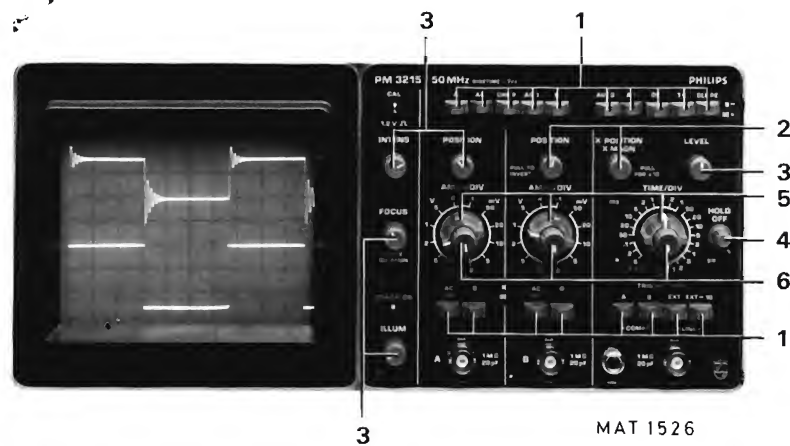


Fig. 7.5. Front view showing knobs and covers

Fig.	Item	Qty.	Ordering code	Description
7.5	1	18	5322 414 20038	Pushbutton knob - brown/green, used for S3, S12 and S14.
7.5	2	2	5322 414 30044	Control knob - dia. 10 mm, used for R3 and R4 .
7.5.	2	2	5322 414 70016	Cover, brown with dash.
7.5	3	5	5322 414 30046	Control knob - dia 10 mm, used for R1, R2, R5, R6 and R11.
7.5	3	5	5322 492 64337	Clamping spring.
7.5.	3	5	5322 414 70016	Cover, brown with dash.
7.5	4	1	5322 414 30047	Control knob - dia 6,7 mm, used for R12 .
7.5.	4	1	5322 492 64337	Clamping spring .
7.5.	5	3	5322 414 30045	Switch knob, used for S6, S8 and S10.
7.5.	6	3	5322 414 30046	Control knob - dia 10 mm, used for S7, R8 and R9.
7.5.	6	3	5322 414 70018	Cover, blue with dash.

### 7.1.4. Flexible coupling

Flexible couplings are used for the AMPL/DIV controls R7/R8 and for the TIME/DIV control R9.

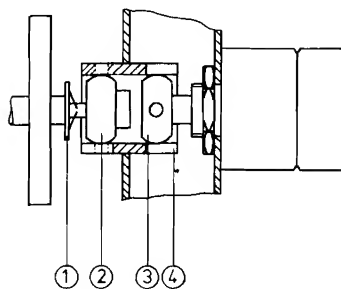

MAT1520

Fig. 7.6. Flexible coupling

1. Fixing spring	5322 530 80232
2. Coupling disc	5322 528 20335
3. Coupling disc	5322 528 20333
4. Coupling bush	5322 532 60758

### 7.1.5. Spare parts for pushbutton switches

- Dual change over switch with spring for use with a reset bar.  
Ordering number 5322 276 14101  
In each instrument there are 11 pieces.
- Dual change over switch with spring for use with reset bar (push on - push off function).  
Ordering number 5322 276 14117.  
In each instrument there are 5 pieces.
- Four change over switch with spring for use with a reset bar.  
Ordering number 5322 276 14102.  
In each instrument there are 2 pieces.
- Reset bar for max. 6 switches.  
The bar can be used for max. 6 switches that have a distance of 10,16 mm. from each other.  
When the bar is needed for a unit with e.g. four switches it must be sawn to the required size.  
When doing this take care that the distance between the last stud and the end of the bar is exactly 4,1 mm.  
When one switch in a unit needs no reset bar (e.g. an independent switch such as "erase" then remove at the relevant spot the stud from the bar with a pair of pincers.  
The spring for the reset bar will be delivered together with the switch segments.  
Ordering number 5322 278 74007.  
In each instrument are 3 pieces.
- Support for max. 11 switches  
The supports can be sawn to the required size.  
Ordering number:  
Max. 11 switches: 5322 466 85843      Notch distances 10 x 10,16 mm.  
In each instrument there are 4 pieces

## 7.2. ELECTRICAL PARTS

## Capacitors

POSNR	DESCRIPTION		ORDERING CODE
C 101	220NF 10%	250V	5322 121 44142
C 200	100NF 10%	100V	5322 121 40323
C 201	22NF-20+80	40	4822 122 30103
C 202	680NF 10%	100V	5322 121 40233
C 203	4700UF-10+30	40	4822 124 70326
C 204	100NF 10%	100V	5322 121 40323
C 206	3,3UF-10+50	63	4822 124 20725
C 207	680NF 10%	100V	5322 121 40233
C 208	47UF-10+50	25	4822 124 20699
C 209	10UF-10+50	63	4822 124 20728
C 211	68UF-10+50	16	4822 124 20689
C 218	22NF 10%	1600V	4822 121 40196
C 219	22NF 10%	1600V	4822 121 40196
C 221	4,7UF-10+50	250	4822 124 21157
C 222	100UF-10+50	40	4822 124 20715
C 223	150UF-10+50	16	4822 124 20586
C 224	150UF-10+50	16	4822 124 20586
C 226	68UF-10+50	6,3	4822 124 20671
C 227	470UF-10+50	6,3	4822 124 20673
C 228	150UF-10+50	16	4822 124 20586
C 229	150UF-10+50	16	4822 124 20586
C 231	4,7UF-10+50	250	4822 124 21157
C 301	100NF 10%	400V	4822 121 40012
C 302	10PF 2	100	4822 122 31054
C 303	1,8PF	500	4822 122 31185
C 304	1,5PF	500	4822 122 31184
C 305	47PF 2	500	4822 122 31072
C 307	2,0-18P TRIM		5322 125 50051
C 308	47PF 2	500	4822 122 31072
C 309	15PF 2	500	4822 122 31197
C 310	15PF 2	500	4822 122 31197
C 311	12PF 2	500	4822 122 31196
C 312	3,9PF 0,25PF	500	4822 122 31217
C 313	5,5PF		5322 125 54027
C 314	5,5PF		5322 125 54027
C 315	1,5PF 0,25PF	500	4822 122 31184
C 316	3PF		5322 125 54026
C 317	3PF		5322 125 54026
C 318	3PF		5322 125 54026
C 319	3PF		5322 125 54026
C 320	3,3PF 0,25PF	500	4822 122 31188
C 321	27PF 2	100	4822 122 30045
C 322	100PF 2	100	4822 122 31316
C 324	100PF 2	100	4822 122 31316
C 325	150PF 2	100	4822 122 31413
C 351	39PF 2	500	4822 122 31203
C 353	22NF-20+80	40	4822 122 30103
C 354	2,2PF 0,25PF	100	5322 122 34198
C 356	150NF 10%	100V	4822 121 40423
C 357	22NF-20+80	40	4822 122 30103
C 358	22NF-20+80	40	4822 122 30103
C 359	15PF 2	500	4822 122 31197
C 361	18PF 2	500	4822 122 31198
C 362	150PF 2	100	4822 122 31413
C 401	100NF 10%	400V	4822 121 40012
C 402	10PF 2	100	4822 122 31054
C 403	1,8PF	500	4822 122 31185
C 404	1,5PF	500	4822 122 31184
C 405	47PF 2	500	4822 122 31072

POSNR	DESCRIPTION	ORDERING	CODE
C 407	2,0-18P TRIM	5322 125	50051
C 408	47PF 2 500	4822 122	31072
C 409	15PF 2 500	4822 122	31197
C 410	15PF 2 500	4822 122	31197
C 411	12PF 2 500	4822 122	31196
C 412	3,9PF 0,25PF 500	4822 122	31217
C 413	5,5PF 5322 125	54027	
C 414	5,5PF 5322 125	54027	
C 415	1,5PF 0,25PF 500	4822 122	31184
C 416	3PF 5322 125	54026	
C 417	3PF 5322 125	54026	
C 418	5,5PF 5322 125	54027	
C 419	3PF 5322 125	54026	
C 420	3,3PF 0,25PF 500	4822 122	31188
C 421	27PF 2 100	4822 122	30045
C 422	100PF 2 100	4822 122	31316
C 424	100PF 2 100	4822 122	31316
C 425	15-PF 2 100	4822 122	31413
C 501	33PF 2 100	4822 122	31067
C 502	40PF 4822 125	50092	
C 503	180PF 2 100	4822 122	31352
C 504	3,3PF 0,25PF 100	4822 122	31041
C 507	3,5PF 5322 125	50048	
C 509	22NF-20+80 40	4822 122	30103
C 510	33PF 2 100	4822 122	31067
C 511	10PF 2 100	4822 122	31054
C 513	22NF-20+80 40	4822 122	30103
C 517	22NF-20+80 40	4822 122	30103
C 518	22NF-20+80 40	4822 122	30103
C 519	22NF-20+80 40	4822 122	30103
C 521	22NF-20+80 40	4822 122	30103
C 522	150PF 2 100	4822 122	31085
C 523	22NF-20+80 40	4822 122	30103
C 524	15UF-10+50 16	4822 124	20687
C 527	15UF-10+50 16	4822 124	20687
C 528	22NF-20+80 40	4822 122	30103
C 529	15UF-10+50 16	4822 124	20687
C 530	22NF-20+80 40	4822 122	30103
C 531	15UF-10+50 16	4822 124	20687
C 532	22NF-20+80 40	4822 122	30103
C 601	33PF 2 100	4822 122	31067
C 602	40PF 4822 125	50092	
C 603	180PF 2 100	4822 122	31352
C 604	3,3PF 0,25PF 100	4822 122	31041
C 607	3,5PF 5322 125	50048	
C 609	22NF-20+80 40	4822 122	30103
C 610	33PF 2 100	4822 122	31067
C 611	10PF 2 100	4822 122	31054
C 613	22NF-20+80 40	4822 122	30103
C 616	22NF-20+80 40	4822 122	30103
C 617	22NF-20+80 40	4822 122	30103
C 618	22NF-20+80 40	4822 122	30103
C 619	22NF-20+80 40	4822 122	30103
C 621	22NF-20+80 40	4822 122	30103
C 622	150PF 2 100	4822 122	31085
C 623	22NF-20+80 40	4822 122	30103
C 627	15UF-10+50 16	4822 124	20687
C 629	15UF-10+50 16	4822 124	20687
C 630	22NF-20+80 40	4822 122	30103
C 631	15UF-10+50 16	4822 124	20687
C 632	22NF-20+80 40	4822 122	30103
C 701	22NF-20+80 40	4822 122	30103
C 702	270PF 10 100	4822 122	30095
C 703	2,7NF 10 100	4822 122	30057
C 704	2,7NF 10 100	4822 122	30057

POSNR	DESCRIPTION		ORDERING	CODE
C 705	4,7NF-20+80	40	4822 122	31125
C 706	22NF-20+80	40	4822 122	30103
C 707	22NF-20+80	40	4822 122	30103
C 801	22NF-20+80	40	4822 122	30103
C 802	18PF 2	100	4822 122	31061
C 803	10NF	630V	4822 121	41134
C 804	180PF 2	100	4822 122	31352
C 806	1NF 10	100	4822 122	30027
C 807	100PF 2	100	4822 122	31316
C 808	33PF 2	100	4822 122	31067
C 809	20PF		4822 125	50045
C 811	40PF		4822 125	50092
C 812	33PF 2	100	4822 122	31067
C 813	22NF-20+80	40	4822 122	30103
C 818	10NF-20+50	100	4822 122	31414
C 819	3,3PF 0,25PF	100	4822 122	31041
C 821	10NF-20+80	100	4822 122	31414
C 822	3,3PF 0,25PF	100	4822 122	31041
C 823	10NF-20+50	100	4822 122	31414
C 824	27PF		5322 125	50164
C 826	27PF		5322 125	50164
C 827	39PF 2	100	4822 122	31069
C 828	10NF-20+50	100	4822 122	31414
C 829	10NF-20+50	100	4822 122	31414
C 831	33PF 2	100	4822 122	31067
C 832	10NF-20+50	100	4822 122	31414
C 833	10NF-20+50	100	4822 122	31414
C 835	10PF 2%	100V	4822 122	31054
C 836	100PF 2	100	4822 122	31504
C 837	100PF 2	100	4822 122	31504
C 838	10NF-20+50	100	4822 122	31414
C 839	10NF-20+50	100	4822 122	31414
C 840	10PF 2%	100V	4822 122	31054
C 841	22PF 2	100	4822 122	31063
C 842	22PF 2	100	4822 122	31063
C 1001	470NF 10%	100V	4822 121	40438
C 1002	470NF 10%	100V	4822 121	40438
C 1003	220NF 10%	100V	4822 121	40427
C 1004	22NF-20+80	40	4822 122	30103
C 1006	15UF-10+50	16	4822 124	20687
C 1007	22NF-20+80	40	4822 122	30103
C 1008	0,56PF 0,25PF	100	5322 122	34039
C 1011	4,7NF 10	100	4822 122	30128
C 1012	4,7NF 10	100	4822 122	30128
C 1013	3,9NF 10	100	4822 122	30098
C 1016	15UF-10+50	16	4822 124	20687
C 1017	22NF-20+80	40	4822 122	30103
C 1018	15UF-10+50	16	4822 124	20687
C 1019	15UF-10+50	16	4822 124	20687
C 1201	150PF 2	100	4822 122	31085
C 1202	150NF 10%	100V	4822 121	40423
C 1203	270PF 10	100	4822 122	30095
C 1204	2,4NF 1%	63V	5322 121	54054
C 1205	82PF 2	100	4822 122	31237
C 1206	10NF-20+50	100	4822 122	31414
C 1207	2,2UF 5%	100V	5322 121	44246
C 1208	4,7UF-10+50	63	4822 124	20726
C 1209	1NF 10	100	4822 122	30027
C 1210	22NF-20+80	40	4822 122	30103
C 1211	22NF-20+80	40	4822 122	30103
C 1212	22NF-20+80	40	4822 122	30103
C 1213	15UF-10+50	16	4822 124	20687
C 1214	15UF-10+50	16	4822 124	20687
C 1216	15UF-10+50	16	4822 124	20687
C 1401	22NF-20+80	40	4822 122	30103



POSNR	DESCRIPTION	ORDERING CODE
C 1402	1NF 10 100	4822 122 30027
C 1404	220NF 10% 100V	4822 121 40427
C 1406	1,8PF 0,25PF 100V	4822 122 31034
C 1407	0,56PF 0,25PF 100	5322 122 34039
C 1408	0,56PF 0,25PF 100	5322 122 34039
C 1409	3,5PF	5322 125 50048
C 1411	22NF-20+80 40	4822 122 30103
C 1412	22NF-20+80 40	4822 122 30103
C 1413	22NF 10% 250V	4822 121 40407
C 1414	22NF-20+80 40	4822 122 30103
C 1416	22NF 10% 250V	4822 121 40407
C 1417	100NF 10% 250V	4822 121 41161
C 1418	100NF 10% 250V	4822 121 41161
C 1419	100NF 10% 250V	4822 121 41161
C 1420	10NF 400	5322 121 41977
C 1421	100NF 10% 250V	4822 121 41161
C 1501	22NF-20+80 40	4822 122 30103
C 1502	22NF-20+80 40	4822 122 30103
C 1503	22NF-20+80 40	4822 122 30103
C 1504	1PF 0,25PF 100	4822 122 30104
C 1506	10NF-20+80 40	4822 122 30043
C 1507	10NF 630V	4822 121 41134
C 1508	3,3NF 10 100	4822 122 30099
C 1509	1,5NF 10% 1600V	4822 121 40354
C 1511	22NF-20+80 40	4822 122 30103
C 1512	1,5NF 10% 1600V	4822 121 40354
C 1513	1,5NF 10% 1600V	4822 121 40354
C 1601	330NF 10% 100V	4822 121 40434
C 1602	47PF 2 100	4822 122 31072

## Resistors

POSNR		DESCRIPTION			ORDERING CODE		
R	1	10K	20	0,1W	5322	101	24117
R	2	1K	20	0.1W	5322	101	24118
R	3	1K	20	0.1W	5322	101	64018
R	4	47K+47K	LIN	0,1W	5322	102	40061
R	5	100K	20	0.1W	4822	101	20457
R	6	2,2M	20	0.1W	5322	101	24098
R	7	1K	LIN	0,1W	5322	101	40099
R	8	1K	LIN	0,1W	5322	101	40099
R	9	10K	SPEC	0,1W	5322	101	40096
R	10	100K	20	0,1W	5322	101	24178
R	11	22K	20	0.1W	5322	101	44025
R	12	47K	20	0.1W	4822	101	20371
R	200	10K	1	MR25	4822	116	51253
R	201	23,7K	1	MR25	5322	116	54646
R	202	1,21K	1	MR25	5322	116	54557
R	203	1K	1	MR25	4822	116	51235
R	204	220	20	0.5W	4822	100	10359
R	206	2,87K	1	MR25	5322	116	55279
R	207	2,74K	1	MR25	5322	116	50636
R	208	30,1	1	MR25	5322	116	50904
R	209	30,1	1	MR25	5322	116	50904
R	210	1M	1	MR30	4822	116	51279
R	212	10K	1	MR25	4822	116	51253
R	227	237	1	MR25	5322	116	50679
R	302	1M	1	MR30	4822	116	51279
R	303	75	1	MR25	5322	116	54459
R	304	75	1	MR25	5322	116	54459
R	306	75	1	MR25	5322	116	54459
R	307	191K	0,1		5322	116	51606
R	308	681K	0,1		5322	116	51609
R	309	845K	0,1		5322	116	51611
R	311	549K	0,1		5322	116	51608
R	312	205K	1	MR25	5322	116	55387
R	313	732K	1	MR30	5322	116	55321
R	314	806K	1	MR30	5322	116	55078
R	316	8,2M	10		4822	110	72212
R	317	1M	0,1		5322	116	51605
R	318	90,9K	0,1		5322	116	51604
R	319	8,25K	0,1		5322	116	51603
R	320	5,62	1	MR25	5322	116	54128
R	351	1M	0,1		5322	116	51605
R	352	1K	1	MR25	4822	116	51235
R	353	953K	0,1		5322	116	51612
R	354	487K	1	MR30	5322	116	55243
R	355	133K	1	MR25	5322	116	54708
R	356	22K	20	0.5W	5322	101	14069
R	357	20,5K	1	MR25	5322	116	55419
R	358	22K	20	0.5W	5322	101	14069
R	359	20,5K	1	MR25	5322	116	55419
R	360	121	1	MR25	5322	116	54426
R	361	22K	20	0.5W	5322	101	14069
R	362	20,5K	1	MR25	5322	116	55419
R	363	8,25K	1	MR25	5322	116	54558
R	364	4,02K	1	MR25	5322	116	55448
R	365	5,11	1	MR25	5322	116	54192
R	366	2,49K	1	MR25	5322	116	50581
R	367	1,62K	1	MR25	5322	116	55359
R	368	5,11	1	MR25	5322	116	54192
R	369	1,62K	1	MR25	5322	116	55359
R	370	10	1	MR25	5322	116	50452
R	371	42,2	1	MR25	5322	116	51052
R	372	154K	1	MR25	5322	116	54714
R	373	511K	0,1		5322	116	51607

POSNR	DESCRIPTION	ORDERING	CODE
R 374	10 1	MR25 5322 116	50452
R 402	1M 1	MR30 4822 116	51279
R 403	75 1	MR25 5322 116	54459
R 404	75 1	MR25 5322 116	54459
R 406	75 1	MR25 5322 116	54459
R 407	191K 0,1	5322 116	51606
R 408	681K 0,1	5322 116	51609
R 409	845K 0,1	5322 116	51611
R 411	549K 0,1	5322 116	51608
R 412	205K 1	MR25 5322 116	55387
R 413	732K 1	MR30 5322 116	55321
R 414	806K 1	MR30 5322 116	55078
R 416	8,2M 10	4822 110	72212
R 417	1M 0,1	5322 116	51605
R 418	90,9K 0,1	5322 116	51604
R 419	8,25K 0,1	5322 116	51603
R 420	5,62 1	MR25 5322 116	54128
R 500	51,1 1	MR25 5322 116	54442
R 501	51,1 1	MR25 5322 116	54442
R 502	806K 1	MR30 5322 116	55078
R 503	6,81K 1	MR25 4822 116	51252
R 504	470 20	0,5W 5322 101	14047
R 505	31,6 1	MR25 5322 116	54034
R 506	6,81K 1	MR25 4822 116	51252
R 507	6,19K 1	MR25 5322 116	55426
R 508	6,49K 1	MR25 5322 116	54603
R 509	619 1	MR25 4822 116	51232
R 510	31,6 1	MR25 5322 116	54034
R 511	511 0,5	MR25 4822 116	51282
R 512	511 0,5	MR25 4822 116	51282
R 513	105 1	MR25 5322 116	54472
R 514	22K 20	0,5W 5322 101	14069
R 516	51,1K 1	MR25 5322 116	50672
R 517	5,9K 1	MR25 5322 116	50583
R 518	46,4 1	MR25 5322 116	50492
R 519	162 1	MR25 5322 116	50417
R 521	1K 20	0,5W 5322 100	10112
R 522	44,2 1	MR25 5322 116	50818
R 523	44,2 1	MR25 5322 116	50818
R 524	100 0,5	MR25 5322 116	55549
R 526	100 0,5	MR25 5322 116	55549
R 527	5,62K 0,5	MR25 4822 116	51281
R 528	909 0,5	MR25 5322 116	55278
R 529	51,1 1	MR25 5322 116	54442
R 531	51,1 1	MR25 5322 116	54442
R 532	909 0,5	MR25 5322 116	55278
R 533	5,62K 0,5	MR25 4822 116	51281
R 534	825 1	MR25 5322 116	54541
R 535	825 1	MR25 5322 116	54541
R 536	30,1 1	MR25 5322 116	50904
R 537	866 1	MR25 5322 116	54543
R 538	NTC THERM ASSY	5322 116	30275
R 539	30,1 1	MR25 5322 116	50904
R 540	402 1	MR25 5322 116	54519
R 541	348 1	MR25 5322 116	54515
R 542	249 1	MR25 5322 116	54499
R 543	100 20	0,5W 5322 101	14011
R 546	909 1	MR25 5322 116	55278
R 547	220 20	0,5W 5322 101	14009
R 548	909 1	MR25 5322 116	55278
R 549	100 1	MR25 5322 116	55549
R 550	10 1	MR25 5322 116	50452
R 551	100 1	MR25 5322 116	55549
R 552	121 1	MR25 5322 116	54426
R 553	121 1	MR25 5322 116	54426

POSNR	DESCRIPTION		ORDERING CODE
R 554	909	1	MR25 5322 116 55278
R 558	17,8K	1	MR25 5322 116 54637
R 559	5,11K	1	MR25 5322 116 54595
R 568	17,8K	1	MR25 5322 116 54637
R 569	5,9K	1	MR25 5322 116 50583
R 571	178	1	MR25 5322 116 54492
R 572	178	1	MR25 5322 116 54492
R 573	2,26K	1	MR25 5322 116 50675
R 577	100	1	MR25 5322 116 55549
R 581	4,99	1	MR25 5322 116 50568
R 582	4,99	1	MR25 5322 116 50568
R 583	4,99	1	MR25 5322 116 50568
R 584	4,99	1	MR25 5322 116 50568
R 586	4,99	1	MR25 5322 116 50568
R 587	4,99	1	MR25 5322 116 50568
R 600	51,1	1	MR25 5322 116 54442
R 601	51,1	1	MR25 5322 116 54442
R 602	806K	1	MR30 5322 116 55078
R 603	6,81K	1	MR25 4822 116 51252
R 604	470	20	0,5W 5322 101 14047
R 605	31,6	1	MR25 5322 116 54034
R 606	6,81K	1	MR25 4822 116 51252
R 607	6,19K	1	MR25 5322 116 55426
R 608	6,49K	1	MR25 5322 116 54603
R 609	619	1	MR25 4822 116 51232
R 610	31,6	1	MR25 5322 116 54034
R 611	511	0,5	MR25 4822 116 51282
R 612	511	0,5	MR25 4822 116 51282
R 613	105	1	MR25 5322 116 54472
R 614	22K	20	0,5W 5322 101 14069
R 616	51,1K	1	MR25 5322 116 50672
R 617	5,9K	1	MR25 5322 116 50583
R 618	46,4	1	MR25 5322 116 50492
R 619	162	1	MR25 5322 116 50417
R 621	1K	20	0,5W 5322 100* 10112
R 622	44,2	1	MR25 5322 116 50818
R 623	44,2	1	MR25 5322 116 50818
R 624	100	0,1	MR24E 5322 116 50746
R 626	100	0,1	MR24E 5322 116 50746
R 627	5,62K	0,5	MR25 4822 116 51281
R 628	909	0,5	MR25 5322 116 55278
R 629	51,1	1	MR25 5322 116 54442
R 631	51,1	1	MR25 5322 116 54442
R 632	909	0,5	MR25 5322 116 55278
R 633	5,62K	0,5	MR25 4822 116 51281
R 634	825	1	MR25 5322 116 54541
R 635	825	1	MR25 5322 116 54541
R 636	30,1	1	MR25 5322 116 50904
R 637	866	1	MR25 5322 116 54543
R 638	NTC THERM ASSY		5322 116 30275
R 639	30,1	1	MR25 5322 116 50904
R 640	402	1	MR25 5322 116 54519
R 641	158	0,5	MR25 5322 116 55418
R 646	953	1	MR25 5322 116 54547
R 647	100	20	0,5W 5322 101 14011
R 648	953	1	MR25 5322 116 54547
R 649	100	1	MR25 5322 116 55549
R 650	10	1	MR25 5322 116 50452
R 651	100	1	MR25 5322 116 55549
R 652	121	1	MR25 5322 116 54426
R 653	121	1	MR25 5322 116 54426
R 654	909	1	MR25 5322 116 55278
R 658	17,8K	1	MR25 5322 116 54637
R 659	5,11K	1	MR25 5322 116 54595
R 661	31,6K	1	MR25 5322 116 54657

POSNR	DESCRIPTION		ORDERING	CODE
R 662	17,8K	1	MR25 5322 116	54637
R 663	14K	1	MR25 5322 116	55571
R 664	8,25K	1	MR25 5322 116	54558
R 668	17,8K	1	MR25 5322 116	54637
R 669	5,9K	1	MR25 5322 116	50583
R 671	178	1	MR25 5322 116	54492
R 672	178	1	MR25 5322 116	54492
R 673	2,26K	1	MR25 5322 116	50675
R 674	47K	20	0,5W 5322 101	14048
R 676	33,2K	1	MR25 4822 116	51259
R 677	100	1	MR25 5322 116	55549
R 682	4,99	1	MR25 5322 116	50568
R 683	4,99	1	MR25 5322 116	50568
R 684	4,99	1	MR25 5322 116	50568
R 701	100	1	MR25 5322 116	55549
R 702	1,27K	1	MR25 5322 116	50555
R 703	750	1	MR25 4822 116	51234
R 704	402	1	MR25 5322 116	54519
R 705	4,99	1	MR25 5322 116	50568
R 706	1,27K	1	MR25 5322 116	50555
R 707	20,5K	1	MR25 5322 116	55419
R 708	6,81K	1	MR25 4822 116	51252
R 709	2,49K	1	MR25 5322 116	50581
R 710	4,99	1	MR25 5322 116	50568
R 711	2,49K	1	MR25 5322 116	50581
R 712	4,02K	1	MR25 5322 116	55448
R 713	4,02K	1	MR25 5322 116	55448
R 714	4,02K	1	MR25 5322 116	55448
R 716	4,02K	1	MR25 5322 116	55448
R 717	100	1	MR30 5322 116	54852
R 801	4,02K	1	MR25 5322 116	55448
R 802	8,25K	1	MR25 5322 116	54558
R 803	100	1	MR25 5322 116	55549
R 804	100	1	MR25 5322 116	55549
R 806	121	1	MR25 5322 116	54426
R 807	121	1	MR25 5322 116	54426
R 808	2,61K	1	MR25 5322 116	50671
R 809	1,33K	1	MR25 5322 116	55422
R 811	7,87K	1	MR25 5322 116	50458
R 812	4,7K	20	0.5W 5322 100	10114
R 813	10K	20	0,5W 5322 100	10113
R 814	2,2K	20	0.5W 5322 101	14008
R 816	30,1	1	MR25 5322 116	50904
R 817	220	20	0.05W 4822 100	10019
R 818	30,1	1	MR25 5322 116	50904
R 819	28,7	1	MR25 5322 116	54068
R 821	28,7	1	MR25 5322 116	54068
R 823	162E	1%	0,4W 5322 116	50417
R 824	3,32K	1	MR25 4822 116	51247
R 825	4,99	1	MR25 5322 116	50568
R 826	681	1	MR25 4822 116	51233
R 827	4,22K	1	MR25 5322 116	50729
R 828	75	1	MR25 5322 116	54459
R 829	75	1	MR25 5322 116	54459
R 832	590	1	MR25 5322 116	50561
R 833	100	1	MR25 5322 116	55549
R 834	7K5	1%	0,4W 5322 116	54608
R 836	909	1	MR25 5322 116	55278
R 837	56,2	1	MR25 5322 116	54446
R 838	12,1K	1	MR25 5322 116	50572
R 839	11K	1	MR25 5322 116	54623
R 841	237	1	MR25 5322 116	50679
R 842	464	1	MR25 5322 116	50536
R 843	5,62	1	MR25 5322 116	54446
R 844	7K5	1%	0,4W 5322 116	54608

POSNR	DESCRIPTION		ORDERING	CODE
R 846	909	1	MR25	5322 116 55278
R 847	100	1	MR25	5322 116 55549
R 848	470E	20%	0,75W	5322 101 10475
R 849	590	1	MR25	5322 116 50561
R 851	31,6	1	MR25	5322 116 54034
R 852	31,6	1	MR25	5322 116 54034
R 853	162	1	MR25	5322 116 50417
R 856	10E	1%	0,4W	5322 116 50452
R 857	100E	20%	0,75W	5322 101 10474
R 858	147	1	MR25	5322 116 50766
R 859	464	1	MR25	5322 116 50536
R 861	68E1	1%	0,4W	5322 116 54455
R 862	205E	0,5%	0,4W	5322 116 55365
R 863	464	1	MR25	5322 116 50536
R 864	68E1	1%	0,4W	5322 116 54455
R 865	46E4	1%	0,4W	5322 116 50492
R 866	147	1	MR25	5322 116 50766
R 867	2,15K	1	MR25	5322 116 50767
R 868	1K	1	MR25	4822 116 51235
R 869	2,15K	1	MR25	5322 116 50767
R 870	46E4	1%	0,4W	5322 116 50492
R 871	3,16K	1	MR25	5322 116 50579
R 872	3,16K	1	MR25	5322 116 50579
R 873	3,16K	1	MR25	5322 116 50579
R 874	3,16K	1	MR25	5322 116 50579
R 876	3,16K	1	MR25	5322 116 50579
R 877	3,16K	1	MR25	5322 116 50579
R 878	3,16K	1	MR25	5322 116 50579
R 879	3,16K	1	MR25	5322 116 50579
R 881	5,11	1	MR25	5322 116 54192
R 882	1	1	MR25	4822 116 51179
R 883	1	1	MR25	4822 116 51179
R 884	5,11	1	MR25	5322 116 54192
R 886	5,11	1	MR25	5322 116 54192
R 887	5,11	1	MR25	5322 116*54192
R 888	5,11	1	MR25	5322 116 54192
R 889	5,11	1	MR25	5322 116 54192
R 1001	110K	1	MR25	5322 116 54701
R 1002	51,1K	1	MR25	5322 116 50672
R 1003	51,1K	1	MR25	5322 116 50672
R 1004	110K	1	MR25	5322 116 54701
R 1006	3,65K	1	MR25	5322 116 54587
R 1007	8,25K	1	MR25	5322 116 54558
R 1008	301K	1	MR25	5322 116 54743
R 1009	511K	1	MR30	5322 116 55636
R 1011	4,02K	1	MR25	5322 116 55448
R 1012	100K	1	MR25	4822 116 51268
R 1013	12,7K	1	MR25	5322 116 50443
R 1014	470	20	0,5W	5322 101 14047
R 1016	12,7K	1	MR25	5322 116 50443
R 1017	2,87K	1	MR25	5322 116 55279
R 1018	562	1	MR25	4822 116 51231
R 1019	562	1	MR25	4822 116 51231
R 1021	3,65K	1	MR25	5322 116 54587
R 1022	1,54K	1	MR25	5322 116 50586
R 1023	1,54K	1	MR25	5322 116 50586
R 1024	30,1	1	MR25	5322 116 50904
R 1026	30,1	1	MR25	5322 116 50904
R 1027	619	1	MR25	4822 116 51232
R 1028	619	1	MR25	4822 116 51232
R 1029	10,5K	1	MR25	5322 116 50731
R 1031	4,02K	1	MR25	5322 116 55448
R 1032	12,1K	1	MR25	5322 116 50572
R 1033	1K	1	MR25	4822 116 51235
R 1034	16,2K	1	MR25	5322 116 55361

POSNR	DESCRIPTION		ORDERING CODE
R 1036	3,65K	1	MR25 5322 116 54587
R 1037	8,25K	1	MR25 5322 116 54558
R 1038	2,61K	1	MR25 5322 116 50671
R 1039	1M	1	MR30 4822 116 51279
R 1041	22K	20	0.5W 5322 101 14069
R 1042	20,5K	1	MR25 5322 116 55419
R 1043	1,4K	1	MR25 5322 116 54562
R 1044	1,54K	1	MR25 5322 116 50586
R 1046	10K	1	MR25 4822 116 51253
R 1047	3,01K	1	MR25 4822 116 51246
R 1048	1M	1	MR30 4822 116 51279
R 1049	4,64K	1	MR25 5322 116 50484
R 1051	196K	1	MR25 5322 116 55364
R 1052	5,9K	1	MR25 5322 116 50583
R 1053	4,99	1	MR25 5322 116 50568
R 1054	4,99	1	MR25 5322 116 50568
R 1056	4,99	1	MR25 5322 116 50568
R 1201	100K	1	MR25 4822 116 51268
R 1202	48,7K	1	MR25 5322 116 50442
R 1203	3,48K	1	MR25 5322 116 55367
R 1204	6,19K	1	MR25 5322 116 55426
R 1206	30,1K	1	MR25 5322 116 54655
R 1207	10	1	MR25 5322 116 50452
R 1208	3,3M	5	VR25 4822 110 72201
R 1209	10K	1	MR25 4822 116 51253
R 1211	2,49K	1	MR25 5322 116 50581
R 1212	10K	1	MR25 4822 116 51253
R 1213	681	1	MR25 4822 116 51233
R 1214	5,11K	1	MR25 5322 116 54595
R 1216	1,05K	1	MR25 5322 116 54552
R 1217	7,87K	1	MR25 5322 116 50458
R 1218	32,4	0,5	MR25 5322 116 55421
R 1219	30,1	1	MR25 5322 116 50904
R 1220	9,09	1	MR25 5322 116 50863
R 1221	1,4K	1	MR25 5322 116 54562
R 1222	9,53K	1	MR25 5322 116 54617
R 1223	15,4K	1	MR25 5322 116 55459
R 1224	30,1	1	MR25 5322 116 50904
R 1226	1,54K	1	MR25 5322 116 50586
R 1227	7,5K	1	MR25 5322 116 54608
R 1228	11K	1	MR25 5322 116 54623
R 1229	37,4K	1	MR25 5322 116 55462
R 1230	26,1K	1	MR25 5322 116 54651
R 1231	33,2K	1	MR25 4822 116 51259
R 1232	22K	20	0.05W 4822 100 10051
R 1233	487	1	MR25 5322 116 55451
R 1234	2,26K	1	MR25 5322 116 50675
R 1236	21,5K	1	MR25 5322 116 50451
R 1237	4,99	1	MR25 5322 116 50568
R 1238	4,99	1	MR25 5322 116 50568
R 1239	4,99	1	MR25 5322 116 50568
R 1276	412K	0,5	MR25 5322 116 55424
R 1277	205K	0,5	MR25 5322 116 55387
R 1278	41,2K	0,5	MR25 5322 116 55423
R 1279	8,06K	0,5	MR25 5322 116 55428
R 1281	2K	0,5	MR25 4822 116 51243
R 1282	365	0,5	MR25 5322 116 55422
R 1283	412K	0,5	MR25 5322 116 55424
R 1284	82,5K	0,5	MR25 5322 116 55374
R 1286	20,5K	0,5	MR25 5322 116 55419
R 1287	4,02K	0,1	MR24E 5322 116 54283
R 1288	768	0,5	MR25 5322 116 55427
R 1289	6,19K	0,5	MR25 5322 116 55426
R 1290	953K	0,5	MR30 5322 116 55382
R 1291	261K	0,5	MR25 5322 116 54736

POSNR	DESCRIPTION		ORDERING CODE
R 1401	3,16K	1	MR25 5322 116 50579
R 1402	51,1	1	MR25 5322 116 54442
R 1403	4,02K	1	MR25 5322 116 55448
R 1404	3,16K	1	MR25 5322 116 50579
R 1406	5,11K	1	MR25 5322 116 54595
R 1407	681	1	MR25 4822 116 51233
R 1408	8,25K	1	MR25 5322 116 54558
R 1409	3,01K	1	MR25 4822 116 51246
R 1411	9,09K	1	MR25 4822 116 51284
R 1412	2,37K	1	MR25 5322 116 54576
R 1414	3,01K	1	MR25 4822 116 51246
R 1416	3,32K	1	MR25 4822 116 51247
R 1417	1K	20	0,5W 5322 100 10112
R 1418	287	1	MR25 5322 116 54506
R 1419	100	20	0,5W 5322 101 14011
R 1420	31,6	1	MR25 5322 116 54623
R 1421	8,66K	1	MR25 5322 116 54613
R 1422	16,2K	1	MR25 5322 116 55361
R 1423	20,5K	1	MR25 5322 116 55419
R 1424	36,5K	1	MR25 5322 116 50726
R 1425	100	1	MR25 5322 116 55549
R 1426	12,1K	1	MR25 5322 116 50572
R 1427	154K	1	MR25 5322 116 54714
R 1428	33,2K	1	MR25 4822 116 51259
R 1429	33,2K	1	MR25 4822 116 51259
R 1431	1K	1	MR25 4822 116 51235
R 1432	33,2K	1	MR25 4822 116 51259
R 1433	33,2K	1	MR25 4822 116 51259
R 1434	154K	1	MR25 5322 116 54714
R 1436	1,1K	1	MR25 4822 116 51236
R 1437	100	1	MR25 5322 116 55549
R 1438	3,01K	1	MR25 4822 116 51246
R 1439	100	1	MR25 5322 116 55549
R 1440	5,11K	1	MR25 5322 116 54595
R 1441	1,1K	1	MR25 4822 116 *51236
R 1442	13,3K	1	MR25 5322 116 55276
R 1443	6,19K	1	MR25 5322 116 55426
R 1444	365K	1	MR30 5322 116 54762
R 1445	5,11K	1	MR25 5322 116 54595
R 1446	365K	1	MR30 5322 116 54762
R 1447	100	1	MR25 5322 116 55549
R 1448	100	1	MR25 5322 116 55549
R 1450	64,9K	1	MR25 5322 116 50514
R 1452	31,6	1	MR25 5322 116 52075
R 1453	31,6	1	MR25 5322 116 52075
R 1501	6,81K	1	MR25 4822 116 51252
R 1502	511	1	MR25 4822 116 51282
R 1503	3,48K	1	MR25 5322 116 55367
R 1506	162K	1	MR25 5322 116 54716
R 1507	3,48K	1	MR25 5322 116 55367
R 1508	100K	1	MR25 4822 116 51268
R 1509	11K	1	MR25 5322 116 54623
R 1511	51,1K	1	MR25 5322 116 50672
R 1512	6,19K	1	MR25 5322 116 55426
R 1513	26,1K	1	MR25 5322 116 54651
R 1514	6,19K	1	MR25 5322 116 55426
R 1516	22,6K	1	MR25 5322 116 50481
R 1517	2,05K	1	MR25 5322 116 50664
R 1518	511	1	MR25 4822 116 51282
R 1519	464	1	MR25 5322 116 50536
R 1521	226K	1	MR25 5322 116 54729
R 1522	680	10	0,5W 4822 116 30268
R 1523	4,02K	1	MR25 5322 116 55448
R 1524	100	1	MR25 5322 116 55549
R 1525	511	1	MR30 5322 116 54835



POSNR	DESCRIPTION		ORDERING CODE
R 1526	64,9K	1	MR30 4822 116 51175
R 1527	17,8K	1	MR25 5322 116 54637
R 1528	33,2K	1	MR25 4822 116 51259
R 1529	4,87K	1	MR25 5322 116 55445
R 1531	11,5K	1	MR25 5322 116 55358
R 1532	1M	1	MR30 4822 116 51279
R 1533	100	1	MR25 5322 116 55549
R 1534	10K	20	0,5W 5322 100 10113
R 1535	1K	1	MR30 5322 116 54207
R 1536	4,64K	1	MR25 5322 116 50484
R 1537	1M	1	MR30 4822 116 51279
R 1538	1,2M	5	VR37 4822 110 42189
R 1539	2,2M	5	VR37 4822 110 42196
R 1541	5,6M	5	VR37 4822 110 42207
R 1542	78,7K	1	MR25 5322 116 50533
R 1543	100K	20	0.05W 4822 100 10072
R 1544	121K	1	MR25 5322 116 54704
R 1546	16,2K	1	MR25 5322 116 55361
R 1547	26,1K	1	MR25 5322 116 54651
R 1548	196K	1	MR25 5322 116 55364
R 1549	1M	20	0.05W 4822 100 10103
R 1551	383K	1	MR30 5322 116 54761
R 1552	4,99	1	MR25 5322 116 50568
R 1553	4,99	1	MR25 5322 116 50568
R 1554	4,99	1	MR25 5322 116 50568
R 1601	301	1	MR25 5322 116 55366
R 1602	12,1K	1	MR25 5322 116 50572
R 1603	2,05K	1	MR25 5322 116 50664
R 1604	10K	1	MR25 4822 116 51253
R 1606	681	1	MR25 4822 116 51233
R 1607	22K	20	0.5W 5322 101 14069
R 1608	38,3K	1	MR25 5322 116 55369
R 1609	953	1	MR25 5322 116 54547
R 1611	10K	1	MR25 4822 116 51253
R 1612	681	1	MR25 4822 116 51233
R 1613	6,19K	1	MR25 5322 116 55426
R 1614	3,48K	1	MR25 5322 116 55367
R 1616	2,05K	1	MR25 5322 116 50664
R 1617	301	1	MR25 5322 116 55366
R 1618	26,1K	1	MR25 5322 116 54651
R 1619	12,1K	1	MR25 5322 116 50572

## Integrated Circuits

POSNR	DESCRIPTION	ORDERING CODE
D 501	SL3145E PL	5322 130 34854
D 601	SL3145E PL	5322 130 34854
D 801	SL3145E PL	5322 130 34854
D 802	ARRAY OQ 0127	5322 209 80992
D 1001	SL3145E PL	5322 130 34854
D 1201	SN74S132N-00 T	5322 209 85267
D 1202	N74S00N SC	5322 209 84167
D 1203	N74S10N SC	5322 209 84954

## CRT

POSNR	DESCRIPTION	ORDERING CODE
V 1	D14-125GH/117	5322 131 20093
V 1	D14-125GM/117	5322 131 20099

POSNR	DESCRIPTION	ORDERING CODE
SEMI CONDUCTORS		
V 201	BY225-200	4822 130 50312
V 206	BYX49-300	5322 130 34558
V 207	BD237	4822 130 44235
V 208	BAW62	4822 130 30613
V 209	BZX79-C5V6	4822 130 34173
V 211	BZX75-C3V6	4822 130 30765
V 212	BZX75-C3V6	4822 130 30765
V 213	BAW62	4822 130 30613
V 214	BC548C	4822 130 44196
V 216	BC558B	4822 130 44197
V 217	BD237	4822 130 44235
V 218	BD237	4822 130 44235
V 219	BAW62	4822 130 30613
V 221	BAW62	4822 130 30613
V 222	BAW62	4822 130 30613
V 223	BAW62	4822 130 30613
V 224	BAW62	4822 130 30613
V 232	BY509	4822 130 41485
V 233	BZT03-C110	5322 130 32172
V 234	BYV96D	4822 130 31348
V 235	BYV96D	4822 130 31348
V 237	BAW62	4822 130 30613
V 238	BAX12A	5322 130 34605
V 239	BAX12A	5322 130 34605
V 241	BAX12A	5322 130 34605
V 242	BAX12A	5322 130 34605
V 243	BAX12A	5322 130 34605
V 244	BAX12A	5322 130 34605
V 246	BAW62	4822 130 30613
V 247	BYV96D	4822 130 31348
V 351	BF450	4822 130 44237
V 352	BF450	4822 130 44237
V 353	BC548C	4822 130 44196
V 354	BAW62	4822 130 30613
V 356	BAW62	4822 130 30613
V 357	BAW62	4822 130 30613
V 501	BAV45	5322 130 34037
V 504	ON4057	5322 130 42366
V 508	BF450	4822 130 44237
V 509	BF450	4822 130 44237
V 511	BF450	4822 130 44237
V 512	BF450	4822 130 44237
V 513	BC558B	4822 130 44197
V 514	BC558B	4822 130 44197
V 518	BC548C	4822 130 44196
V 519	BC548C	4822 130 44196
V 521	BAW62	4822 130 30613
V 522	BAW62	4822 130 30613
V 523	BAW62	4822 130 30613
V 524	BF324	4822 130 41448
V 526	BF324	4822 130 41448
V 601	BAV45	5322 130 34037
V 604	ON4057	5322 130 42366
V 608	BF450	4822 130 44237
V 609	BF450	4822 130 44237
V 611	BF450	4822 130 44237
V 612	BF450	4822 130 44237
V 613	BC558B	4822 130 44197
V 614	BC558B	4822 130 44197
V 616	BC558B	4822 130 44197
V 617	BC558B	4822 130 44197

POSNR	DESCRIPTION	ORDERING	CODE
V 618	BC548C	4822 130	44196
V 619	BC548C	4822 130	44196
V 621	BAW62	4822 130	30613
V 622	BAW62	4822 130	30613
V 623	BAW62	4822 130	30613
V 624	BF324	4822 130	41448
V 626	BF324	4822 130	41448
V 701	BAW62	4822 130	30613
V 702	BAW62	4822 130	30613
V 703	BC548C	4822 130	44196
V 704	BC548C	4822 130	44196
V 801	BC558B	4822 130	44197
V 802	BC548C	4822 130	44196
V 803	BC548C	4822 130	44196
V 809	2N3866/01	5322 130	41799
V 811	BFQ24	5322 130	41664
V 812	BFQ24	5322 130	41664
V 813	2N3866/01	5322 130	41799
V 814	BZX79-C4V3	4822 130	31554
V 1001	BAT85	4822 130	31983
V 1002	BAT85	4822 130	31983
V 1003	BAV45	5322 130	34037
V 1004	BC548C	4822 130	44196
V 1006	ON561	5322 130	41807
V 1008	BC558B	4822 130	44197
V 1009	BC548C	4822 130	44196
V 1011	BC548C	4822 130	44196
V 1012	BC548C	4822 130	44196
V 1013	BC548C	4822 130	44196
V 1014	BF450	4822 130	44237
V 1016	BAW62	4822 130	30613
V 1017	BC558B	4822 130	44197
V 1201	BC548C	4822 130	44196
V 1202	BAW62	4822 130	30613
V 1203	BC558B	4822 130	44197
V 1204	BC548C	4822 130	44196
V 1205	BC558B	4822 130	44197
V 1206	BC558B	4822 130	44197
V 1207	BAW62	4822 130	30613
V 1208	BAW62	4822 130	30613
V 1209	BAW62	4822 130	30613
V 1211	BAW62	4822 130	30613
V 1212	BC558B	4822 130	44197
V 1213	BSX20	4822 130	41705
V 1214	BC548C	4822 130	44196
V 1216	BC548C	4822 130	44196
V 1217	BC548C	4822 130	44196
V 1218	BAW62	4822 130	30613
V 1219	BC548C	4822 130	44196
V 1221	BC548C	4822 130	44196
V 1222	BAW62	4822 130	30613
V 1223	BC548C	4822 130	44196
V 1401	BC548C	4822 130	44196
V 1402	BC548C	4822 130	44196
V 1403	BAW62	4822 130	30613
V 1404	BC558B	4822 130	44197
V 1406	BF199	4822 130	44154
V 1407	BF199	4822 130	44154
V 1408	BAW62	4822 130	30613
V 1409	BAW62	4822 130	30613
V 1411	BAW62	4822 130	30613
V 1412	BZX79-C5V1	4822 130	34233
V 1414	BF469	4822 130	41329
V 1416	BSX20	4822 130	41705
V 1417	BAW62	4822 130	30613

POSNR	DESCRIPTION	ORDERING CODE
V 1419	BF450	4822 130 44237
V 1421	BF470	4822 130 41331
V 1422	BF469	4822 130 41329
V 1423	BZX79-C5V1	4822 130 34233
V 1424	BZX79-C36	4822 130 34368
V 1426	BZX79-C36	4822 130 34368
V 1427	BZX79-C36	4822 130 34368
V 1428	BZX79-C75	4822 130 34685
V 1501	BAW62	4822 130 30613
V 1502	BAW62	4822 130 30613
V 1503	BAW62	4822 130 30613
V 1504	BAT83	5322 130 32103
V 1506	BC548C	4822 130 44196
V 1508	BAW62	4822 130 30613
V 1511	BAW62	4822 130 30613
V 1512	BC558B	4822 130 44197
V 1513	BC548C	4822 130 44196
V 1514	BC548C	4822 130 44196
V 1516	BC548C	4822 130 44196
V 1517	BSS68	5322 130 44247
V 1518	BAV21	4822 130 30842
V 1519	BAV21	4822 130 30842
V 1521	BC548C	4822 130 44196
V 1522	BC558B	4822 130 44197
V 1601	BC548C	4822 130 44196
V 1602	BC548C	4822 130 44196
V 1603	BC548C	4822 130 44196
V 1604	BAW62	4822 130 30613

**Switches and controls** (for item numbers, refer to Fig. 4.1.)

R1	10K - 0,1W	INTENS	5322 101 24117
R2	1k - 0,1W	Y-POSITION	5322 101 24118
R3/S4	1k - 0,1W + SWITCH	Y-POSITION	5322 101 64018
R4/S5	47k + 47k - 0,1W + SWITCH	X POS/X MAGN	5322 102 40061
R5	100k - 0,1W	LEVEL	4822 101 20457
R6	2,2M - 0,1W	FOCUS	5322 101 24098
R11/S17	22k - 0,1W + SWITCH	ILLUM/POWER ON	5322 101 44025
R12	47k - 0,1W	HOLD OFF	4822 101 20371

R7/S6/S7	ATTENUATOR SWITCH COMPLETE	5322 105 30139
R8/S8/S9	ATTENUATOR SWITCH COMPLETE	5322 105 30139
R9/S10/S11	TIME BASE SWITCH COMPLETE	5322 282 10201

Inner shaft for ATTENUATOR SWITCH	5322 535 91655
Inner shaft for TIME BASE SWITCH	5322 535 91654

## UNITS

Posnr.	Description	Ordering code
A2	POWER SUPPLY UNIT	5322 218 61018
A3	ATTENUATOR UNIT	5322 216 54143
A11	FINAL Y-AMPLIFIER UNIT	5322 216 51023
A7	DELAY LINE UNIT	5322 320 40094
	EHT MULTIPLIER	5322 218 61003

Sortalen 5322 320 20113

## MISCELLANEOUS

B1	LED CQY 24B/IV	4822 130 31144
E1	LAMP 28V - 40mA	5322 134 40534
E2	LAMP 28V - 40mA	5322 134 40534
F201	Fuse 1,4A	4822 253 30023
F202	Fuse 1,4A	4822 253 30023
	THERMAL FUSE	4822 252 20007
K501	REED RELAY ASSY	5322 280 24131
K601	REED RELAY ASSY	5322 280 24131
K1401	REED RELAY ASSY	5322 281 24131
L201	COIL	5322 281 64154
L202	COIL	5322 281 64154
L203	COIL	5322 281 64154
L301	COIL ASSY	5322 281 60152
L401	COIL ASSY	5322 281 60152
L801	COIL	5322 157 51486
L802	COIL	5322 157 51486
L1501	ROTARY COIL	5322 150 14015
T101	MAINS TRANSFORMER	5322 146 24166
T201	BASE TRANSFORMER	5322 158 34074
T202	TRANSFORMER	5322 146 24163
	3-POLE PLUG	4822 266 30071
	3-POLE SOCKET	4822 265 30121
	4-POLE PLUG	4822 266 30072
	4-POLE SOCKET	4822 265 30119
	6-POLE PLUG	4822 266 30073
	6-POLE SOCKET	4822 265 30117
	7-POLE PLUG	4822 266 40057
	7-POLE SOCKET	4822 265 40119
	4-POLE CIS SOCKET	5322 267 64007

ON FINAL Y-AMPL.

8. CIRCUIT DIAGRAMS AND PRINTED CIRCUIT BOARD LAY-OUTS



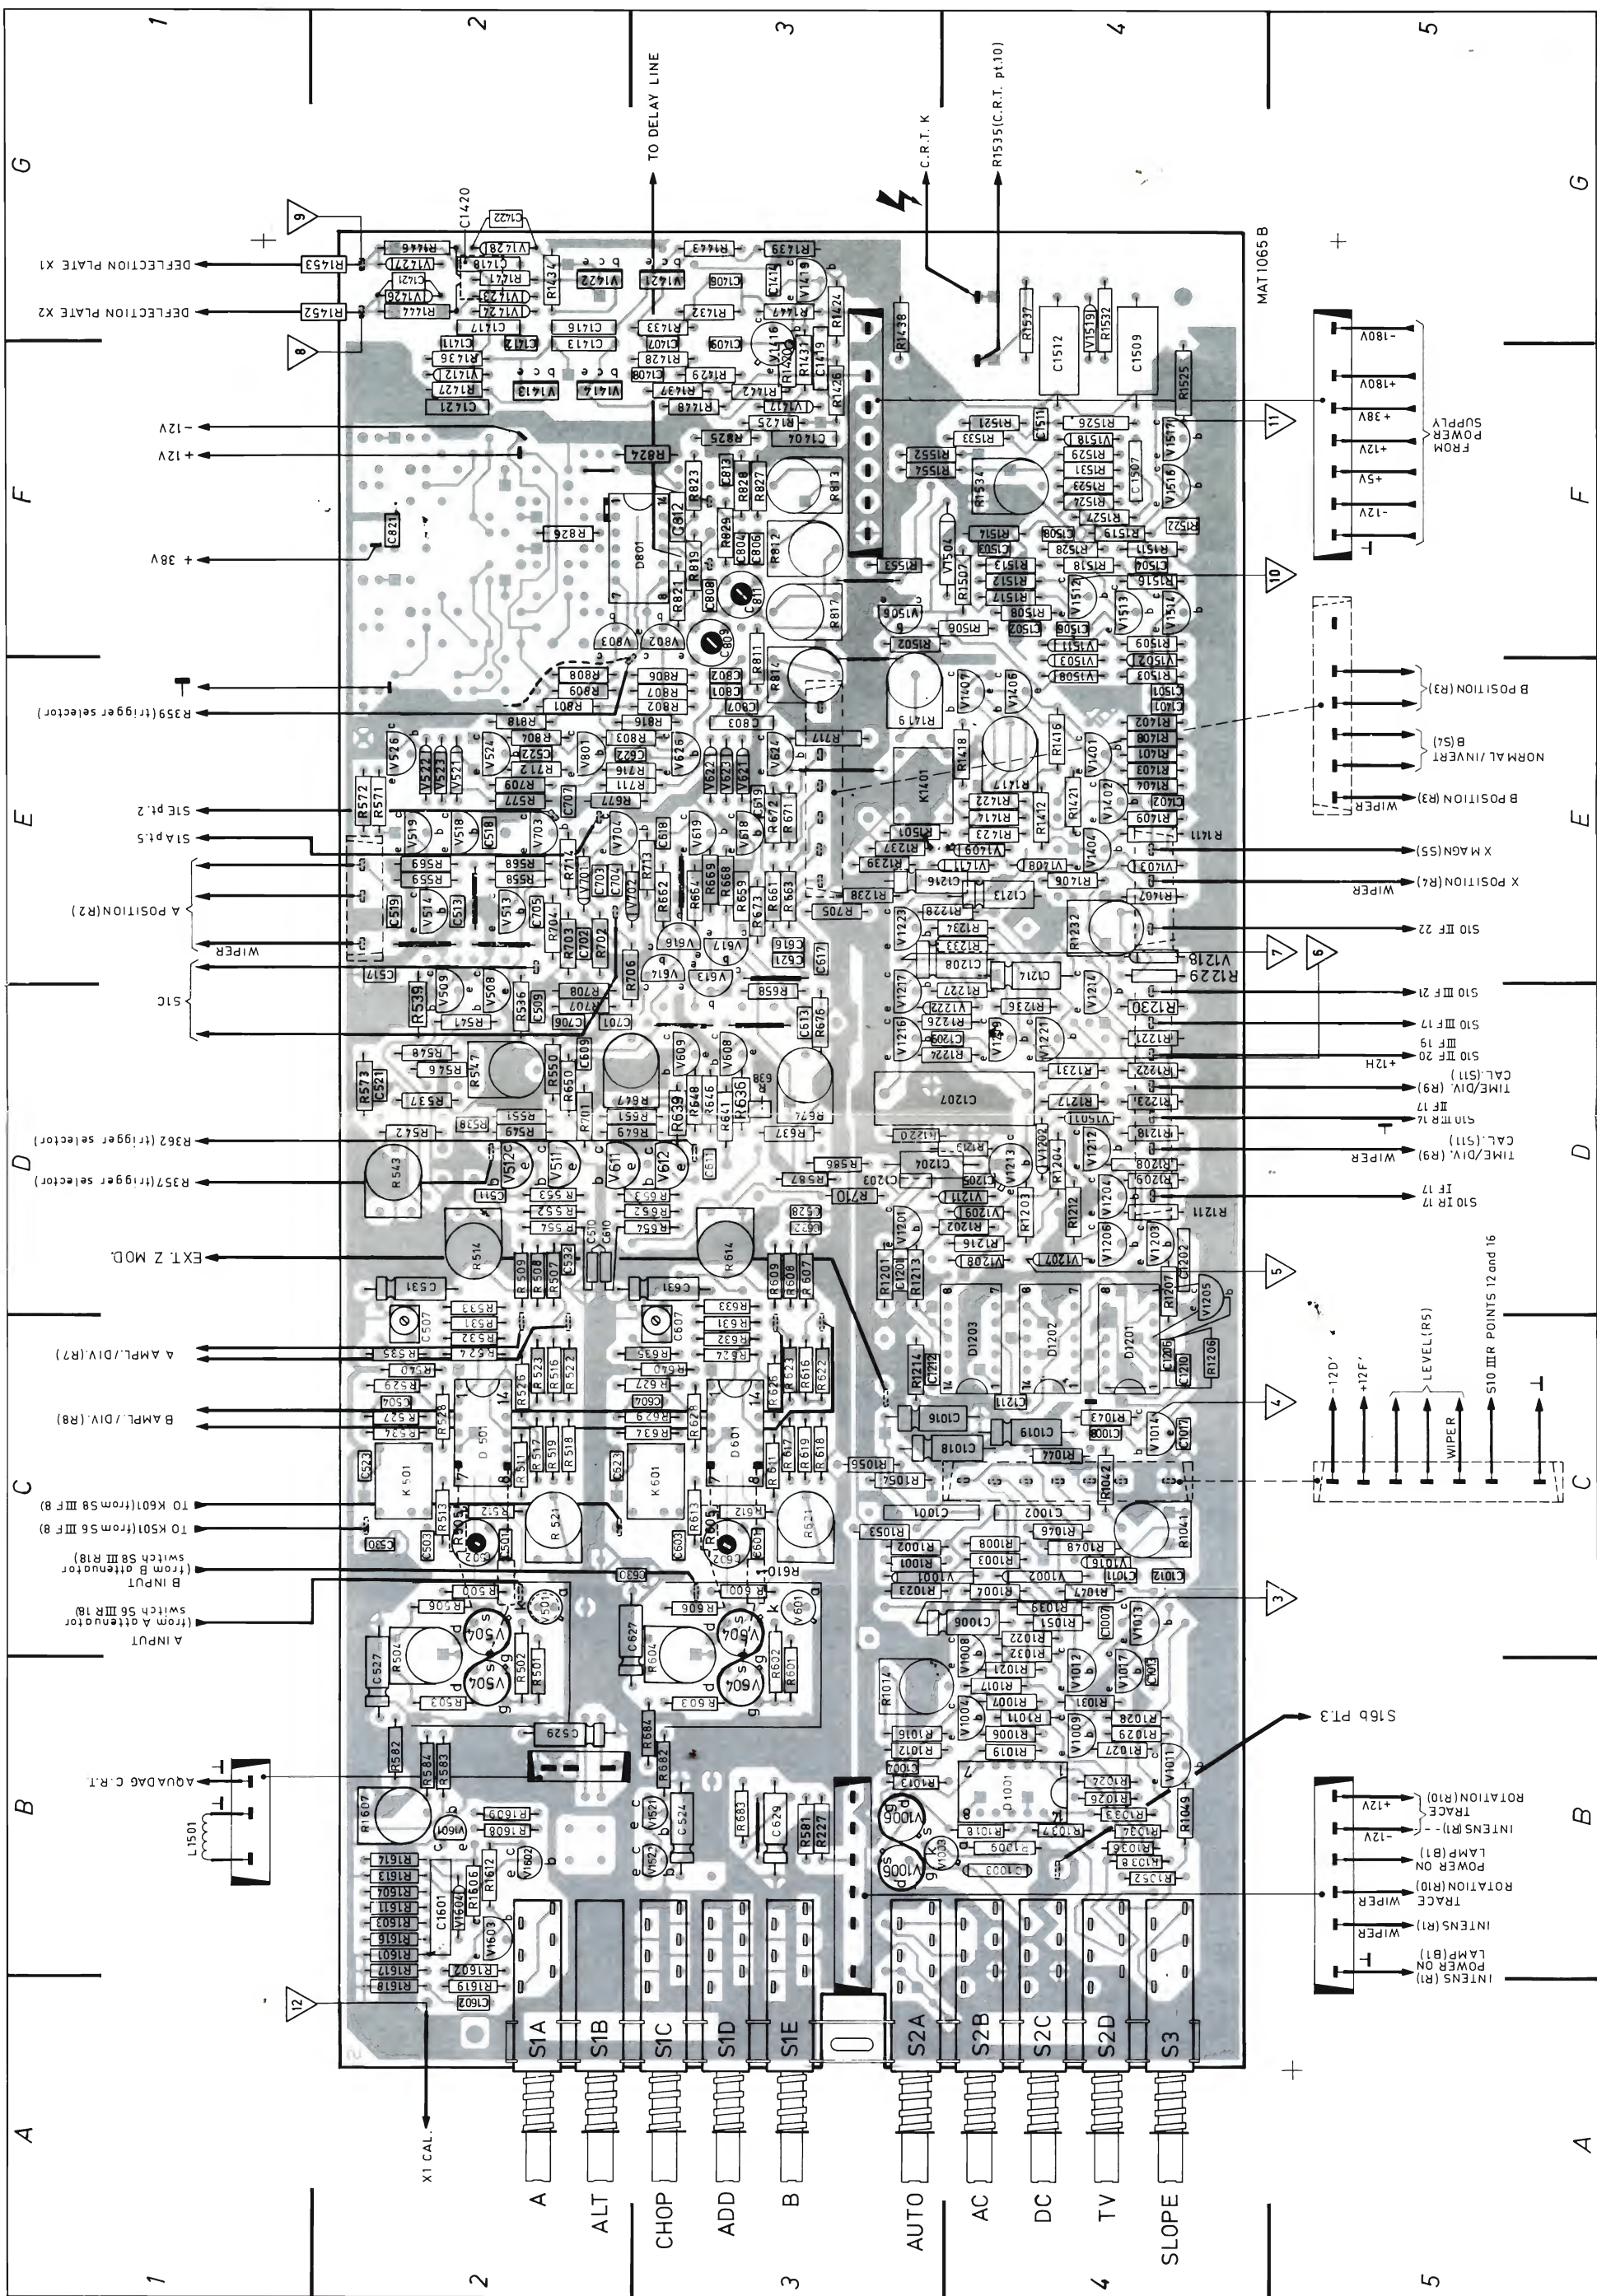


Fig. 8.1. Vertical amplifier unit with rear side tracks





*Fig. 8.2. Vertical attenuator unit*



*Fig. 8.3. Final Y-amplifier unit*








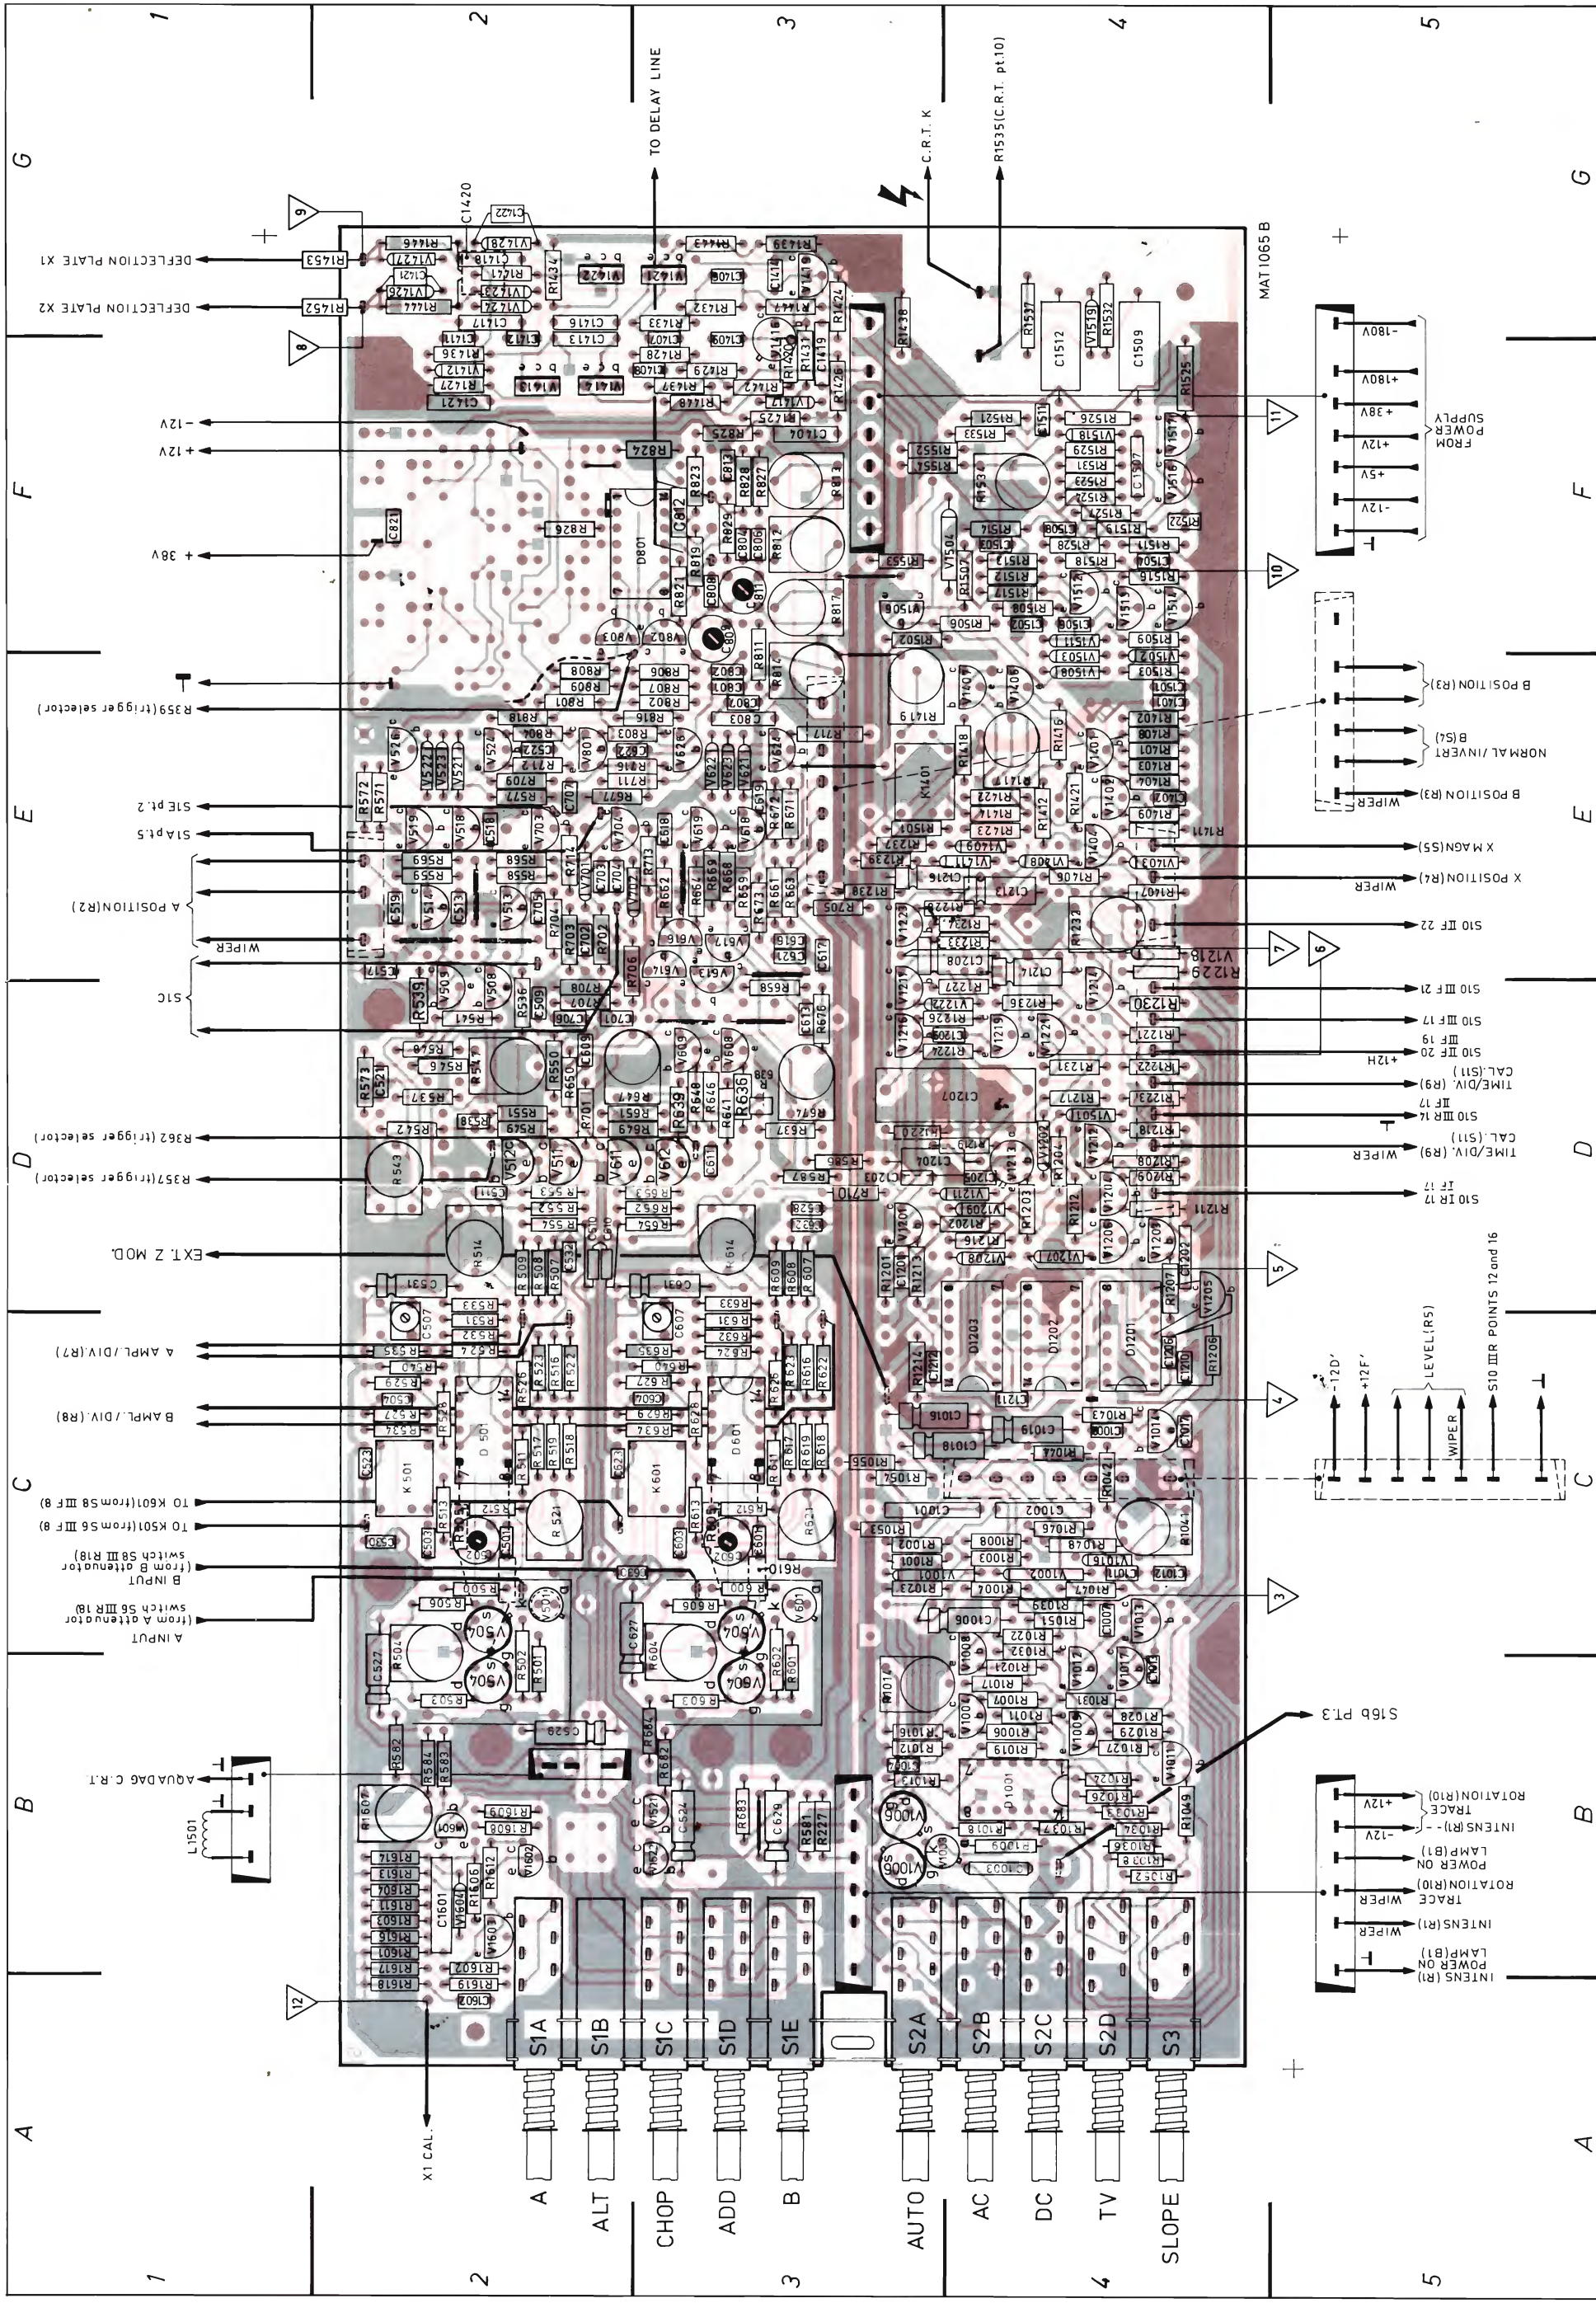



Fig. 8-4. Vertical amplifier unit with upper side tracks

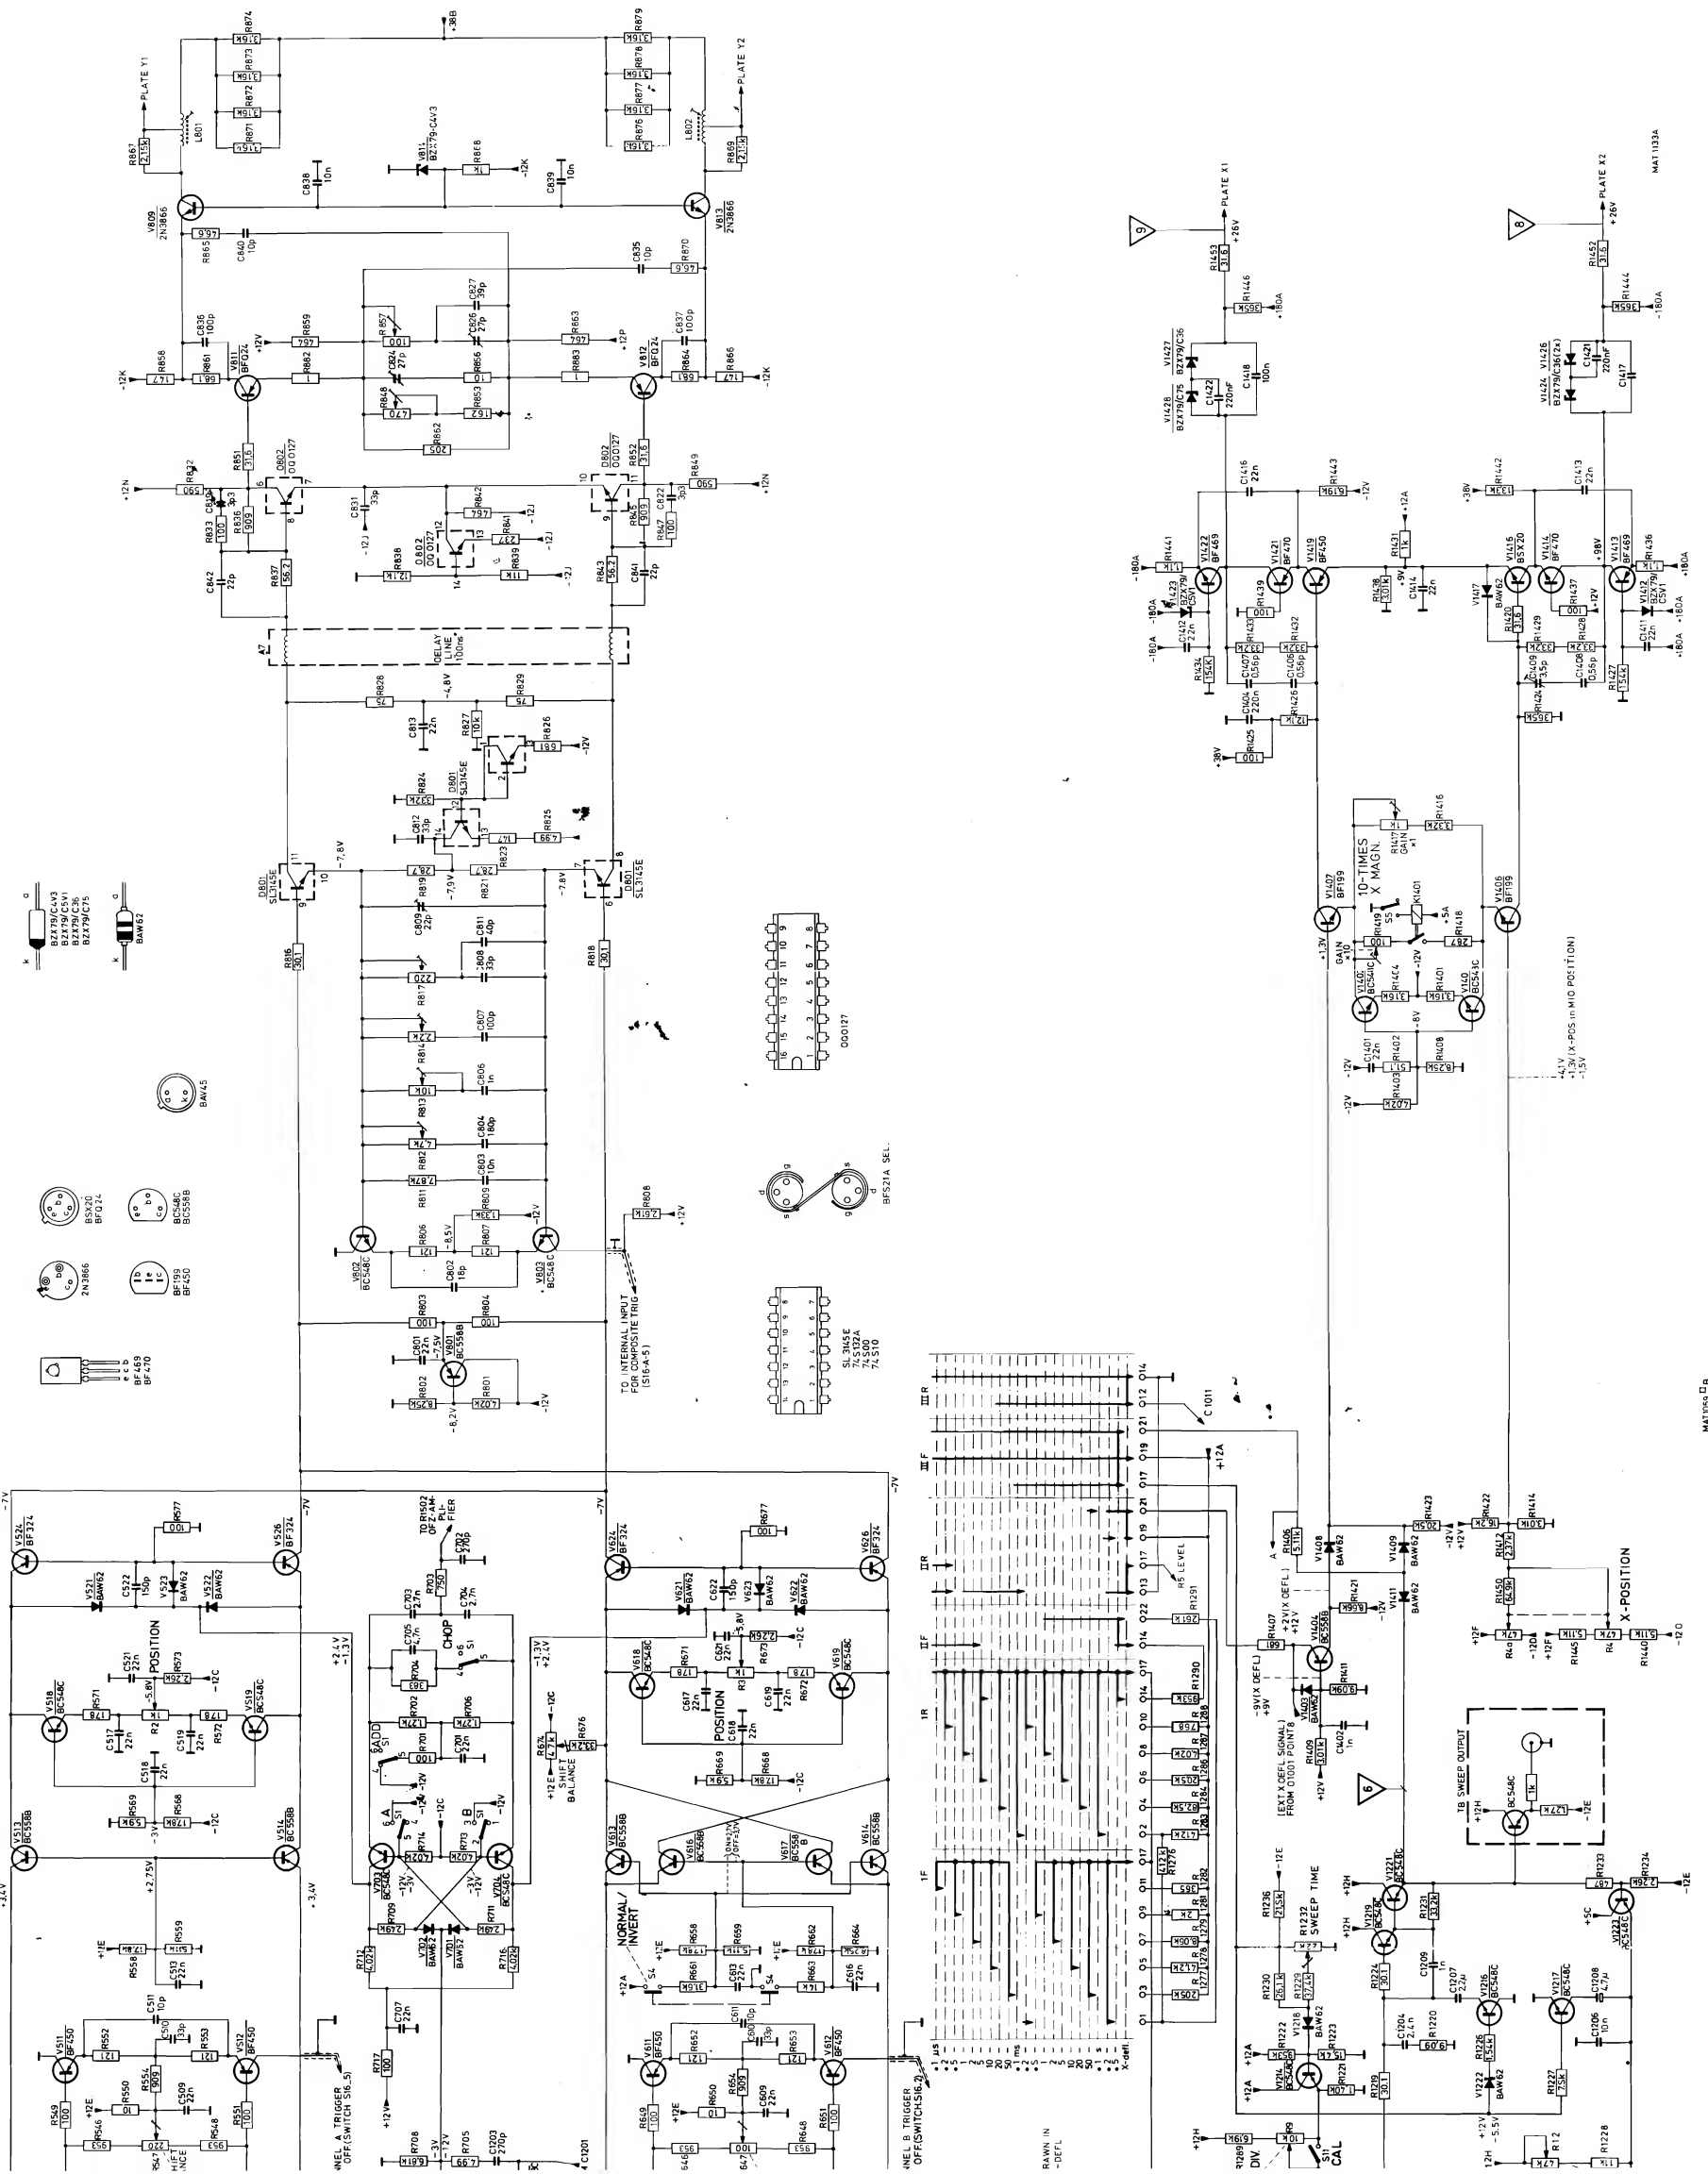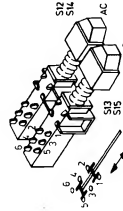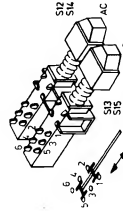

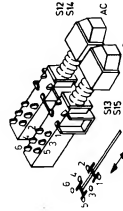

**Fig. 8.5. Circuit diagram of the complete oscilloscope**

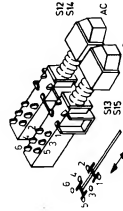

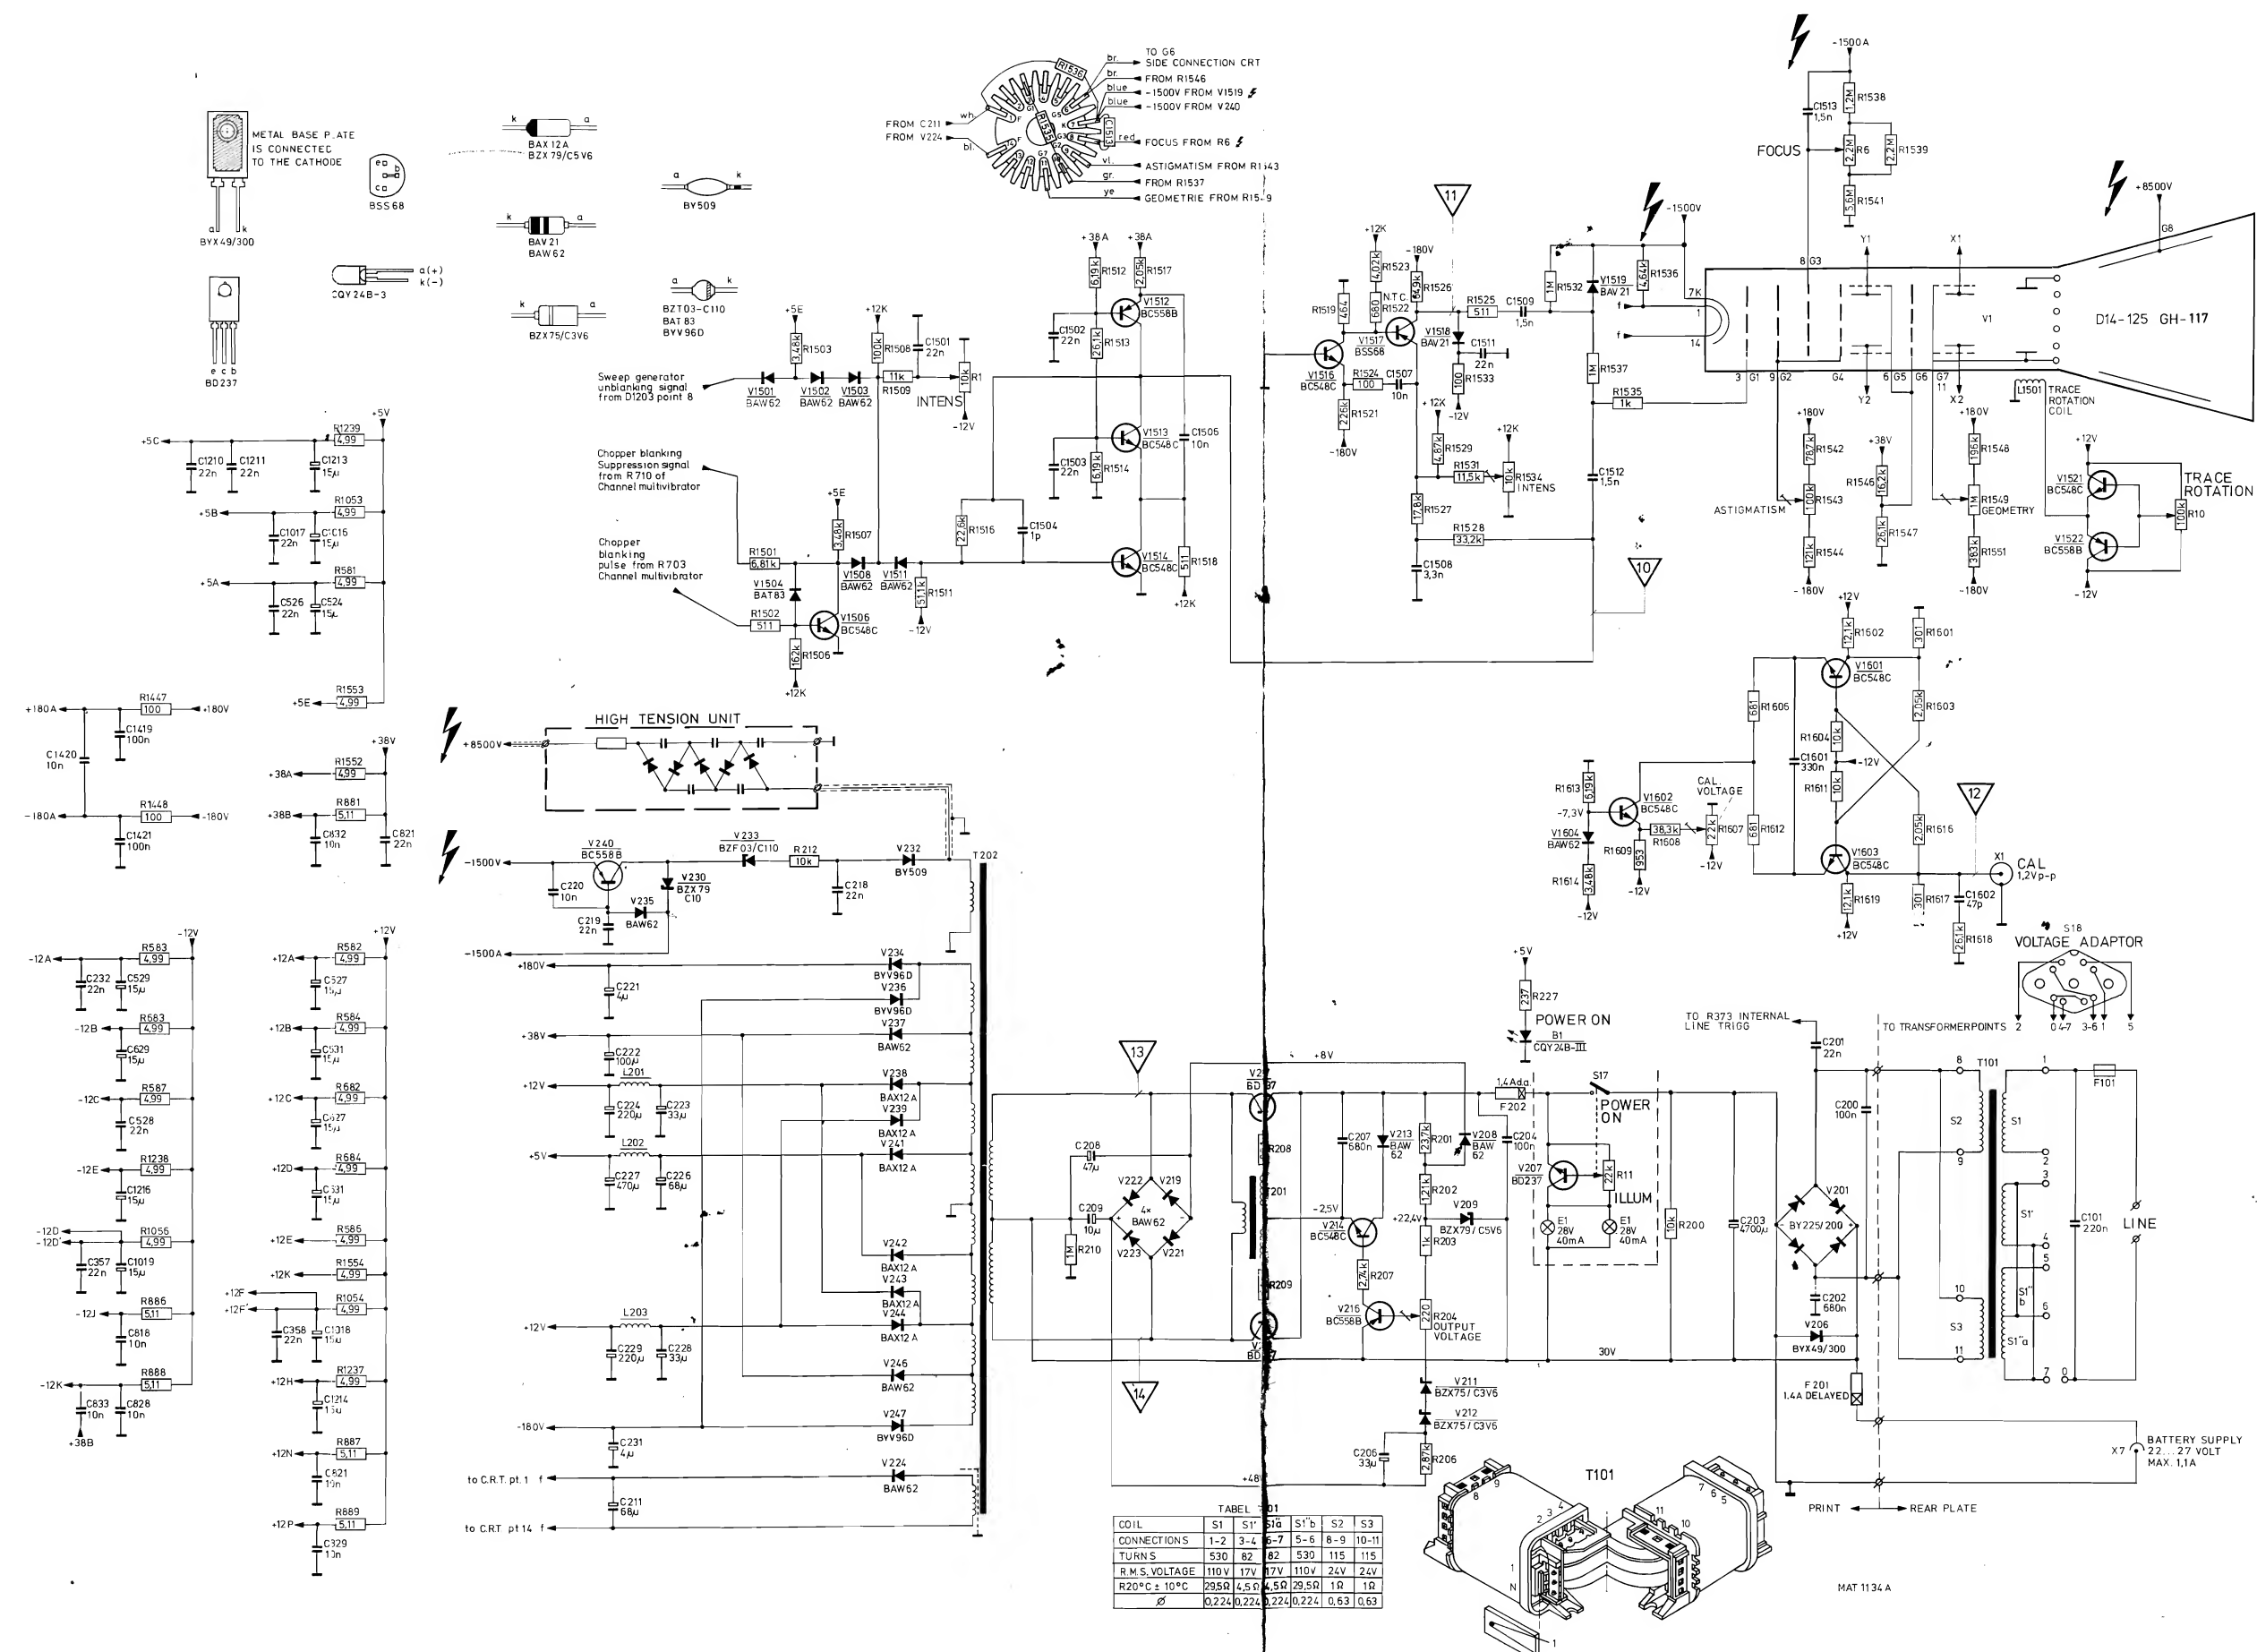

*Fig. 8-7 Circuit diagram of power supply, Z-amplifier and C.R.T. circuit*

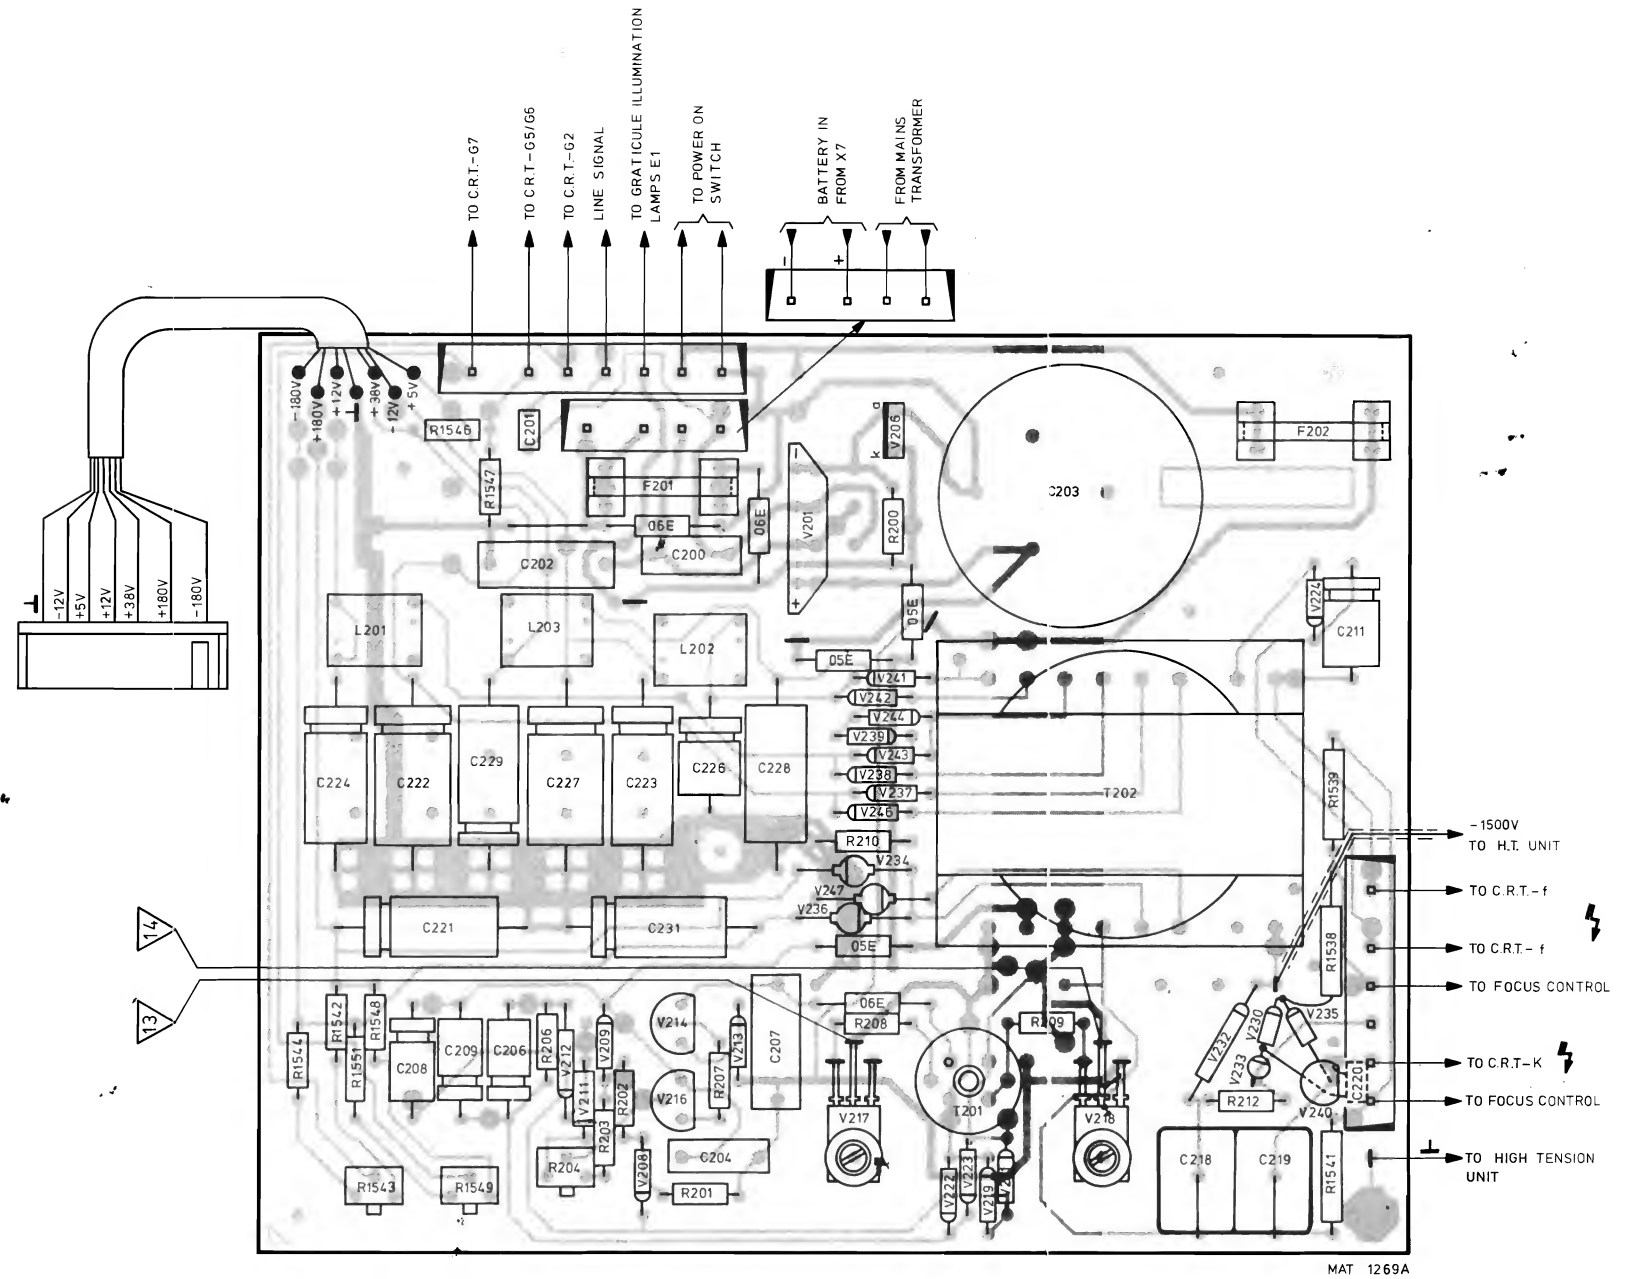


Fig. 8-6 Power supply unit

MAT 1269A



**CODING SYSTEM OF FAILURE REPORTING FOR QUALITY**  
**ASSESSMENT OF T & M INSTRUMENTS**  
(excl. potentiometric recorders)

The information contents of the coded failure description is necessary for our computerized processing of quality data.

Since the reporting of repair and maintenance routines must be complete and exact, we give you an example of a correctly filled-out PHILIPS SERVICE Job sheet.

①	②	③	④																								
<i>Country</i>	<i>Day Month Year</i>	<i>Typenumber /Version</i>	<i>Factory/Serial no.</i>																								
<table border="1" style="display: inline-table; border-collapse: collapse;"> <tr><td>3</td><td>2</td></tr> </table>	3	2	<table border="1" style="display: inline-table; border-collapse: collapse;"> <tr><td>1</td><td>5</td><td>0</td><td>4</td><td>7</td><td>5</td></tr> </table>	1	5	0	4	7	5	<table border="1" style="display: inline-table; border-collapse: collapse;"> <tr><td>0</td><td>P</td><td>M</td><td>3</td><td>2</td><td>6</td><td>0</td><td>0</td><td>2</td></tr> </table>	0	P	M	3	2	6	0	0	2	<table border="1" style="display: inline-table; border-collapse: collapse;"> <tr><td>D</td><td>O</td><td>0</td><td>0</td><td>7</td><td>8</td><td>3</td></tr> </table>	D	O	0	0	7	8	3
3	2																										
1	5	0	4	7	5																						
0	P	M	3	2	6	0	0	2																			
D	O	0	0	7	8	3																					

**CODED FAILURE DESCRIPTION**

⑤	⑥	⑦	⑧																																																																	
<i>Nature of call</i>	<i>Location</i>	<i>Component/sequence no.</i>	<i>Category</i>																																																																	
<table border="1" style="display: inline-table; border-collapse: collapse;"> <tr><td><input type="checkbox"/></td><td>Installation</td></tr> <tr><td><input type="checkbox"/></td><td>Pre sale repair</td></tr> <tr><td><input type="checkbox"/></td><td>Preventive maintenance</td></tr> <tr><td><input checked="" type="checkbox"/></td><td>Corrective maintenance</td></tr> <tr><td><input type="checkbox"/></td><td>Other</td></tr> </table>	<input type="checkbox"/>	Installation	<input type="checkbox"/>	Pre sale repair	<input type="checkbox"/>	Preventive maintenance	<input checked="" type="checkbox"/>	Corrective maintenance	<input type="checkbox"/>	Other	<table border="1" style="display: inline-table; border-collapse: collapse;"> <tr><td> </td><td> </td><td> </td><td> </td></tr> <tr><td> </td><td> </td><td> </td><td> </td></tr> <tr><td>0</td><td>0</td><td>2</td><td>1</td></tr> <tr><td> </td><td> </td><td> </td><td> </td></tr> <tr><td> </td><td> </td><td> </td><td> </td></tr> </table>									0	0	2	1									<table border="1" style="display: inline-table; border-collapse: collapse;"> <tr><td>T</td><td>S</td><td>0</td><td>6</td><td>0</td><td>7</td></tr> <tr><td>R</td><td>0</td><td>0</td><td>6</td><td>3</td><td>1</td></tr> <tr><td>9</td><td>9</td><td>0</td><td>0</td><td>0</td><td>1</td></tr> <tr><td> </td><td> </td><td> </td><td> </td><td> </td><td> </td></tr> <tr><td> </td><td> </td><td> </td><td> </td><td> </td><td> </td></tr> </table>	T	S	0	6	0	7	R	0	0	6	3	1	9	9	0	0	0	1													<table border="1" style="display: inline-table; border-collapse: collapse;"> <tr><td>5</td></tr> <tr><td>2</td></tr> <tr><td>4</td></tr> <tr><td> </td></tr> <tr><td> </td></tr> </table>	5	2	4		
<input type="checkbox"/>	Installation																																																																			
<input type="checkbox"/>	Pre sale repair																																																																			
<input type="checkbox"/>	Preventive maintenance																																																																			
<input checked="" type="checkbox"/>	Corrective maintenance																																																																			
<input type="checkbox"/>	Other																																																																			
0	0	2	1																																																																	
T	S	0	6	0	7																																																															
R	0	0	6	3	1																																																															
9	9	0	0	0	1																																																															
5																																																																				
2																																																																				
4																																																																				
		<table border="1" style="display: inline-table; border-collapse: collapse;"> <tr><td>1</td><td>2</td></tr> </table>	1	2	Hrs																																																															
1	2																																																																			

Detailed description of the information to be entered in the various boxes:

①Country: 

3	2
---	---

 = Switzerland

②Day Month Year 

1	5	0	4	7	5
---	---	---	---	---	---

 = 15 April 1975

③Type number/Version 

0	P	M	3	2	6	0	0	2
---	---	---	---	---	---	---	---	---

 = Oscilloscope PM 3260, version 02 (in later oscilloscopes this number is placed in front of the serial no)

④Factory/Serial number 

D	O	0	0	7	8	3
---	---	---	---	---	---	---

 = DO 783 These data are mentioned on the type plate of the instrument

⑤ Nature of call: Enter a cross in the relevant box

⑥ Coded failure description

*Location*

--	--	--	--

These four boxes are used to isolate the problem area.

Write the code of the part in which the fault occurs, e.g. unit no or mechanical item no of this part (refer to 'PARTS LISTS' in the manual).

Example: 0001 for Unit 1

000A for Unit A

0075 for item 75

If units are not numbered, do not fill in the four boxes; see Example Job sheet.

*Component/sequence no.*

--	--	--	--	--	--

These six boxes are intended to pinpoint the faulty component.

A. Enter the component designation as used in the circuit diagram. If the designation is alfa-numeric, the letters must be written (starting from the left) in the two left-hand boxes and the figures must be written (in such a way that the last digit occupies the right-most box) in the four right-hand boxes.

B. Parts not identified in the circuit diagram:

990000 Unknown/Not applicable

990001 Cabinet or rack (text plate, emblem, grip, rail, graticule, etc.)

990002 Knob (incl. dial knob, cap, etc.)

990003 Probe (only if attached to instrument)

990004 Leads and associated plugs

990005 Holder (valve, transistor, fuse, board, etc.)

990006 Complete unit (p.w. board, h.t. unit, etc.)

990007 Accessory (only those without type number)

990008 Documentation (manual, supplement, etc.)

990009 Foreign object

990099 Miscellaneous

*Category*

--

0 Unknown, not applicable (fault not present, intermittent or disappeared)

1 Software error

2 Readjustment

3 Electrical repair (wiring, solder joint, etc.)

4 Mechanical repair (polishing, filing, remachining, etc.)

5 Replacement (of transistor, resistor, etc.)

6 Cleaning and/or lubrication

7 Operator error

8 Missing items (on pre-sale test)

9 Environmental requirements are not met

⑦ Job completed: Enter a cross when the job has been completed.

⑧ Working time: Enter the total number of working hours spent in connection with the job (excluding travelling, waiting time, etc.), using the last box for tenths of hours.

		1	2
--	--	---	---

 = 1,2 working hours (1 h 12 min.)



# Sales and service all over the world

**Alger:** Bureau de Liaison Philips,  
24 bis, Rue Bougainville,  
El Mouradia, Alger; tel.: 213 565672

**Argentina:** Philips Argentina S.A.,  
Casilla de Correo 3479, (Central), 1430 Buenos Aires;  
tel. 54-1-5422411/5422512/5422613

**Australia:** Philips Scientific & Industrial  
Equipment Division, Centre Court,  
25 - 27 Paul Street, P.O. Box 119,  
North Ryde/NSW 2113; tel. 61-2-8888222

**Bangla Desh:** Philips Bangla Desh Ltd.,  
16/17 Kawan Bazar,  
P.O. Box 62; Ramna, Dacca; tel. 325081/5

**België/Belgique:** Philips & MBLE associated S.A.,  
Scientific and Industrial Equipment Division,  
80 Rue des Deux Gares, 1070 Bruxelles  
tel. 32-2-5230000

**Bolivia:** Industrias Bolivianas Philips S.A.,  
Calle Loayza 217,  
Cajón Postal 2964, La Paz;  
tel.: 341453/350029

**Brasil:** Philips do Brasil Ltda,  
Avenida 9 de Julho 5229, Caixa Postal 8681,  
CEP 01407 - São Paulo (S.P.);  
tel. 55-11-2821611  
**Service Centre:**  
Sistemas Profissionais  
Rua Amador Bueno, 474,  
Caixa Postal 3159 - S. Amaro,  
CEP 04752 - São Amaro (S.P.);  
tel. 55-11-2476522

**Canada:** Philips Electronics Ltd.  
601 Milner Avenue  
Scarborough (Ontario) M1B 1M8  
tel. 1-416 2925161

**Chile:** Philips Chilena S.A.,  
Division Professional, Avda. Santa Maria 0760,  
Casilla Postal 2687, Santiago de Chile, tel. 770038

**Colombia:** Industrias Philips de Colombia S.A.,  
Calle 13 no. 51-39, Apartado Aereo 4282,  
Bogota, tel. 2600600

**Danmark:** Philips Elektronik Systemer A/S,  
Afd. for Industri og Forskning, Strandlodsvej 4,  
P.O. Box 1919, 2300 København S;  
tel. 45-1-572222

**Deutschland (Bundesrepublik):** Philips GmbH,  
Unternehmensbereich Elektronik für  
Wissenschaft und Industrie, Miramstrasse 87,  
Postfach 310 320, 3500 Kassel-Bettenhausen;  
tel. 49-561 5010

**Ecuador:** Philips Ecuador C.A.,  
Casilla 4607, Guayaquil; tel. 593-4-396100/397294 (comm.)  
Casilla 343, Quito; tel. 593-2-239080 (service)

**Egypt:** Resident Delegate Office Philips Industries,  
5 Sherif el Saghir Street, Corner Eloul, P.O. Box 1687, Cairo;  
tel. 20-2-754118/772459/775477

**Eire:** Philips Electrical (Ireland) Ltd.,  
Newstead, Glonskeagh, Dublin 14; tel. 353-1-693355

**España:** Philips Ibérica S.A.E.,  
Dpto Aparatos de Medida, Martinez Villergas 2,  
Apartado 2065, Madrid 27;  
tel. 34-1-4042200/4043200/4044200  
**Service Centre:**  
Dpto Tco. de Instrumentación,  
Calle de Albasanz 75, Madrid 17;  
tel. 34-1-2045940/2047025/2047105

**Ethiopia:** Philips Ethiopia (Priv. Ltd. Co.),  
Ras Abebe Areguay Avenue,  
P.O.B. 2563,  
Addis Ababa; tel. 448300

**Finland:** See Suomi

**France:** S.A. Philips Industrielle et Commerciale,  
Science et Industrie,  
105 Rue de Paris, B.P. 62, 93 002 Bobigny Cedex  
tel. 33-1-8301111

**Greece:** See Hellas

**Hellas:** Philips S.A. Hellénique,  
54 Avenue Syngrou, P.O. Box 3153,  
10210 Athens; tel. 30-1-9215311

**Hong Kong:** Philips Hong Kong Ltd.,  
29/F Hopewell Centre,  
17, Kennedy Road, G.P.O. Box 2108,  
Hong Kong;  
tel. 852-5 283298

**India:** Peico Electronics & Electricals Ltd.,  
S&I Equipment, Shivsagar Estate,  
Block "A", Dr. Annie Besant Road,  
P.O.B. 6598, Worli, Bombay 400 018 (WB);  
tel. 91-22-391431/897671

**Indonesia:** P.T. Philips Development Corporation,  
Department for Science and Industry Wisma PeOe,  
Jalan Let. Jen. M.T. Haryono Kav. 17,  
P.O.B. 2287, Jakarta tel. 62-21-820808

**Iran:** Philips Iran Ltd., P.O.B. 1297, Teheran;  
tel. 98-21 674138/675158

**Iraq:** Philips Midden Oosten B.V., Baghdad branch,  
Munir Abbas Building,  
4th floor, South Gate, P.O. box 5749, Baghdad;  
tel. 880409

**Island:** Heimilsteaki SF, Sættún 8, Reykjavík;  
tel. 24000

**Islas Canarias:** Philips Ibérica S.A.E.,  
Triana 132, Las Palmas, Casilla 39-41,  
Santa Cruz de Tenerife

**Italia:** Philips S.p.A., Sezione S&I/T&M,  
Viale Elvezia 2, 20052 Monza (MI); tel. 39-39-36351

**Japan:** See Nippon

**Jordan:** See Syria

**Kenya:** Philips (Kenya) Ltd.,  
01 Kalou Road, Industrial Area,  
P.O.B. 30554, Nairobi; tel. 254-2-557999

**Kuwait:** Delegate Office of Philips Industries,  
P.O. Box 3801, Safat, Kuwait, tel. 428678

**Lebanon:** Philips Middle East S.A.R.L.,  
P.O. Box 11-670, Beyrouth; tel. 392320/392321

**Malaysia:** Philips Malaysia Snd Bhd.,  
Professional Division,  
Lot 2, Jalan 222, Section 14,  
P.O. Box 12163, Petaling Jaya,  
Selangor; tel. 60-3-562144

**México:** Philips Mexicana S.A. de C.V.,  
Div. Científico Industrial, Col. Roma, Durango 167,  
Apartado Postal 24-328, Mexico 7 (D.F.);  
tel. 52-5-5251540

**Morocco:** S.A.M.T.E.L., 304 Boulevard Mohammed V,  
B.P. 10896, Bandoeng, Casablanca 05,  
tel. 212-302992/303192/303050/308051

**Nederland:** Philips Nederland,  
Hoofdgroep PPS, Boschdijk 525, Gebouw VB,  
5600 PD Eindhoven, tel. 31-40-793333

**Ned. Antillen:** Philips Antillana N.V.,  
Postbus 3523, Willemstad, Curaçao;  
tel. 599-9-615277/612799

**New Zealand:** Philips Electrical Industries of N.Z. Ltd.,  
Scientific and Industrial Equipment Division,  
68-86 Jervois Quay, G.P.O. Box 2097,  
Wellington; tel. 64-4-735735

**Nigeria:** Associated Electronic Products (Nigeria) Ltd.,  
KM16, Ikorodu Road, Ojota, P.O.B. 1921, Lagos;  
tel. 234-1-9C 160/69

**Nippon:** MF Trading Co. Ltd.,  
Kirimino Bldg. 11-2,  
Tsunashima Higashi 1 - Chome, Kohoku-ku,  
Yokohama

**Norge:** Norsk A.S. Philips,  
Dept. Industry and Telecommunication, Sandstuveien 70,  
Postboks 1, Manglerud, Oslo 6; tel. 47-2-680200

**Oesterreich:** Oesterreichische Philips Industrie GmbH,  
Abteilung Industrie Elektronik,  
Trinsterstrasse 64, A1100 Wien;  
tel. 43-222-645521/629141

**Pakistan:** Philips Electrical Co. of Pakistan Ltd.,  
El-Markz, M.A. Jinnah Road, P.O.B. 7101,  
Karachi 3; tel. 92-21-525171

**Paraguay:** Philips del Paraguay S.A.,  
Av. Artigas 1519,  
Casilla de Correo 605, Asunción;  
tel. 595-21-291924/291934

**Perú:** Philips Peruana S.A.,  
Av. Alfonso Ugarte 1268, Lima 5,  
Apartado Aereo 1841, Lima 100; tel. 51-14-326070

**Philippines:** Philips Industrial Development Inc.,  
2246 Pasong Tamo, P.O.S. M.C.C. 911,  
Makati, Metro Manila; tel. 63-2-868951/868959

**Portugal:** Philips Portuguesa S.A.R.L.,  
1009 Lisboa Codex, Av. Eng. Duarte Pacheco 6, 1000 Lisboa;  
tel. 351-1-683121/9  
**Service Centre:**  
Servicos Técnicos Profissionais, Outurela/Carnaxide,  
2795 Linda-a-Velha, tel. 351-1-2180071

**Saudi Arabia:** Delegate Office of Philips Industries,  
Sabreen Bldg., Airport Road, P.O. Box 9844,  
Riyadh; tel. 966-1-4777808/4778463/4778216/4778335

**Schweiz/Suisse/Svizzera:** Philips A.G.,  
Allmendstrasse 140, Postfach 670, CH-8027 Zürich;  
tel. 41-1-4882211/4882629

**Singapore:** Philips Singapore Private Ltd.,  
Lorong 1, Tao Payoh, 1st floor,  
P.O. Box 340, Toa Payoh Central Post Office,  
Singapore 9131; tel. 65-2538811

**South Africa:** South African Philips (Pty) Ltd.,  
2 Herb Street, New Doornfontein, P.O.B. 7703,  
Johannesburg 2000; tel. 27-11-6140411

**South-Korea:** Philips Electronics (Korea) Ltd.,  
G.P.O. Box 3680, Seoul; tel. 794 5011/5

**Suomi:** Oy Philips AB.,  
Kaivokatu 8,  
P.O. Box 255,  
SF-00101 Helsinki 10; tel. 358-0-17271  
**Service Centre:**  
Sinikalliontie 1-3,  
P.O. Box 11, SF-02631 Espoo 63;  
tel. 358-0-523122

**Sverige:** Philips Försäljning AB,  
Div. Industrietelektronik, Tegelluddsvägen 1,  
Fack, S11584 Stockholm; tel. 46-8-7821000

**Syria:** Philips Moyen-Orient S.A.R.L., Rue Fardoss 79,  
Immeuble Kassas and Sadate, B.P. 2442, Damas,  
tel. 221650/218605/228003/221025

**Taiwan:** Philips Taiwan Ltd.,  
San Min Building, 57-1 Chung Shan North Rd., Sec 2,  
P.O. Box 22978, Taipei;  
tel. 886-2-5631717

**Tanzania:** Philips (Tanzania) Ltd.,  
T.D.F.L. Building (1st floor), Okio/Upanga Road  
P.O. Box. 20104, Dar es Salaam; tel. 29571/4

**Thailand:** Philips Electrical Co. of Thailand Ltd.,  
283 Silom Road, P.O. Box 961, Bangkok 10500;  
tel. 66-2-2336330.9/2355665.8

**Tunisia:** S.T.I.E.T., 32 bis, Rue Ben Ghedhahem,  
Tunis; tel. 216-1-248666

**Türkiye:** Türk Philips Ticaret A.S.,  
İnönü Caddesi 78/80  
Posta Kutusu 504, Beyoglu,  
İstanbul 1; tel. 90-1-1435910

**United Arab Emirates:** Philips Middle East B.V.,  
Dubai International Trade Centre, Level 11,  
P.O. Box 2969, Dubai; tel. 475267

**United Kingdom:** Pye Unicam Ltd., York Street,  
Cambridge CB1-2PX; tel. 44-223-358866

**Uruguay:** Industrias Philips del Uruguay S.A.,  
Avda Uruguay 1287, Casilla de Correo 294,  
Montevideo; tel. 9156412/3/4-919009-282808-282809-282811

**U.S.A.:**  
Philips Test and Measuring Instruments Inc.,  
California, Garden Grove 92645  
12882 Valley View Street, Suite 9;  
tel.: (213) 594-8741/(714) 898-5000  
California, Milpitas 95035  
489 Valley Way;  
tel. (408) 946-6722  
Florida, Winter Park 32789  
1850 Lee Road, Suite 229;  
tel. (305) 628-1717  
Georgia, Norcross 30071  
7094 Peachtree Industrial Blvd., Suite 220;  
tel. (404) 586-0238  
Illinois, Itasca 60143  
500 Park Blvd., Suite 1170;  
tel. (312) 773-0616  
Massachusetts, Woburn 01801  
21 Olympia Avenue;  
tel. (617) 935-3972  
Minnesota, Minneapolis 55420  
7801 Metro Parkway, Suite 109;  
tel. (612) 854-2426  
New Jersey, Mahwah 07430  
85 McKee Drive;  
tel. 1-201-5293800, Toll-free 800-6317172

**Venezuela:** Industrias Venezolanas Philips S.A.,  
Av. Diego Cisneros, Edificio Centro Colgate  
Apartado Aereo 1167, Caracas 1010-A;  
tel. 58-2-2393811/2392222/2393933

**Zaire:** S.A.M.E./s.a.r.l., 137, Boulevard du 30 juin,  
B.P. 16636, Kinshasa;  
tel. 31887-31888-31921-32108

**Zambia:** Philips Electrical Zambia Ltd.,  
Mweneshi Road, P.O.B. 31878, Lusaka;  
tel. 218511/218701

**Zimbabwe:** Philips Electrical (Pvt) Ltd.,  
62 Mutare Road, P.O. Box 994, Harare;  
tel. 47211/48031

For information on change of address:

Philips Export B.V.,  
Scientific and Industrial Equipment Division,  
Test and Measuring Instruments, Building TQ III-4, P.O. Box 218,  
5600 MD Eindhoven - The Netherlands  
Tel. 31-40-784506

For countries not listed here:

Philips Export B.V., S&I Export,  
Test and Measuring Instruments, Building TQIII-3, P.O. Box 218,  
5600 MD Eindhoven - The Netherlands,  
Tel. 31-40-784650